

# SereneLife™

**MULTI-FUNCTION  
SOUND SYSTEM**  
Model No.:SLBSP10



RECHARGEABLE

SUBWOOFER

AUX-IN

 
FM RADIO

TF

USB

## DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

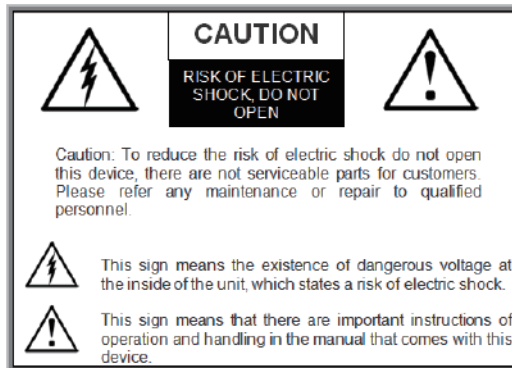

## Note

 
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

## Packing list

Upon opening the package, please check for the following items:

- 1 x Speaker
- 1 x USB charging cable
- 1 x Audio cable
- 1 x Instruction manual
- 1 x strap

## Product overview

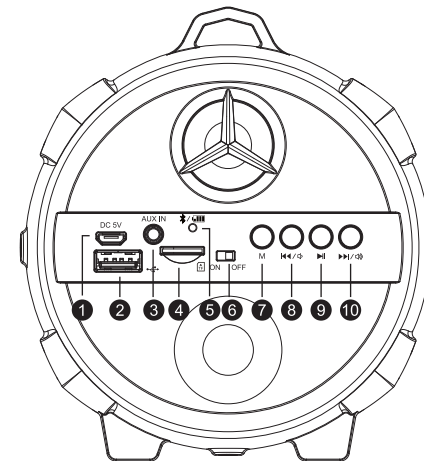

1. DC input
2. USB Slot
3. AUX-IN Slot
4. TF/MicroSD Card Slott
5. BT Indicator/Aux-in Indicator/Battery Indicator
6. Power ON/OFF Switch
7. Mode Button (Switch BT, USB disk, Micro TF, FM and Aux-in state)
8. Pevious track/ Volume Down Button
9. Play/Pause
10. Next track/Volume Up Button

## Charging

There are two ways to charge the speaker

1. Plug the charging cable into speaker and connect to another USB-C power source like PC/MAC, etc.
2. Use the AC adapter to charge.  
Please turn off the speaker when charging.

## Indicator Status

Type	Indicator	State
BT indicator	Rapid flashing blue	Ready to link
	Steady-on blue	Linked
	Red	AUX-in mode
Battery indicator	Red light normally on	Charging
	Red light off	Fully charged

## Features

USB, TF, AUX-IN, Blue-connect, rechargeable battery, Volume+/-, Play/Pause, Previous/Next track

## Connecting

### BT connection

Slide power key to ON position

The speaker BT-connect indicator will flash in blue

Search the BT device on your cellphone, select "SERENE LIFE" in the list BT indicator will stop flashing after the speaker is linked to the cellphone.

## Connect to audio from the cellphone/Pad/Computer/ Notebook/DVD/CD etc.

Plug one end of the audio cable into the speaker and the other end into a cellphone or other audio device.

## FM Radio

Press the " M " button to enter FM, the BT indicator will flash blue slowly.

Press Play/Pause button to start channel auto searching, the BT indicator will flash blue rapidly. Press Play/Pause button again to pause searching, the BT indicator will flash blue slowly.

Press " M " button again to exit FM radio, the BT indicator will flash blue rapidly and BT is ready to pair.

Under playing mode, short press: "Play/pause" button to auto search the FM Channel and store it automatically.

Press Previous or Next button to change the stored FM channel.

## FAQ:

- Unable to turn on the speaker  
Make sure the battery is full and the battery indicator light is on.
- Unable to connect to BT-enabled device  
Make sure that the device is in BT mode, and is within 10 meters from the speaker.  
Ensure that neither the speaker nor the device is blue-connected to any other devices.
- No sound heard  
The volume is at its lowers, please turn up the volume.
- Button doesn't work  
Please press button longer
- The speaker has no response  
Please power off and try again.

## Specification

Power output: 5W

Input: DC 5V

Drivers: 3"Full Range +1 inch

Battery Capacity: 1000mAh

Transmission Distance: 10m

Dimension: (WxHxD):136 x 136 x 250 mm