

## IMPORTANT SAFEGUARDS

Basic safety precautions should be followed when using the coffee maker to reduce the risk of fire, electric shock, and/or injury to people.

- 1 READ ALL INSTRUCTIONS.
- 2 Do not touch hot surfaces. Use handles or knobs when available.
- 3 To protect against fire, electrical shock, or injury to persons DO NOT immerse the cord, plug, or coffee maker in water or other liquid.
- 4 Close supervision is necessary when any coffee maker is used by or near children.
- 5 Unplug from the outlet when not in use and before cleaning.
  - Allow to cool before putting on or taking off parts and before cleaning the coffee maker.
- 6 Do not operate the coffee maker with a damaged cord or plug, or after it malfunctions or has been damaged in any manner. Return the coffee maker to the nearest authorized service facility for examination, repair, or adjustment.
- 7 The use of accessory attachments not recommended by the coffee maker's manufacturer may result in fire, electric shock, or injury to persons.
- 8 Do not use outdoors.
- 9 Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- 10 Do not place on or near a hot gas or electric burner, or in a heated oven.
- 11 Let the coffee maker cool completely before moving it.
- 12 Do not use the coffee maker for anything other than its intended use.
- 13 To disconnect, turn OFF, then remove the plug from the wall outlet.
- 14 The glass carafe is designed for use with this coffee maker. Never use it on a range top. Do not set a hot carafe on a wet or cold surface. Do not use the carafe if it is cracked or has a loose or weakened handle. Do not clean the carafe with cleansers, steel wool pads, or other abrasive materials. Do not place it in a microwave oven.
- 15 The lid on the glass carafe must be closed for brewing.
- 16 Fill the water reservoir of this coffee maker with water only. Do not fill with other liquids or foods.
- 17 Do not remove the filter basket during or immediately after the brewing cycle. Scalding water or steam could cause serious injury.

Before using your new product, please read these instructions to prevent any damage.

## SAVE THESE INSTRUCTIONS

### POWER CORD SAFETY TIPS

DO NOT OPERATE THE COFFEE MAKER IF THE POWER CORD APPEARS TO BE DAMAGED, OR IF THE COFFEE MAKER WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

- A short power cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in their use. If an extension cord is used:
  - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the coffee maker.
  - The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Never pull or yank on the cord or the coffee maker.
- To insert the plug, grasp it firmly and guide it into the outlet.
- To disconnect the coffee maker, grasp the plug and remove it from the outlet. Do not pull on the cord.
- Before each use, inspect the cord for cuts and abrasion marks. If any are found, the coffee maker should be serviced and the cord replaced.
- Never wrap the cord tightly around the coffee maker, as this could stress the cord where it enters the coffee maker and cause it to fray and break.

### POLARIZED PLUG

This coffee maker has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### PACKAGE CONTENTS

- Coffee maker (including the carafe and filter basket)
- *Quick Setup Guide*

## FEATURES

- Pause and serve feature
- Pull-out brew basket
- Full view water window
- Illuminated power switch



**Note:** Household Use Only

## BREWING COFFEE

**First use:** Clean your coffee maker before the first use. See “Cleaning your coffee maker” for instructions. You may notice smoke or a slight odor. This is normal and will not happen after a few uses.

- 1 Fill the carafe with cool water, then pour it into the water reservoir. Do not fill the water reservoir above the MAX fill line.
- 2 Place a paper filter in the filter basket.
- 3 Add the manufacturer’s recommended amount of coffee for the amount of water you added, increasing or decreasing it depending on your personal taste.
- 4 Plug the power cord into a power outlet.
- 5 Push the power switch to the **ON** position. The switch lights red and the brew cycle starts.

### Pausing to serve

If the carafe is removed from the warming plate while coffee is brewing, the brewed coffee will not flow until the carafe is placed back on the warming plate. Allow the carafe to fill with at least one or two cups of coffee before removing.

### Keeping your coffee warm

After the brew cycle is done, the warming plate stays hot to keep your coffee warm. There is no automatic off setting. Push the power switch to the **OFF** position when the carafe is empty.

**Caution:** Leaving the coffee maker on for extended periods could damage the carafe and the coffee maker, and could cause a fire hazard.

### Brewing a second pot

Turn off the coffee maker, then allow it to cool for ten minutes before brewing a second pot of coffee.

## CLEANING YOUR COFFEE MAKER

**Caution:** Never use harsh chemicals or abrasive cleaning pads. Do not immerse your coffee maker in water (or other liquids) or place it under running water.

### Routine cleaning:

- 1 If necessary, remove the paper filter and coffee grounds.
- 2 Insert the filter basket.
- 3 Fill the carafe to the MAX fill line with cool water, pour it into the water reservoir, then place the carafe on the warming plate.
- 4 Plug the power cord into a power outlet.
- 5 Push to power switch to the ON position. The power switch lights red and the brew cycle starts.
- 6 When the brew cycle is done, turn off your coffee maker, then unplug it and empty the carafe.
- 7 Wipe the outside of your coffee maker with a damp cloth.
- 8 Remove the filter basket and carafe, then wash them in warm, soapy water.

### For a more thorough cleaning:

- 1 Pour one cup of white vinegar into the carafe, add cool water to the MAX fill line, then pour the mixture into the water reservoir.
- 2 Place the carafe onto the warming plate.
- 3 Place a new paper filter into the filter basket, then insert the filter basket.
- 4 Plug the power cord into a power outlet.
- 5 Push the power switch to the ON position. The switch lights red and the brew cycle starts.
- 6 Let the coffee maker brew until the carafe is half full, then push the power switch to the OFF position.
- 7 Remove the carafe and let it cool for 15 minutes.
- 8 Pour the liquid back into the water reservoir, place the carafe on the warming plate, then turn the coffee maker on again.
- 9 When the coffee maker is done brewing, turn it off and discard the liquid in the carafe and rinse thoroughly.
- 10 Let the coffee maker cool for 10 minutes, then run water through your coffee maker to remove any leftover vinegar.

## SPECIFICATIONS

- Dimensions: 12.4 × 11.5 × 6.6 in  
(31.6 × 29.1 × 16.7 cm)
- Voltage: 120V AC
- Wattage: 900W

## 90-DAY LIMITED WARRANTY

### CONTACT US:

For customer service, e-mail  
[customerservice@BBYexclusivebrands.com](mailto:customerservice@BBYexclusivebrands.com)

Distributed by Best Buy Purchasing, LLC  
7601 Penn Ave South, Richfield, MN 55423 U.S.A.  
©2014 Best Buy. All rights reserved.  
Made in China