 


## PACKAGE CONTENTS

- CD boombox
- AC power cord
- Quick Setup Guide

## FEATURES

 
### Top

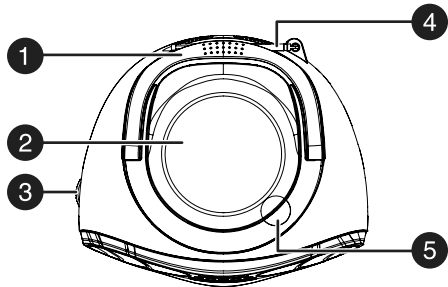

1	Handle
2	CD door
3	Volume control

4	FM antenna
5	CD door open


### Back

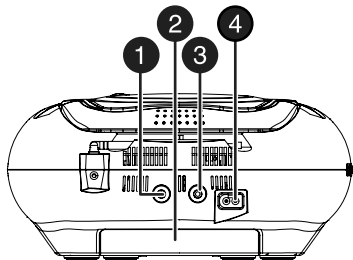

1	AUX IN jack
2	Battery compartment

3	Headphone jack
4	AC input

### Front

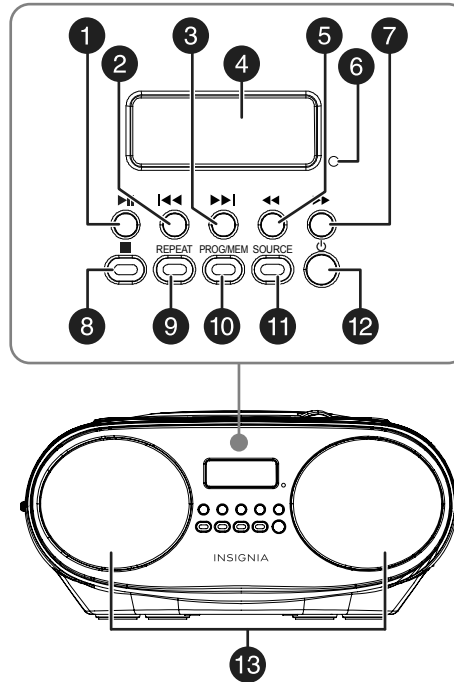 

#	Item	CD Function	AM/FM Function
1	▶	Pause/Play	Auto scan
2	◀◀	Previous	Previous
3	▶▶	Next	Next
4	LCD screen	Displays source and audio information	
5	◀◀	Rewind	Tune down
6	LED	Lights red when in Standby mode	
7	▶▶	Fast-forward	Tune up
8	■	Stop	N/A
9	REPEAT	Repeat	N/A
10	PROG/MEM	Program	Station storage
11	SOURCE	Source	Source
12	⏻	Standby/On	Standby/On
13	Speakers	Plays audio from your boombox	

## IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 Ventilation: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 16 The power plug is used as the disconnect device and should remain readily accessible during the device's intended use. To completely disconnect the device from power, you should disconnect the power plug from the AC power outlet.
- 17 The battery should not be exposed to excessive heat, such as direct sunlight, fire, or the like.
- 18 Cautions and other markings are located at the bottom of the apparatus.
- 19 The marking information is located at the bottom of apparatus.
- 20 No naked flame sources, such as lighted candles, should be placed on the apparatus.



**Caution:** The use of any controls, adjustments, or procedures other than those specified herein may result in hazardous radiation exposure.

### Safety information

**Warning:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

### Class II equipment symbol

This symbol indicates that the unit has a double insulation system.



<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to people.</p>	<p><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p><b>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
---	---	---

## SETTING UP YOUR CD PLAYER

### Connecting AC power

**Note:** Batteries are not needed when connecting to AC power.

- 1 Connect the AC power cord (included) to the AC input socket on the CD player.
- 2 Plug the cord into a standard AC wall out.

### Installing batteries

- 1 Insert eight C alkaline batteries (not included) into the battery compartment as indicated on the diagram in the compartment.
- 2 Securely close the battery compartment cover.

#### Notes:

- Battery power is used only when AC power is disconnected.
- Replace all batteries at the same time with the same battery type. Do not mix battery types.
- When the CD player is stored unused for a long time, remove the batteries to prevent damage.

## USING YOUR CD PLAYER

**Warning:** Use of any controls, adjustments, or procedures other than those specified may result in hazardous radiation exposure.

### Using the FM/AM Radio

- 1 Press **SOURCE** repeatedly to select the **FM/AM** function. "FM/AM" appears in the upper-right of the LCD screen.
- 2 Find the station you want to listen to:

- Press **◀▶** repeatedly to tune to a station manually.
- Press **◀◀ / ▶▶** to select saved (preset) stations.

**Note:** To save the current station to memory. Press **PROG/MEM**, then press **◀◀ / ▶▶** to select a preset number you want to save, and then press **PROG/MEM** again to complete the process. If you press **PROG/MEM** after three seconds without pressing **PROG/MEM** again, station storage mode is cancelled.

- Press and hold **▶▶** for two seconds to automatically scan and store stations. Each station found during the scan will be saved to memory from the lowest to the highest frequencies.
- For optimum FM reception, make sure that the FM (telescopic) antenna is fully extended and vertical.
- For optimum AM reception, rotate the CD player to orient its built-in antenna until you get the strongest signal.

### Using the CD player

The CD player can play standard audio CDs and audio CDs created on a computer's CD-R/CD-RW drive.

- 1 Push **SOURCE** to select **CD** function. **---** appears on the LCD screen.
- 2 Lift the CD door and insert a CD with the label facing up. Mount the CD on the spindle and push down to lock it in place.
- 3 Close the CD door. After a few seconds, the display shows the total number of tracks on the CD. If the disc is not correctly inserted or is defective, the display shows **⏏** .

Playback begins automatically.

## Controlling CD playback

<b>To play the CD</b>	Press <b>▶▶</b> . The current track number is shown on the display.
<b>To pause playback</b>	Press <b>▶▶</b> . The play indicator flashes on the display. Press <b>▶▶</b> again to resume playback.
<b>To stop playback</b>	Press <b>■</b> . The display shows the total number of tracks on the CD.
<b>To skip tracks</b>	Press <b>◀◀</b> or <b>▶▶</b> .
<b>To repeat tracks</b>	Press <b>REPEAT</b> to repeat the current track. "1" appears in the upper-right of the LCD screen. Press <b>REPEAT</b> twice to repeat the entire disc (continuous play). <b>⏏</b> appears in upper-right of the LCD screen. Press <b>REPEAT</b> a third time to return to normal play.
<b>To play tracks in programmed order</b>	<ol style="list-style-type: none"><li>1 Press <b>■</b>, then press <b>PROG/MEM</b> "prog" appears in the upper-middle of the screen. "P01" (the track number in programmed order) flashes for two seconds, followed by "01" (Track number in the disc order). Press <b>◀◀ / ▶▶</b> to choose another track, then press <b>PROG/MEM</b> again to confirm. "P02" flashes for two seconds, followed by "01". Repeat the operation to confirm the second track in programmed order. After you have selected the tracks you want, press <b>▶▶</b> to start playing in programmed order.</li><li>2 Press <b>■</b> to stop playback. Press <b>■</b> stop again to exit. "Prog" disappears from the upper-middle of LCD screen.</li></ol>

## Listening to an external audio source

 
- 1 Connect the external audio device to the **AUX IN** jack on the back panel of your CD player using a 3.5 mm cable (not included).
- 2 Press **SOURCE** to select the **AUX** function. "AUX" appears in the upper-right of the LCD screen.
- 3 Start playing music from your external audio device. Audio plays through your CD player's speakers.
- 4 Use your external audio source to control playback.  
**Note:** Make sure your audio device is not muted and the volume is turned up to an adequate level.

## MAINTAINING YOUR CDS

- Handle CDs only by their edges. Never allow your fingers to contact the reflective, unprinted side of the CD.
- Do not attach things such as adhesive tape and stickers to your audio CDs.
- Periodically clean your CDs with a soft, lint-free, dry cloth. Never use detergents or adhesive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If the CD skips or gets stuck on a section of the disc, it is probably dirty or damaged (scratched).
- When cleaning CDs, wipe in straight lines from the center of the CD to the outside edge. Never wipe in circular motions.

## SPECIFICATIONS

<b>Power</b>	AC: AC120V ~ 60Hz 10W Batteries: DC 12V (8 C batteries)
<b>Radio frequency coverage</b>	FM: 87.5~107.9 MHz AM: 520~1710 KHz
<b>GENERAL CD PLAYER</b>	Speaker: 2 × 8 ohms Pick Up: 3-beam, semiconductor laser, 1-bit DA converter Encoding: 8-time oversampling



## LEGAL NOTICES

### FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

### FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

## ONE-YEAR LIMITED WARRANTY

Visit [www.insigniaproducts.com](http://www.insigniaproducts.com) for details.

## CONTACT INSIGNIA

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)  
[www.insigniaproducts.com](http://www.insigniaproducts.com)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2015 Best Buy. All rights reserved.

**Made in China**

**Dispose of batteries in the proper manner, according to federal, state, and local regulations.**