


INSIGNIA™

2-in-1 Corded Stick Vacuum Cleaner

NS-VCS50BK7

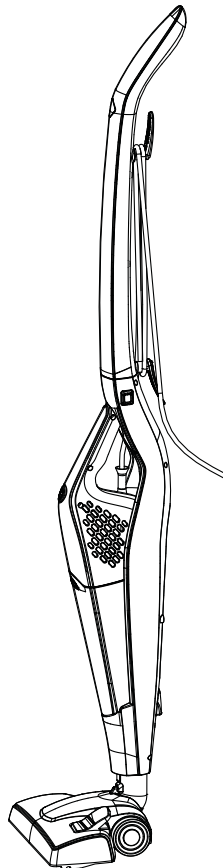

Before using your new product, please read these instructions to prevent any damage.

NS-VCS50BK7

2-in-1 Corded Stick Vacuum Cleaner

Contents

Introduction	2
IMPORTANT SAFETY INSTRUCTIONS	2
Features	4
Package contents	4
Main components	4
Assembling your vacuum cleaner	5
Using your vacuum cleaner	7
Using the handheld cleaner	8
Cleaning your vacuum cleaner	10
Troubleshooting	11
Specifications	11
ONE-YEAR LIMITED WARRANTY	12

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-VCS50BK7 represents the state of the art in vacuum cleaner design and is designed for reliable and trouble-free performance.

IMPORTANT SAFETY INSTRUCTIONS



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within your vacuum cleaner.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying your vacuum cleaner.

When using an electrical vacuum cleaner, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE VACUUM CLEANER

WARNING – To reduce the risk of fire, electric shock, or injury:

- a) Do not leave the appliance when plugged in. Unplug it from the outlet when not in use and before servicing.
- b) Do not use outdoors or on wet surfaces.
- c) Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- d) Use only as described in this manual. Use only the manufacturer's recommended attachments.
- e) Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- f) Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- g) Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- h) Do not handle the plug or the appliance with wet hands.
- i) Do not put any object into openings. Do not use with any opening blocked. Keep it free of dust, lint, hair, and anything that may reduce air flow.
- j) Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- k) Turn off all controls before unplugging.
- l) Use extra care when cleaning on stairs.
- m) Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- o) Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- p) Do not use without the dust bag and/or filters in place.
- q) Polarization instructions

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

SAVE THESE INSTRUCTIONS


Features

- 2-in1 stick/hand vacuum design
- Easy-empty dust cup
- Lightweight and stylish design

Package contents


- 2-in1 stick/hand vacuum
- Crevice tool
- Combination brush
- "T" brush
- Screw
- *User Guide*

Main components

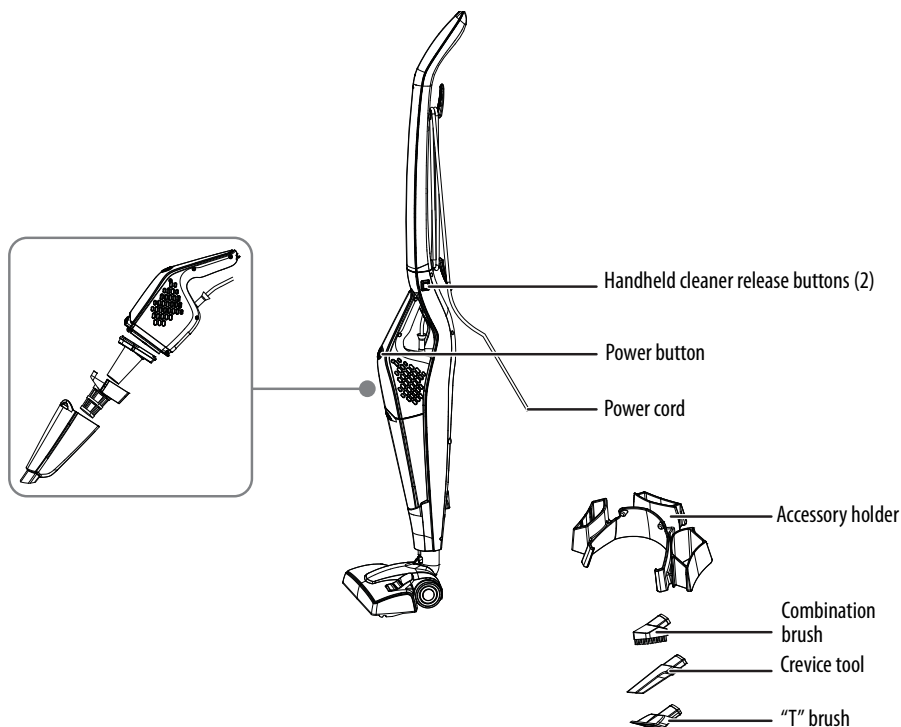


Assembling your vacuum cleaner

- 1 Remove the connecting screw from the vacuum cleaner handle.
- 2 Insert the handle into the main body of the vacuum cleaner, then tighten the screw (provided) to secure it.

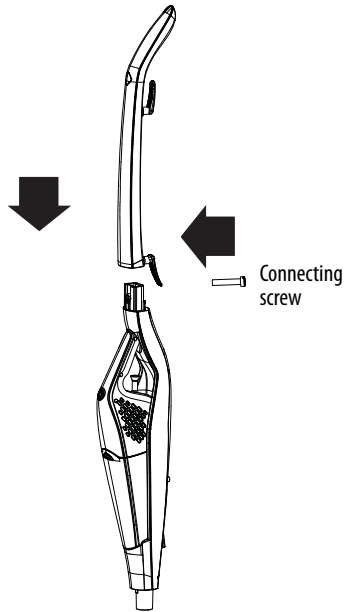


- 3 Insert the handle/main body assembly into the suction head until it clicks into place.

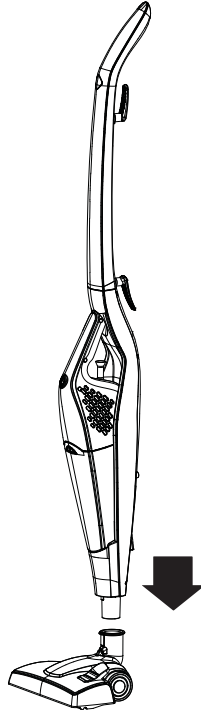

- 4 Wrap the power cord on the power cord holder until you are ready to use it.


Using your vacuum cleaner

- 1 Rotate the top power cord holder, then uncoil the power cord.

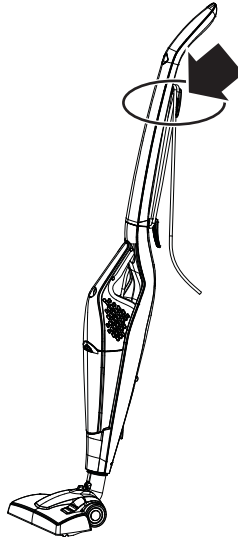


- 2 Plug the power cord into a wall outlet.
- 3 Step on the suction head (anywhere) and tilt the handle back to a comfortable position.

- 4 Press the **ON/OFF** button to turn on the vacuum cleaner, then begin vacuuming.

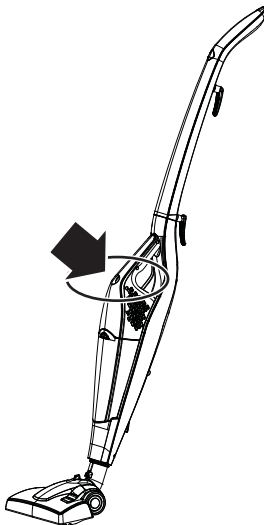


Using the handheld cleaner


- 1 Press the release buttons on both sides of the handle to release the handheld cleaner.

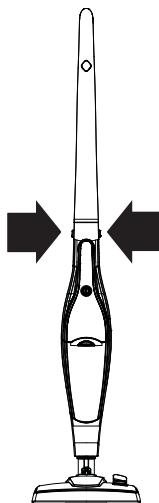

- 2 Grasp the hand grip of the handheld cleaner and pull it away from the vacuum cleaner.

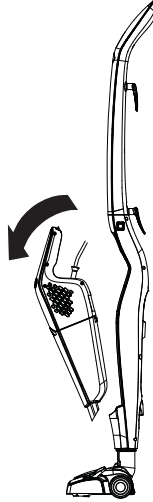


- 3 Insert the crevice tool, combination brush, or "T" brush into the suction head.

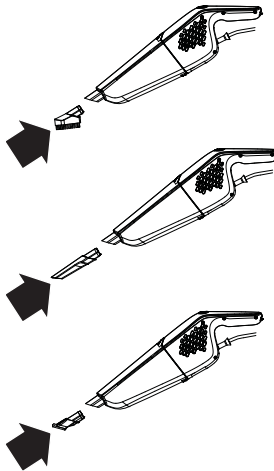


- 4 Press the **ON/OFF** button to turn on the handheld cleaner, then begin vacuuming.
- 5 Reattach the handheld cleaner into the vacuum cleaner, making sure it snaps into place.

Cleaning your vacuum cleaner

- 1 Remove the handheld cleaner as described in “Using the handheld cleaner” on page 8.
- 2 Push the button on the top of the handheld cleaner, then separate the motor from the suction head.

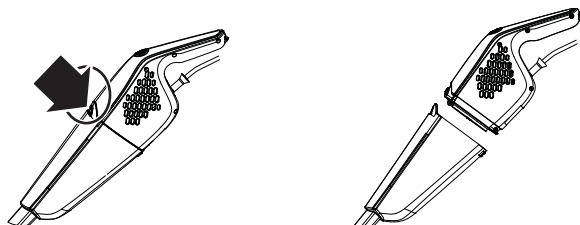

- 3 Remove the dirt cup, cloth bag, and filter from the suction head.

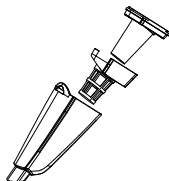

- 4 Dump the dust from the dirt cup and clean the filter and cloth bag (which is washable).
- 5 Reattach the cloth bag, filter, and dirt cup into the suction head.
- 6 Reattach the handheld cleaner into the vacuum cleaner.

Troubleshooting

Caution

Do not try to repair your vacuum cleaner yourself. Doing so invalidates the warranty.

Problem	Possible cause	Possible solution
Your vacuum cleaner does not work	The vacuum cleaner is unplugged.	Make sure that the vacuum cleaner is plugged in and that the plug is pushed completely into the outlet.
Your vacuum cleaner has no suction power	Clogged dust bag or filter.	Clean and wash the dust bag and filter.
	The dust cup is full.	Empty the dust cup.
	The dust cup is installed incorrectly.	Remove the dust cup and reinstall it correctly.

Specifications

Dimensions	10 x 7.3 x 44.9 in. (256 x 185 x 1140 mm)
Weight	5.5 lbs. (2.5 kg)
Electrical requirements	120V~50/60 Hz
Power draw	500 W

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location, please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging. If you purchased the Product from a Best Buy online web site (www.bestbuy.com or www.bestbuy.ca), mail your original receipt and the Product to the address listed on the web site. Make sure that you put the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States call 1-888-BESTBUY, Canada call 1-866-BESTBUY. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the county where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.

- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

For customer service please call 1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved.

Made in China

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

©2016 Best Buy. All rights reserved.

Made in China.

V2 ENGLISH
16-0041