

INSIGNIA™

QUICK SETUP GUIDE

33 lb Portable Ice Maker

NS-PIM33SS

PACKAGE CONTENTS

 
- Portable ice maker
- Ice basket (pre-installed)
- Ice shovel
- Quick Setup Guide

FEATURES


- Produces up to 33 lbs. (14.9 kg) of ice per day, letting you stock up for your next get-together
- 2 lbs. (.9 kg) storage capacity gives you plenty of ice for any occasion
- Fast-paced production cycle makes fresh ice every 5–8 minutes
- Two cube sizes, .25 oz. (7 g) and .32 oz. (9 g), to fit various glass sizes
- Analog controls make using this ice maker simple and straight-forward
- Water recycling system with 1.8 qt. (1.7 l) reservoir automatically uses water from melted ice to make new ice
- Modern stainless steel design looks great in your kitchen
- Ice shovel and basket give you easy access to your ice

OVERVIEW

Control panel

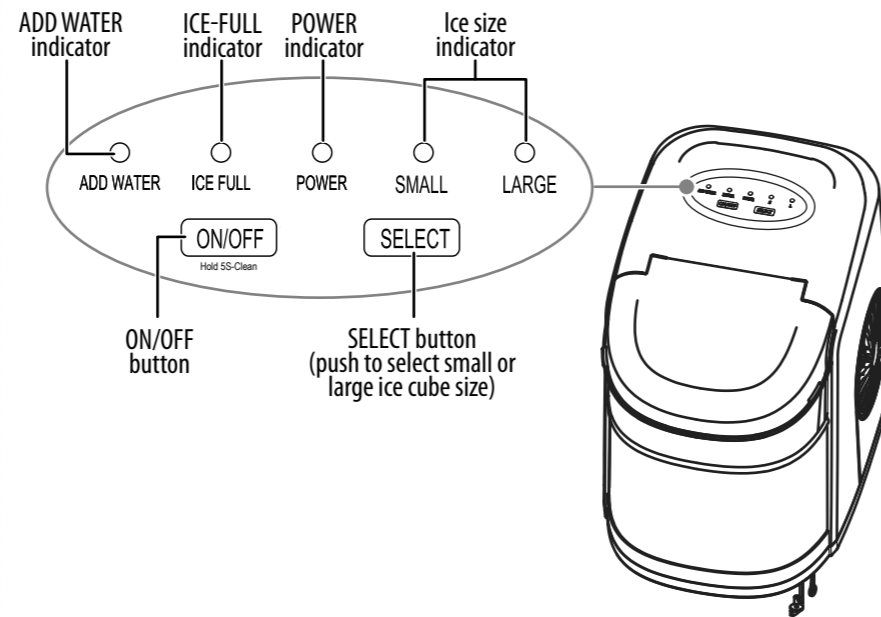

Ice maker

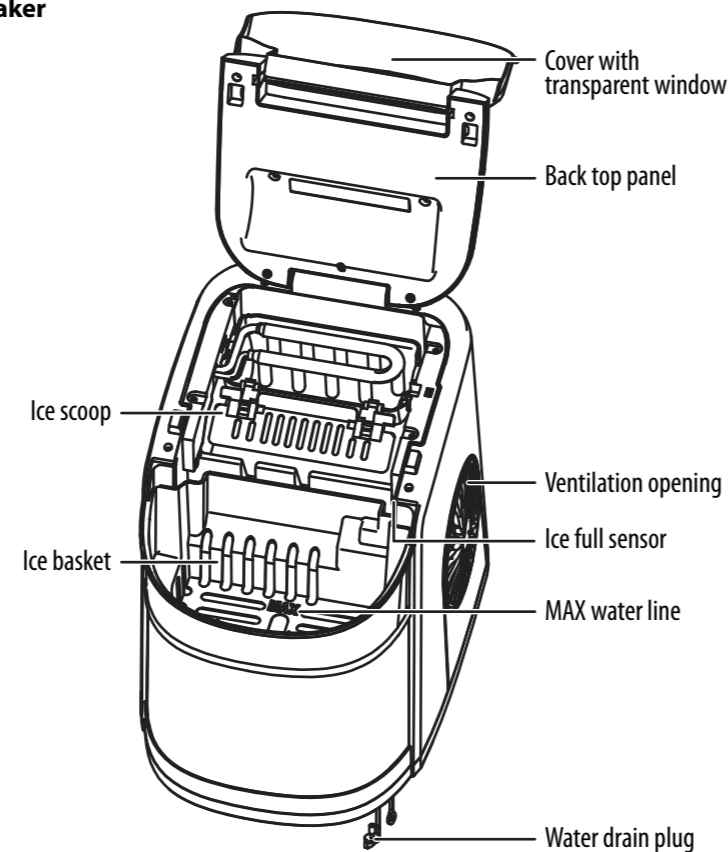 

UNPACKING AND SETTING UP YOUR ICE MAKER

- 1 Remove the exterior and interior packaging. Make sure that you unpack and remove the tape that holds the ice shovel, ice basket, and ice scoop in place.
- 2 Put the ice maker on a flat, level surface away from direct sunlight and other sources of heat (such as a stove, furnace, heating ducts, or radiator).
- 3 Make sure that there is at least a four inch gap between the back and sides and surrounding walls with adequate air circulation behind it.
- 4 Position the ice maker so that the plug is accessible.
- 5 Wait four hours for the refrigerant fluid to settle before plugging the ice maker in.
- 6 Plug in your ice maker.

 
CLEANING YOUR ICE MAKER

- Before using your ice maker for the first time, make sure to clean the ice maker thoroughly.
 - Clean the ice maker at least once a week or every three days if your water quality is poor.
- 1 To run the self-cleaning cycle, fill the reservoir to the MAX water line with clean water, then press the **ON/OFF** button for more than five seconds. The self-cleaning cycle starts.
 - 2 When the self-cleaning cycle is done (about 30 minutes), unplug the drain plug on the front bottom to drain the water.
 - 3 Clean the exterior and interior with diluted detergent, warm water, and a soft cloth. Rinse with clean water.
CAUTION: Do not use bleach or vinegar to clean the internal components.
 - 4 Insert the water drain plug back in place and secure before filling with water.
 - 5 Run two to three cycles of ice and dispose of them to help remove any first time plastic odor or residue.

USING YOUR ICE MAKER

WARNINGS:

- Your ice maker must be grounded and comes equipped with a grounding-type power cord with a three-prong plug that plugs into a standard, three-prong wall outlet.
 - When using for the first time, wait four hours for the refrigerant fluid to settle before plugging the ice maker in.
 - Fill with drinking water only.
- 1 Make sure that the water drain plug is in place and secure.
 - 2 Open the cover, then pour drinking water into the reservoir through the ice basket. Add water up to MAX water line.
 - 3 Close the cover.

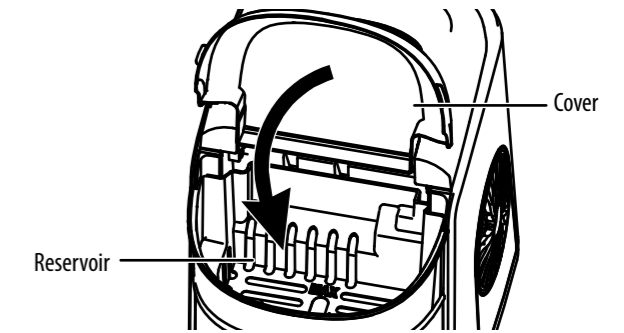

- 4 Plug the power cord into a power outlet.
- 5 Press the **ON/OFF** button. The power indicator lights and the ice maker begins making ice.
Note: If the water level is too low, your ice maker stops automatically and the ADD WATER indicator light turns on. Turn off your ice maker, then fill the reservoir up to the MAX water line. Wait at least three minutes, then turn on your ice maker.
- 6 Press the **SELECT** button to select the ice cube size. If the room temperature is lower than 60°F (16°C), it is best to select the small cube size to keep ice from sticking together. When the ice basket is full, your ice maker automatically stops making ice and the ICE FULL indicator lights.
Note: The ice making cycle lasts five to eight minutes, depending on the selected ice cube size and the ambient temperature. If the room is extremely hot, the cycle may take longer.
- 7 Remove the ice from the basket and use or freeze the ice.
Note: After the ice is made it slowly begins to melt into the reservoir. Your ice maker recycles the water to make ice again.

USAGE TIPS

- Change the water in the water reservoir every 24 hours to make sure that the ice tastes good.
- If your ice maker is not in use, drain all water left in the tank.

TROUBLESHOOTING

The ADD WATER indicator is on.

- Turn off your ice maker, open the cover, then add water up to the MAX water line. Close the cover. Turn on your ice maker.

The ICE FULL indicator is on.

- Remove ice from the ice basket.

Ice cubes stick together.

- The ice cycle is too long for the room temperature. Stop your ice maker, then restart it when the ice melts. Select the small size ice cube and try making ice again.
- The water temperature may be too cold. Change the water in the reservoir. The best water temperature is between 40°F ~ 90°F (4.4°C ~ 32°C).

The ice making cycle is normal, but no ice is made.

- The room temperature or water temperature may be too high. The room temperature should be 50°F ~ 105°F (10°C ~ 40°C). The water temperature should be 40°F ~ 90°F (4.4°C ~ 32°C).
- The refrigerant liquid may have leaked. Contact a qualified service technician for repair.
- The pipe in the cooling system may be blocked. Contact a qualified service technician for repair.

The ice maker continues to make ice even though the ice basket is full.

- Direct sunlight or reflected sunlight may cause the infrared sensor to malfunction. If that happens, your ice maker will continue to make ice cubes even when full. Move the ice maker out of the sunlight to resume normal operation.

My ice maker is noisy.

- Your ice maker makes noise during the freezing cycle and when it is dumping ice. This is normal.

SPECIFICATIONS

Dimensions (H×W×D): 13 × 9.5 × 13.9 in. (33 × 24.2 × 35.3 cm)

Net weight: 17.2 lbs. (7.8 kg)

Reservoir capacity: 2 lbs (.9 kg)

Ice per day: 33 lbs. (14.9 kg)

Protection type: 1

Power: 115 V/60 Hz

Ice making current: 2.1 A

Ice harvest current: 2.3 A

Refrigerant: R290 22 g

Enclosure: Plastic with stainless steel

IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

- Do not operate this or any other appliance with a damaged cord.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This ice-maker must be positioned so that the plug is accessible.

Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.

- Do not run the power cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water.

- We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. If you must use an extension cord, use No.14AWG minimum size and rated no less than 1875 watts.

- Unplug the ice maker before cleaning or making any repairs or servicing.

- Exercise caution and use reasonable supervision when appliance is used near children.

- Do not use your ice-maker outdoors. Place the ice-maker away from direct sunlight and make sure that there is at least 4 inches of space between the back of your unit and wall. Keep a minimum distance of 4 inches on each side of your unit free.

- Do not use other liquid to make the ice-cube other than water.

- Do not clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion.

- Do not tip over.

- If the ice maker is brought in from outside in wintertime, give it a few hours to warm up to room temperature before plugging it in.

WARNING: This appliance must be grounded.



Tubing.

- CAUTION – Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner’s Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed.
- CAUTION – Risk Of Fire Or Explosion. Dispose Of Property In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used .
- CAUTION-Risk Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing. Follow Handling Instructions Carefully. Flammable Refrigerant Used.
- The ice maker should be installed in accordance with the safety standard for Refrigeration Systems, ASHRAE15. The ice maker shall not be installed in corridors or hallways of public buildings.
- If the unit is with problem need to be maintained, that replacing with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

IMPORTANT:

The wires in this cord are colored in accordance with the following code:

Green or Green with a strip yellow: Grounding

White: Neutral

Black: Live

To avoid a hazard due to instability of the appliance, it must be placed at an even or flat surface.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

www.insigniaproducts.com