INSIGNIATM




QUICK SETUP GUIDE 24" HD / 24" FHD / 39" HD LED TV


NS-24F201NA23 / NS-24F202NA23 NS-39F201NA23

INCLUDED ACCESSORIES Voice Remote with Alexa and two AAA batteries



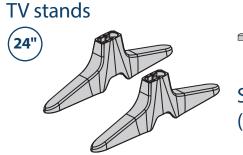

ST4 screws (12 mm length) (4pcs.)

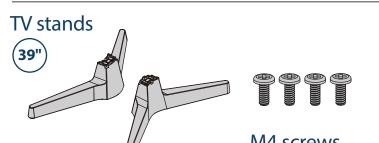

M4 screws (10 mm length) (4pcs.)



STOP Before using your new TV, read these instructions to prevent any damage. Do not plug the power cord in until all other devices have been connected.




INSTALLING THE STANDS OR A WALL MOUNT

Place your TV face-down on a cushioned, clean surface.

STANDS

- 1 Align the TV stand screw holes with the holes on your TV's bottom.
- **2** Use a Phillips screwdriver and the four provided screws to secure the stands to your TV.

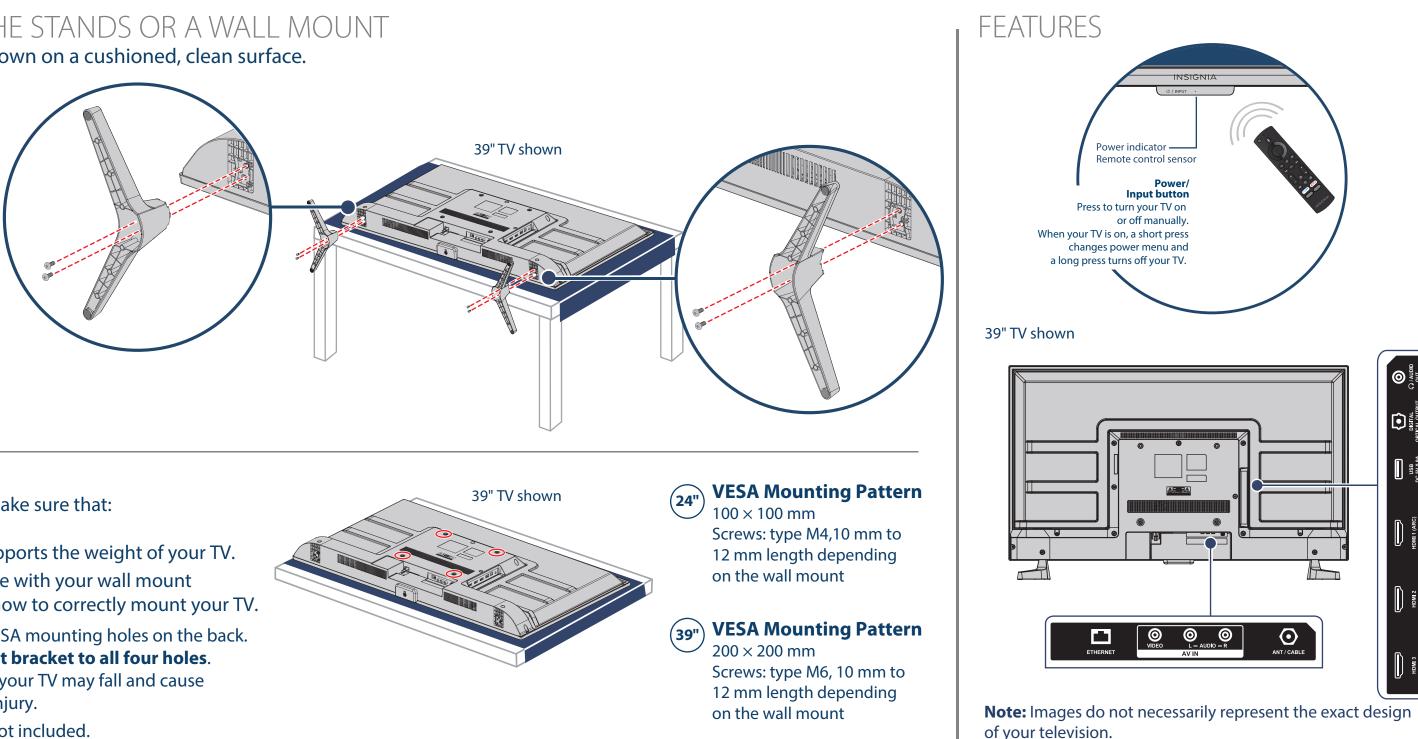

WALL MOUNT


Before you mount your TV, make sure that:

• You remove the stands.

• The wall-mount bracket supports the weight of your TV. See the instructions that came with your wall mount for more information about how to correctly mount your TV.


WARNING: Your TV has four VESA mounting holes on the back. You must secure a wall-mount bracket to all four holes. If you do not use all four holes, your TV may fall and cause property damage or personal injury.

Note: Wall-mount screws are not included.

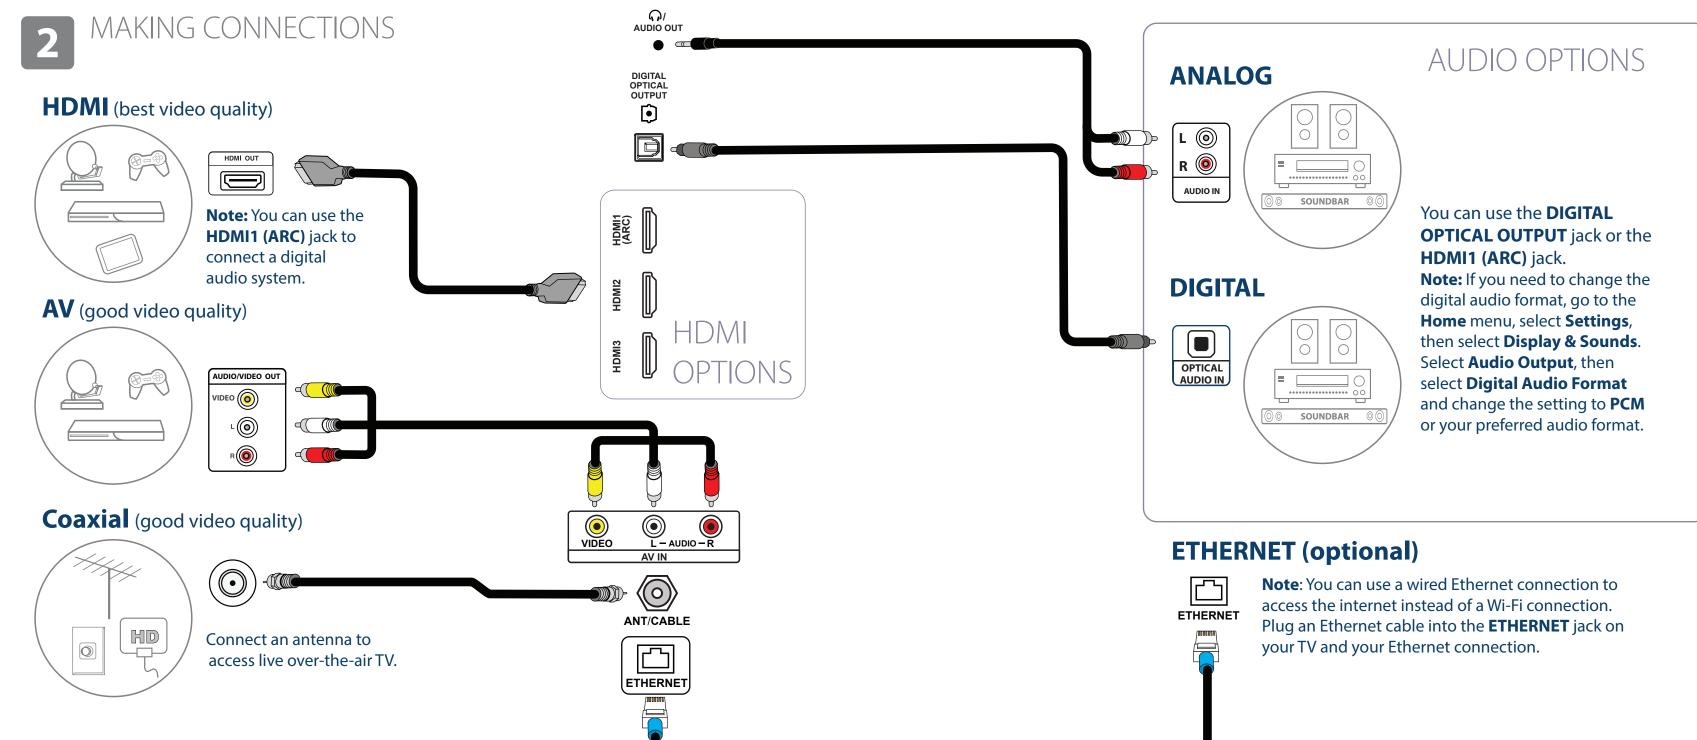




1 Plug the power cord into a power outlet.

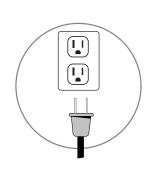

 2 Remove the remote control cover and install the batteries.



- **3** Press **(**) on your remote.
- **4** Follow the on-screen instructions.

COMPLETE THE ON-SCREEN SETUP

Your TV should automatically pair to your new Voice Remote with Alexa.

- 1 If your remote is not paired, press 🙆 . If you continue to have issues, re-insert or replace the batteries and try again.
- **2** Select your Wi-Fi network from the displayed network list. **Note:** If your Wi-Fi network is password protected, enter your network password using the on-screen keyboard. If your network is hidden, select the **Join Other Network** tile.
- 3 Select your experience: Full (recommended) or Basic.
- Select Full to access live TV, over tens of thousands of streaming movies and TV episodes, thousands of apps, and Alexa skills. To get started, sign into or sign up for a free Amazon account.
- Select **Basic** to access live TV and the six preset streaming apps. Alexa and the full Appstore are not included.
- **4** If you connected your TV to an antenna or cable wall jack: **A** Go to **Settings > Live TV > Channel Scan**.
- **B** Follow the on-screen instructions to scan for channels. Note: To browse and watch live TV, use the **On Now** row or press (1) on your remote.

USING YOUR VOICE REMOTE WITH ALE	EXA FIN 1 G 2 U
Power Turns your TV on or off. When your TV is off, the LED indicator on the front of your TV lights red.	 Voice Holding down the Voice button activates the Alexa-enabled microphone on the remote, and initiates voice input. Releasing the Voice button ends voice input. With Alexa, you can use your voice to search for content, control playback, and more. (Alexa Voice Service requires an Amazon account).
Navigation Navigate on-screen (up, down, left, and right). Home	Select Confirms a selection or action.
Takes you to the Home Screen. A long press activates the Quick Settings Overlay.	Menu Activates contextual commands on the screen.
Back • • • • • • • • • • • • • • • • • • •	Play / Pause
Rewind (long press) and skip back (short press). Behavior varies by app.	Resumes or pauses playback. Forward Fast forward (long press) and skip ahead (short press). Behavior varies by app.
Volume Keys Volume + increases the volume, and Volume - decreases the volume.	Channel ▲ goes to the next live TV channel, and
Guide Opens the live TV Channel Guide.	 Channel ▼ goes to the previous live TV channel. Settings Activates the Quick Settings Overlay.
Mute Mutes the sound.	Recents Opens a row of recently watched content so you can easily switch between content.
Launches Prime Video from any screen or when your TV is off.	Netflix Launches Netflix from any screen or when your TV is off.
App 1 Launches App 1 from any screen or when your TV is off.	• App 2 Launches App 2 from any screen or when your
	NSIGNIA

ND YOUR USER GUIDE ONLINE

Go to <u>www.insigniaproducts.com</u>. se the search bar to find NS-24F201NA23 or NS-24F202NA23 NS-39F201NA23. elect Support & Downloads. lext to User Guide, select the language you want.

INSIGNIA^m



HD Picture Quality, Fire TV Experience Built-in, **Voice Remote with Alexa**



Access Your Favorite Content – All Through One Home Screen

Fire TV Edition seamlessly integrates live over-the-air TV and streaming channels on a unified home screen



Endless Entertainment - Netflix, Prime Video, YouTube, Hulu, HBO, and more

Watch over 500,000 streaming movies and TV episodes with access to tens of thousands of channels, apps, and Alexa skills



Control It All With Your Voice – Voice Remote with Alexa

Use your voice to watch live TV, launch apps, search for titles, play music, switch inputs, control smart home devices, and more

Full Experience required to access all features described.

ONE-YEAR LIMITED WARRANTY

Visit <u>www.insigniaproducts.com</u> for details.

NEED ADDITIONAL HELP?

Check out our Support Community at http://community.insigniaproducts.com/ for helpful information from other Insignia TV owners.

WE'RE HERE FOR YOU

www.insigniaproducts.com For customer service, call: 1-877-467-4289 (U.S./Canada)

CONTACT AMAZON FIRE TV CUSTOMER SERVICE

www.amazon.com/deviceservices/support

Press & ask



alexa

AMAZON TERMS & POLICIES

Before using Fire TV Edition, please read the terms located at www.amazon.com/deviceservices/support. Please also read all terms and policies for services related to Fire TV Edition, including but not limited to Amazon's Privacy Notice located at <u>www.amazon.com/privacy</u>, Amazon's Conditions of Use located at www.amazon.com/conditionsofuse, and any other terms or usage provisions available at www.amazon.com/deviceservices/support.

All terms, rules, notices, policies, and provisions are, collectively, the "Agreements." By using Fire TV Edition, you agree to be bound by the terms of the Agreements.

hazon Fire Alexa Prime and all related logos are trademarks of Amazon com Inc. o its affiliates.

Certain services are subject to change at any time, may not be available in all areas, and may require separate subscriptions.

For DTS patents, see <u>http://patents.dts.com</u>.

Manufactured under license from DTS, Inc. DTS, TruSurround and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.

U.S. and Canada:

INSIGNIA is a trademark of Best Buy and its affiliated companies. Registered in some countries. Distributed by Best Buy Purchasing, LLC 7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2022 Best Buy. All rights reserved.