



This message about...

**G**ROUND  
**F**AULT  
**C**IRCUIT  
**I**NTERRUPTERS

...can save a life!

**IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI\* NOW!**

Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

**WHY DO YOU NEED A GFCI?** Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you... even if the switch is "off." A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.



**A GFCI can save your life! Compared to that, the price is small! Don't wait... install one now!**

\*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

**USER MAINTENANCE**

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

**Blocked or clogged air intake vents will cause the dryer to overheat.** If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

**CAUTION**

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

**STORAGE – Important**

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.** Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

**LIMITED TWO YEAR WARRANTY**

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your sales slip and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please register this product at: [www.conair.com/registration](http://www.conair.com/registration)

**SERVICE CENTER**

Service Department  
7475 N. Glen Harbor Blvd  
Glendale, AZ 85307

©2011 CONAIR CORPORATION  
10PD116644

IB-10320

**IONIC TURBO STYLER**

**1875 WATTS**



LESS frizz, MORE control WITH IONIC TECHNOLOGY



**IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER** — Any hair dryer is electrically live even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquids.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer, even during storage.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. Do not use with voltage converter.

**SAVE THESE INSTRUCTIONS**

**OPERATING INSTRUCTIONS**

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard Dryers are designed to operate at 110 to 125 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**IMPORTANT**


**1875 WATT STYLING GUIDE**

Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.**

**CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE APPLIANCE.**

This appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

1. Plug in the appliance and press test button on plug (See appropriate diagram below).
2. The appliance will stop working. There will be an audible click and reset button will pop out.
3. To reset ALCI with a reset button, units should be unplugged. Then push reset button in, and reinsert plug into outlet.

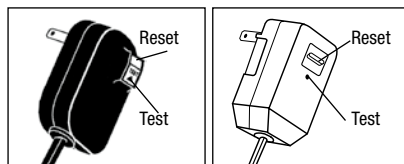

4. If ALCI is not functioning properly, return appliance to nearest service center.
5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.
6. Be sure to repeat test every time you use the unit to confirm ALCI is operational.

Should the appliance go off and the reset button pop up during use, this could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Reinsert plug into outlet.

The appliance should then function normally. If not, return to an authorized Conair Service Center for evaluation and repair.

**SUPER STYLING GUIDE**

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

**DRYING BASICS**

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel dry hair to remove excess moisture. Section hair.
2. If you use the dryer with a styling brush (the professional way to style and dry at the same time), brush each strand from underneath as you direct hot air to top of strand, always moving slowly and steadily up and down each strand. This way, you'll be aiming heat at your hair, not at your scalp. Snap on the concentrator attachment to direct the air flow for precise styling.
3. For quick touch-ups between shampoos, mist hair to dampen it before styling with dryer.
4. When using your dryer to create curls and waves, dry hair almost completely on a low temperature setting, then set your style by pressing the cool shot button. This will help reduce static and shine hair for a perfect finish. For curlier, wavier hair styles use the snap on/snap off diffuser attachment.

The Conair® 1875 Watt Styler is very effective, even at lower temperatures, and helps to give healthier-looking, shiny, more manageable hair with maximum styling control.

**IONIC CONDITIONING** natural ion output helps to control static electricity minimizing frizz, increasing shine and making hair more manageable.

**GETTING TO KNOW YOUR DRYER**



Concentrator attachment helps to precisely direct air flow for pinpoint styling.

Diffuser attachment helps to create texture and waves in the hair.

**CAUTION:** Always use diffuser on low heat/speed. **NEVER USE HIGH HEAT SPEED/SETTING** when the Diffuser is fitted to the dryer, as this may lead to damage to hair dryer and diffuser attachment due to abnormal heat build-up.



Este mensaje sobre los...

**G**ROUND  
**F**AULT  
**C**IRCUIT  
**I**NTERRUPTERS

(Interruptores de circuito contra fallas a tierra)

Puede salvar una vida!

## MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

### LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

**PELIGRO** – Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado.

Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo.
2. No lo use en el baño o la ducha.
3. No coloque ni guarde este producto donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. No toque el agua.

**ADVERTENCIA**– Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

### SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN GFCI\* AHORA!

Su electricista le puede ayudar a decidir cual sistema escoger – un sistema amovible que se conecta al tomacorriente o un sistema permanente que él instalará. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con GFCI.

**¿POR QUÉ NECESITA UN GFCI?** La electricidad y el agua no deben juntarse. Si su aparato cayera al agua mientras esté conectado, una descarga eléctrica podría causar su muerte... aunque el interruptor esté apagado. Un fusible o un interruptor de circuito regular no le protegerá en esta situación. Un GFCI ofrece más protección.



**¡Un GFCI puede salvar su vida!** ¡Comparado con ella, el precio es bajo! ¡No espere... instale uno ahora mismo!

\* Un GFCI es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad.

## INSTRUCCIONES DE MANTENIMIENTO

Su secador requiere poco mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio. Cuando sea necesario limpiarlo, desconéctelo, permita que enfríe y saque el polvo y las pelusas de las aberturas de aire con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador sólo se debe limpiar con un paño limpio.

**El secador se recalentará si las aberturas de aire estuvieran bloqueadas u obstruidas.** Si esto ocurriera, un sistema de seguridad apagará el secador o cortará la temperatura automáticamente para evitar daños al aparato o heridas. Si esto sucediera, desenchufe el aparato y permita que enfríe durante 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese que las ventilaciones de aire estén limpias.

## PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Inspeccione el cable con frecuencia para asegurarse que no esté dañado. **Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato deja de funcionar o funcionara de manera intermitente.**

Si el cable o el aparato estuviesen dañados o si el aparato no funcionase correctamente, regréselo a un centro de servicio autorizado. No trate de repararlo.


## ALMACENAJE – IMPORTANTE

Después de usar el aparato, desconéctelo, permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No enrolle el cable alrededor del aparato.** Permita que el cable cuelgue o que la junta que lo conecta al secador esté suelta y recta.

## PRUEBE EL CORTACIRCUITO DE SEGURIDAD ANTES DE CADA USO

Este aparato está dotado de un cortacircuito de seguridad llamado ALCI (Appliance Leakage Circuit Interrupter), que apaga el aparato inmediatamente si éste cayera al agua. Haga la prueba siguiente para asegurarse de que el sistema de detección de agua funcione correctamente:

1. Enchufe el aparato y apriete el botón de prueba (véase el gráfico más abajo).
2. El aparato dejará de funcionar. Se oirá un clic y el botón de reinicio saltará.
3. Para reajustarlo, desconecte el aparato. Oprima el botón de reinicio y vuelva a conectar el cable.

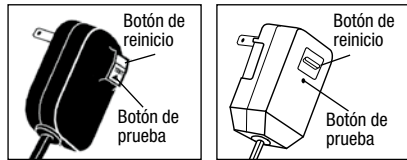

**4. Si el cortacircuito de seguridad no funcionara correctamente, regrese el aparato a un centro de servicio autorizado.**

Si el aparato cayera al agua, es muy importante que lo mande a un centro de servicio autorizado. No intente reajustarlo.

Pruebe el cortacircuito de seguridad antes de cada uso para asegurarse que esté operativo.

Si el secador se apagara y el botón de reinicio saltara durante el uso, esto podría indicar un mal funcionamiento. Si esto ocurriera, desconecte el aparato y permita que enfríe. Conecte el cable al tomacorriente.

## GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US \$5.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

**CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA.** Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

**CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.** Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos

que varían de un Estado a otro.

**Para registrar su producto, visítenos en [www.conair.com/registration](http://www.conair.com/registration).**

## CENTRO DE SERVICIO

Service Department  
7475 N. Glen Harbor Blvd  
Glendale, AZ 85307

©2010 CONAIR CORPORATION  
10PD116644

IB-10320

## SECADOR TURBO IÓNICO

**1875 VATIOS**



MENOS frizz, MÁS control  
CON TECNOLOGÍA IÓNICA

El secador de 1875 vatios Conair® seca el cabello de manera muy eficaz, incluso con calor bajo. Ayudará a mantener su cabello saludable, brillante y dócil mientras brindará máximo control durante el peinado.

## ACONDICIONAMIENTO IÓNICO

Este aparato genera iones que ayudan a reducir la estática y el frizz, mientras agregan brillo y facilitan el peinado.

## FAMILIARÍCESE CON SU SECADOR



Concentrador de aire, para mayor precisión.

Difusor de aire, para crear textura y ondas.

**PRECAUCIÓN:** Utilice el difusor de aire con temperatura/velocidad baja únicamente. **NUNCA UTILICE TEMPERATURA/ VELOCIDAD ALTA** con el difusor de aire. Esto podría dañar el secador y el difusor, debido a la alta concentración de calor.