



recipes
inside!



#DEZT001

EASY TOASTER

Instruction Manual | Recipe Ideas





EASY TOASTER



Important Safeguards	4-7
Parts & Features	8-9
Using Your Easy Toaster	10-11
Tips & Tricks	12
Cleaning & Maintenance	13
Recipe Ideas	14-15
Notes	16-17
Customer Support	18
Warranty	19

the dash team!

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Warning: Hot surfaces. Do not touch sides of Easy Toaster while appliance is in use. Use handles or knobs.
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near or in water or other liquids.
- Never leave appliance unattended when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Do not use appliance outdoors or for commercial purposes.
- Do not place wet foods inside the Easy Toaster.
- Do not use the appliance if any of the parts are damaged. Refrain from using attachments that are not

recommended by the appliance manufacturer, as this may result in fire, electric shock or personal injury.

- Do not let the cord touch hot surfaces or hang over the edge of tables or counters. If an extension cord must be used, make sure the electrical rating of the wire is compatible with the Easy Toaster.
- Never insert oversized foods, metal foil packages, aluminum foil, or utensils in the appliance as this may result in fire, electric shock or personal injury.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not place utensils, fingers, or other foreign objects inside the Easy Toaster.
- To disconnect, press Cancel Button and make sure Toaster is off, then remove plug from wall outlet.
- Do not use appliance for other than

intended use.

- Improper use of the Easy Toaster can result in property damage or even in personal injury.
- Do not attempt to dislodge food when the Easy Toaster is plugged in. Unplug and allow the appliance to cool down completely before proceeding.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Close supervision is necessary when appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Do not place Easy Toaster near curtains, drapes, plastic, walls, or other flammable materials when in use as this will result in fire.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES

GARANTIES IMPORTANTES: Veuillez lire et conserver ce mode d'emploi et d'entretien

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Attention: surfaces chaudes. Ne touchez pas les parois du Easy Toaster pendant que l'appareil est en marche. Utilisez des poignées ou des boutons.
- Pour éviter tout risque d'incendie, de choc électrique ou de blessure, ne placez pas le cordon, la fiche ou l'appareil près de l'eau, dans l'eau ou dans tout autre liquide.
- Ne laissez jamais l'appareil sans surveillance lors de son utilisation.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances, à moins que des personnes supervisées et instruites concernant leur utilisation par une personne responsable de leur sécurité.
- Ne pas utiliser l'appareil à l'extérieur ou à des fins commerciales.
- Ne placez pas d'aliments humides à l'intérieur le grille-pain facile.
- Laissez le Easy Toaster refroidir complètement avant de le déplacer, de le nettoyer ou de le démonter.
- N'utilisez pas l'appareil si l'une des pièces est endommagée. Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil car cela pourrait provoquer un incendie, un choc électrique ou des blessures.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre du bord de tables ou de comptoirs. Les rallonges ne sont pas recommandées pour cet appareil. Cependant, si une rallonge doit être utilisée, assurez-vous que les caractéristiques électriques du fil sont compatibles avec le Easy Toaster.
- N'insérez jamais d'aliments trop gros, des paquets de feuilles de métal, des feuilles d'aluminium ou des

ustensiles dans l'appareil, au risque de provoquer un incendie, un choc électrique ou des blessures.

- Ne placez pas d'ustensiles, de doigts ou d'autres objets étrangers à l'intérieur du Easy Toaster.
- Pour vous déconnecter, appuyez sur le bouton Cancel et assurez-vous que le Toaster est éteint, puis retirez la fiche de la prise murale.
- Ne pas utiliser cet appareil pour un usage autre que celui prévu.
- Une utilisation incorrecte du Easy Toaster peut entraîner des dommages matériels, voire corporels.
- Ne tentez pas de déloger des aliments lorsque le Easy Toaster est en marche. Débranchez l'appareil et laissez-le refroidir complètement avant de continuer.
- Ne placez pas l'appareil sur ou près d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.
- Une surveillance étroite est nécessaire lorsque l'appareil est utilisé par ou à proximité d'enfants.
- Ne faites pas fonctionner un appareil avec un cordon ou une fiche endommagé (e) ou après que son dysfonctionnement ait été endommagé de quelque manière que ce soit. Renvoyez l'appareil à un centre de service agréé le plus proche pour un examen, une réparation ou un réglage.
- Ne placez pas le Easy Toaster près de rideaux, de rideaux, de plastique, de murs ou d'autres matériaux inflammables lors de son utilisation, vous risqueriez en feu.
- Assurez-vous toujours de débrancher l'appareil de la prise de courant avant le montage, le démontage, le nettoyage et le stockage.
- StoreBound n'acceptera aucune responsabilité pour les dommages causés par une utilisation incorrecte de l'appareil.
- Un cordon d'alimentation court doit être fourni afin de réduire les risques liés à l'enchevêtrement ou au trébuchement d'un cordon plus long.
- Si une rallonge est utilisée, le calibre électrique indiqué doit être au moins égal à celui de l'appareil. Le cordon le plus long doit être disposé de manière à ne pas se poser sur le dessus du comptoir ou de la table où il peut être tiré par des enfants ou trébuché dessus.
- Cet appareil est doté d'une fiche polarisée (une des lames est plus large que l'autre). Pour réduire les risques d'électrocution, cette fiche ne peut être insérée dans une prise polarisée. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si le problème persiste, contactez un électricien qualifié. Ne modifiez pas la fiche de quelque manière que ce soit.

PARTS & FEATURES



PARTS & FEATURES



USING YOUR EASY TOASTER

USING YOUR EASY TOASTER

BEFORE FIRST USE

- Remove all packaging material and stickers from your Easy Toaster.
- Clean the appliance and all of its components prior to assembly and use.
- Make sure loose objects have not fallen inside the Toaster.
- In order to eliminate any manufacturing residues, turn on the Toaster without bread and set the Control Dial to Medium. The appliance may give off some smoke which is perfectly normal.

GETTING STARTED


Note: Never stick your bare hands in the Toaster to remove food.

1. Place the Easy Toaster on a clean and stable surface. Make sure that no liquids or flammable objects are near the appliance or cord. Plug in the Toaster.
2. Place the bread slices in the Toasting Slots. Depending on desired results, adjust the Control Dial to Warm, Defrost, or preferred browning level.
3. Press the Toast Lift Lever down until it locks into place to start the heating process. You can stop the toasting process at any time by simply pressing the Cancel Button. If the Lever doesn't lock, check if the appliance is plugged in. The Toast Lift Lever will not click into place if the Toaster is not plugged in.
4. Always unplug the appliance after use and let it cool down before cleaning or storing.

Type	Description
DEFROST	Thoroughly toasts frozen bread with an extended toasting cycle.
WARM	Warms already toasted bread or lightly toasts bread that is not browned enough.

CONTROL DIAL

Three heating levels give you precise toasting results. Simply select your desired browning level from the chart below.

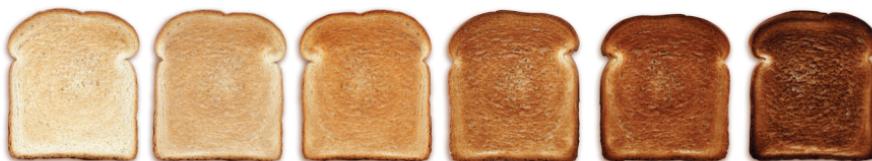

TIPS & TRICKS

- If the bread is too small to be removed from the Toasting Slot, gently push the Toast Lift Lever up and then remove the toasted bread. If you still cannot carefully take out the bread, unplug your Toaster and use thin heat-resistant tongs to remove the bread from the Toasting Slot.
- Do NOT touch the metal parts as they will be hot!
- For pop tarts or frozen waffles, toast as directed.
- ONLY toast food that is meant to be toasted in a slot toaster.
- If the Toaster jams, the bread might be too thick. Remove the bread from the Toaster and slice it thinner.



CLEANING & MAINTENANCE

DO NOT SUBMERGE the unit in water. Instead, use a damp cloth to wipe down the surface of the Toaster.

- Before cleaning your Toaster, unplug the appliance and let it cool down completely.
- Do not use abrasive scrubbers, sponges, or chemical cleaners to clean your appliance as this may damage it. Instead, use a damp cloth to wipe down the surface of your Easy Toaster.
- When not in use, store your Toaster in a clean, dry place.

RECIPE IDEAS



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



BRUSCHETTA

Toasted baguette, diced tomatoes, fresh basil, minced garlic, olive oil, and sea salt



STRAWBERRY NUTELLA

Toasted bread, Nutella, and sliced strawberries



LOX BAGEL

Toasted bagel, light cream cheese, lox, red onion, capers, and dill



AVOCADO TOAST

Toasted baguette, mashed avocado, diced tomato, onion, salt, pepper, and a drizzle of olive oil

NOTES

NOTES

CUSTOMER SUPPORT



Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or support@bydash.com



Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**. And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

WARRANTY

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one(1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Easy Toaster is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 750W
Stock#: DEZT001_20210414_V10

Made in China



1-800-898-6970 | [@bydash](http://bydash.com) | bydash.com