



*recipes
inside!*




DVT501

CLEAR VIEW TOASTER

 Instruction Manual | Recipe Guide



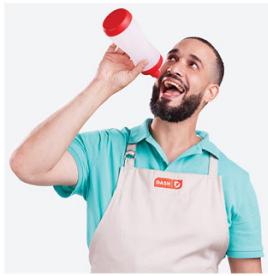

CLEAR VIEW TOASTER

- Important Safeguards..... 4-7
- Parts and Features 8-9
- Using Your Toaster..... 11-13
- Cleaning and Maintenance 14
- Tips and Tricks 16
- Recipe Ideas..... 17
- Customer Service 18
- Warranty 19

the dash team!

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Warning: Hot surfaces. Do not touch sides of Toaster while appliance is in use. Use handles or knobs.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Toaster is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not place utensils, fingers, or other foreign objects inside the Toaster while in use, as this may result in fire, electric shock, or injury.
- Do not attempt to dislodge food when the Toaster is plugged in. Unplug and allow the appliance to cool down completely before proceeding.
- Unplug the appliance and allow to cool prior to moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Make sure the appliance is off first before unplugging from outlet.
- Let cool after using and clean the Crumb Tray regularly.
- Oversized foods, utensils, or metal foil packages must not be inserted into the Toaster as this may result in fire or electric shock.
- Do not use the appliance for defrosting food other than bread, bagels, and waffles.
- Do not place wet foods inside the Toaster.
- Do not place food in the Toaster that has been covered with butter, jelly, or other condiments as this may result in fire, smoke, or jamming of the appliance.
- If the Carriage Lever is stuck while the Toaster is on, immediately unplug the appliance and let it cool down before emptying and cleaning. If the problem persists, discontinue use of the appliance.
- When heating toaster pastries, always use the lightest toast color setting.
- A fire may occur if the Toaster is covered or touching flammable materials, such as curtains, draperies, walls, and the like, when in operation.

- Never use abrasive metal or harsh cleaning agents to clean your Toaster.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM - 9PM EST Monday - Friday or by email at support@bydash.com.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric

shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions avant utilisation.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- N'utilisez l'appareil que sur une surface stable et sèche.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- Cet appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Avertissement : Surfaces chaudes! Ne touchez pas les côtés du Grille-pain pendant l'utilisation de l'appareil. Utilisez des poignées ou des boutons.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. Le Grille-pain n'est PAS lavable en machine.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car ils pourraient entraîner un feu, une électrocution ou un dommage corporel.
- Ne placez pas d'ustensiles, de doigts ou d'autres objets étrangers à l'intérieur du Grille-pain lorsqu'il est utilisé, car cela pourrait provoquer un incendie, un choc électrique ou des blessures.
- N'essayez pas de déloger les aliments lorsque le Grille-pain est branché. Débranchez l'appareil et laissez-le refroidir complètement avant de continuer.
- Débrancher l'appareil et laissez refroidir avant déplacement, nettoyage ou entreposage. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- Assurez-vous d'abord que l'appareil est éteint avant de le débrancher de la prise.
- Laisser refroidir après utilisation et nettoyer régulièrement le plateau ramasse-miettes.
- Les aliments, les ustensiles ou les paquets de feuilles métalliques surdimensionnés ne doivent

pas être insérés dans le grille-pain, car cela pourrait provoquer un incendie ou un choc électrique.

- N'utilisez pas l'appareil pour décongeler des aliments autres que du pain, des bagels et des gaufres.
- Ne placez pas d'aliments humides à l'intérieur du Grille-pain.
- Ne placez pas dans le Grille-pain des aliments qui ont été recouverts de beurre, de gelée ou d'autres condiments, car cela pourrait provoquer un incendie, de la fumée ou le blocage de l'appareil.
- Si le levier du chariot est bloqué alors que le Grille-pain est en marche, débranchez immédiatement l'appareil et laissez-le refroidir avant de le vider et de le nettoyer. Si le problème persiste, cessez d'utiliser l'appareil.
- Lorsque vous chauffez des pâtisseries pour grille-pain, utilisez toujours le réglage le plus clair pour la couleur des pâtisseries.
- Un incendie peut se produire si le Grille-pain est couvert ou touche des matériaux inflammables, tels que des rideaux, des draperies, des murs et autres, lorsqu'il fonctionne.
- N'utilisez jamais de métal abrasif ou d'agents de nettoyage agressifs pour nettoyer votre Grille-pain.
- N'utilisez pas cet appareil avec un cordon ou une prise endommagé(e), ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez l'appareil au détaillant agréé le plus proche.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 9h à 21h HNE

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

du lundi au vendredi, ou par courriel à support@bydash.com.

- StoreBound n'est nullement responsable des dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Cet appareil a une fiche polarisée (un des brins est plus large que l'autre). Afin de réduire le risque d'électrocution, cette fiche ne s'insère dans la prise électrique que d'une façon. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'insère toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Un cordon d'alimentation court doit être fourni afin d'éviter le risque d'emmêlement ou de trébuchement lié aux cordons plus longs. Une rallonge peut être utilisée à condition de faire attention. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins aussi grande que celle de l'appareil. Si l'appareil est connecté à la terre, la rallonge doit être un cordon tripolaire avec prise de terre. La rallonge doit être disposée de manière à ne pas reposer sur le comptoir ou sur la table où elle peut être tirée par un enfant ou source de trébuchement involontaire.



USING YOUR TOASTER

- Remove all packaging material and stickers from your Dash Clear View Toaster.
- Clean the appliance and all of its components prior to assembly and use.
- Make sure loose objects have not fallen inside the Toaster.
- In order to eliminate any manufacturing residues, turn on the Toaster without bread and set the Browning Dial to level 4. The appliance may give off some smoke which is perfectly normal.



GETTING STARTED


1. Place the Clear View Toaster on a clean and stable surface. Make sure that no liquids or flammable objects are near the appliance.
2. Place the bread slices in the Toasting Slot. Press the Carriage Lever down until it locks into place to start the heating process. If the handle doesn't lock, check if the appliance is plugged in and the Glass Panel Clamp is fully in place. The Carriage Lever will not click into place if the toaster is not plugged in and the Glass Panel Clamp isn't fully and securely inserted.
3. Turn the Browning Dial to the desired level. The higher the number, the more toasted your bread will be. You can stop the toasting process at any time by simply pressing the Cancel Button.
4. Always unplug the appliance after use and let it cool down before cleaning or storing. When storing the Clear View Toaster, wind the power cord around the hooks located on the bottom of the appliance.

Note: Never stick your bare hands in the Toaster to remove food.

TYPE	DESCRIPTION
DEFROST	Thoroughly toasts frozen bread with an extended toasting cycle.
REHEAT	Reheats already toasted bread or toasts bread that is not browned enough.
BAGEL	Toasts bagels by using only one side of the heating element.

BROWNING DIAL

 Seven heating levels give you precise toasting results. Simply select your desired browning level from the chart below.

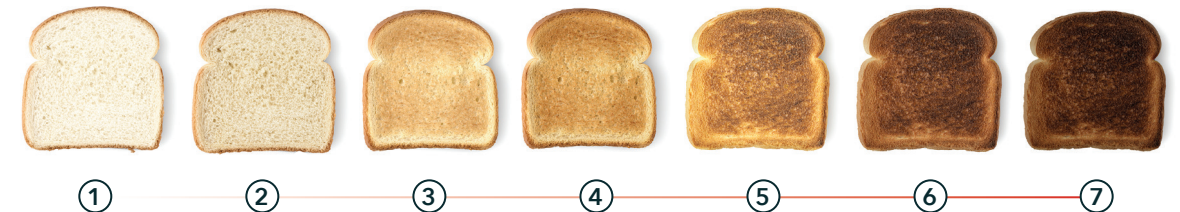

CLEANING & MAINTENANCE

CLEANING & MAINTENANCE

DO NOT SUBMERGE the unit in water. Instead, use a damp cloth to wipe down the surface of the Toaster. Clean the Slide-Out Crumb Tray with warm water and mild dish soap. Rinse and dry thoroughly with a lint-free cloth.

Caution: Be sure to clean the Slide-Out Crumb Tray regularly to prevent crumbs from accumulating at the bottom of the Toaster.

- Before cleaning your Toaster, unplug the appliance and let it cool down completely.
- Do not use abrasive scrubbers, sponges, or chemical cleaners to clean your appliance as this may damage it. Instead, use a damp cloth to wipe down the surface of your Clear View Toaster.
- When not in use, store your Toaster in a clean, dry place.

CLEANING THE SLIDE-OUT CRUMB TRAY

- Remove the Slide-Out Crumb Tray located at the bottom of the Toaster by sliding it out from the side.
- Wash the Tray with warm, soapy water. Rinse and dry thoroughly before returning the Tray to its slot.
- To avoid any lingering food odors, remove and clean the Slide-Out Crumb Tray after each use.

CLEANING THE GLASS PANEL

- Make sure the Slide-Out Crumb Tray is empty. Turn the Toaster upside down or on its side. Gently press the Glass Panel Clamp underneath the Toaster and then slide the Glass Panel out of the Toaster.
- Carefully wash the Glass Panel in warm, soapy water. Rinse and dry thoroughly. Slide the Glass Panel back into its grooves until the Glass Panel Clamp locks into place.





- If the bread is too small to be removed from the Toasting Slot, simply lift the Carriage Lever to raise the Carriage to its uppermost position and then pick up the toasted bread. If you still cannot carefully take out the bread, unplug your Toaster and use thin heat-resistant tongs to remove the bread from the Toasting Slot.
- Do NOT touch the metal parts as they will be hot!
- For pop tarts or frozen waffles, toast as directed.
- ONLY toast food that is meant to be toasted in a slot toaster.
- If the Toaster jams, the bread might be too thick. Remove the bread from the Toaster and slice it thinly.

NOTE: If the Carriage Lever does not stay down, the Glass Panel Clamp is not properly inserted all the way in. Make sure the Glass Panel Clamp is fully and securely inserted. See included note for photos.



LOX BAGELS

toasted bagel, light cream cheese, lox, red onion, capers, dill



AVOCADO TOAST

toasted baguette, mashed avocado, diced tomato, onion, salt, pepper, drizzle of olive oil



 
STRAWBERRY NUTELLA

toasted bread, Nutella, sliced strawberries



Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or support@bydash.com

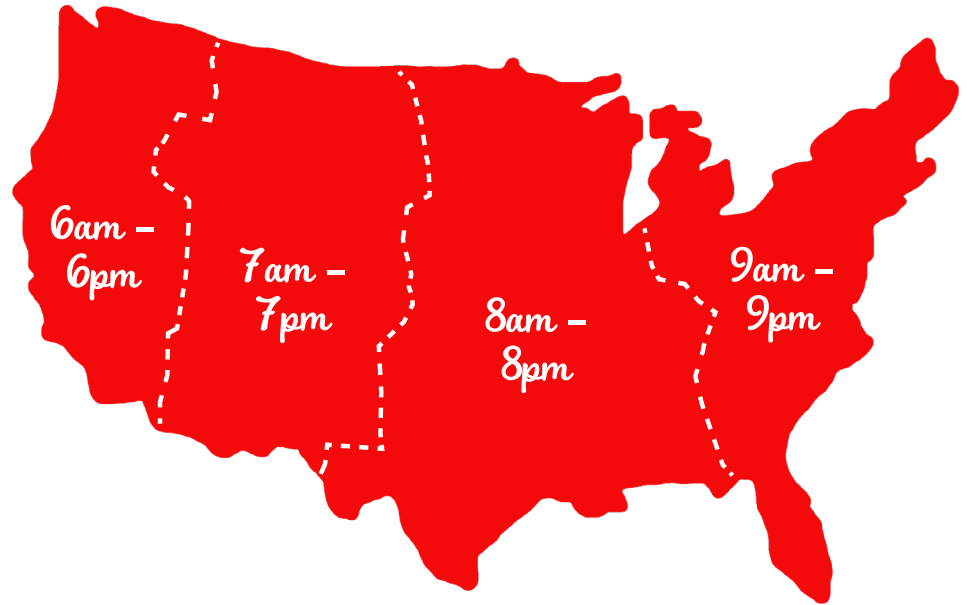

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**. And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com. There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Clear View Toaster is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Model: DVTS501
 Voltage 120V ~ 60Hz
 Power Rating 1100W
 Stock #: DVTS501_20170803_v19



1-800-898-6970 | @bydash | bydash.com