

**ONE YEAR LIMITED WARRANTY**  
(Valid in USA only)

HoMedics, Inc., guarantees this product free from defects in material and workmanship for a period of one year from the date of original purchase, except as noted below.

This HoMedics product warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of HoMedics. This warranty is effective only if the product is purchased and operated in the USA. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under warranty. HoMedics shall not be responsible for any type of incidental, consequential or special damages. All implied warranties, including but not limited to those implied warranties of fitness and merchantability, are limited in the total duration of one year from the original purchase date.

To obtain warranty service on your HoMedics product, either hand deliver or mail the unit and your dated sales receipt (as proof of purchase), postpaid, along with check or money order in the amount of \$10.00 payable to HoMedics, Inc. to cover handling.

Upon receipt, HoMedics will repair or replace, as appropriate, your product and return it to you, postpaid. If it is appropriate to replace your product, HoMedics will replace the product with the same product or a comparable product at HoMedics' option. Warranty is solely through HoMedics Service Center. Service of this product by anyone other than HoMedics Service Center voids warranty.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual state regulations, some of the above limitations and exclusions may not apply to you.

**For more information regarding our product line in the USA, please visit: [www.homedics.com](http://www.homedics.com)**

© 2004 HoMedics, Inc. and its affiliated companies, all rights reserved. HoMedics® is a registered trademark of HoMedics, Inc. and its affiliated companies. Mood Wave™ and ColorMotion™ are trademarks of HoMedics Inc. and its affiliated companies. All rights reserved.

IB-LT100A

# Mood Wave™ 100

 
ColorMotion™ Light

 


## Instruction Manual and Warranty Information

LT-100

**1** year  
limited warranty





### Experience the Magic of ColorMotion

Thank you for purchasing Mood Wave 100. This product is built with high quality craftsmanship to provide you years of dependable service. We hope that you will find it to be the finest product of its kind.

Create excitement anywhere. Inside this box lies the magic of the Mood Wave. It's fun. It's cool. And it's created for your enjoyment. Use it at a party, chill with it, study with it, boogie with it, sleep with it, decorate with it, meditate with it...use it with your friends or by yourself. It's in your hands from here... just enjoy it!

## IMPORTANT SAFETY INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be followed, including the following:

 
**READ ALL INSTRUCTIONS BEFORE USING**

### DANGER - To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

**WARNING** - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by HoMedics; specifically any attachments not provided with the unit.
- Never operate this appliance if it has a damaged cord, plug, or housing. If it is not working properly, if it has been dropped or damaged, return it to a HoMedics Service Center for examination and repair.




### Caution: All servicing of this product must be performed by authorized HoMedics Service Personnel only.

- Keep cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not carry this appliance by the supply cord or use cord as a handle.
- To disconnect, remove plug from outlet.
- This appliance is designed for indoor use only. Do not use outdoors.

### SAVE THESE INSTRUCTIONS

**Caution – Please read all instructions carefully before operating.**

 - Never leave the appliance unattended, especially if children are present.
- Never cover the appliance when it is in operation.
- This unit should not be used by children without adult supervision.
- Always keep the cord away from high temperature and fire.
- To get the best effect, product must be placed on a flat surface.
- Do not lift, carry, hang, or pull the product by the power cord.
- If the adaptor sustains damage, you must stop using this product immediately and contact the HoMedics Service Center for repair. (See the warranty section for the HoMedics address.)



**The Mood Wave Features**

- 10 hip colors create a fascinating display
- 3 color patterns
  - Daydream
  - Doze
  - Lounge
- 4 acoustic rhythms:
  - Drift, Unwind, Chill, and Relax
- Adjustable speed
- Display horizontally or vertically with built-in adjustable stand

**Assembly and Instructions for Use**

1. Unpack the product and check to make sure everything is included (Fig 1).
2. You may display the unit horizontally or vertically. If displaying vertically insert the stand into the back of the unit (Fig 2). Adjust the viewing angle of the stand to your preference and tighten it into place by turning the knob counter-clockwise.
3. Attach the A/C adaptor jack to the base of the unit (Fig 1).
4. Plug the cord into a 120V household outlet.

**To use the Color Patterns**

5. Press the PATTERN button (Fig 3):
  - Once for DAYDREAM
  - Twice for DOZE
  - A third time for LOUNGE
 A corresponding LED will illuminate to indicate the pattern selected.
6. There are 6 speeds that increase in half-second increments. At the slowest speed the colors will change every 3 seconds. At the fastest speed the colors will change ever half-second.
  - To increase the speed press the + sign on the SPEED button (Fig 3).
  - To decrease the speed press the – sign on the SPEED button.
 A corresponding LED will illuminate to indicate the speed selected.
 

NOTE: When switching patterns the speed of your choice will be retained until the power is turned off.
7. To turn off the color patterns, but still listen to the sounds, continue to press the PATTERN (Fig 3) button until no LED's are illuminated.

**To use the Acoustic Rhythms**

8. Press the SOUND button (Fig 3):
  - Once for DRIFT
  - Twice for UNWIND
  - A third time for CHILL
  - A forth time for RELAX
 A corresponding LED will illuminate to indicate the sound selected.

9. There are 5 volume levels.
  - To increase the volume press the + sign on the VOLUME button (Fig 3).
  - To decrease the volume press the – sign on the VOLUME button.

NOTE: When switching sounds the volume of your choice will be retained until the power is turned off.
10. To turn off the sounds but still view the color patterns continue to press the SOUND (Fig 3) button until no LED's are illuminated.
 

NOTE: **THE COLOR PATTERNS AND RHYTHMS MAY BE USED TOGETHER OR INDIVIDUALLY.**
11. When finished using the Mood Wave, turn the unit off by pressing the OFF button (Fig 3). This will turn off both the color patterns and the rhythms.

**Maintenance**

**To Store**

You may leave the unit on display, or you can store it in its box or a cool, dry place.

**To Clean**

Wipe off dust with a damp cloth. NEVER use liquids or abrasive cleansers to clean.

Figure 2



Figure 1

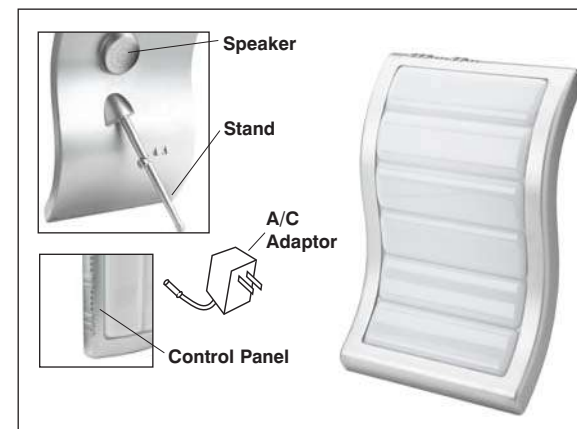 


Figure 3

