

INSIGNIA™

10" Portable DVD Player

NS-P10DVD20



Before using your new product, please read these instructions to prevent any damage.

Contents

Introduction	3
IMPORTANT SAFEGUARDS	3
WARNINGS.....	3
Safety precautions	4
Features	5
Package contents	5
About discs	5
DVD Player.....	6
Remote control	8
Setting up your DVD player	10
Preparing the remote control.....	10
Charging your player.....	10
Connecting headphones.....	12
Connecting to a TV or monitor.....	12
Using your DVD player.....	13
Turning your player on	13
Playing a DVD/VCD or Audio CD	13
Controlling DVD/VCD or Audio CD playback	13
Selecting a chapter or track.....	13
Viewing photos	14
Setting up a playback program	14
Using zoom mode	14
Using the menus	15
Adjusting general setup options.....	15
Selecting the audio mode	16
Adjusting video options.....	16
Setting video and audio preferences.....	17
Using parental controls.....	18
Turning parental controls on or off.....	18
Setting up or changing a parental control password.....	19
Maintaining your player	20
Cleaning your player	20
Cleaning discs	20
Troubleshooting	21
Specifications	22
Legal notices.....	22
ONE-YEAR LIMITED WARRANTY	23

Introduction

Congratulations on your purchase of a high-quality Insignia product. Your NS-P10DVD20 represents the state of the art in DVD player design and is designed for reliable and trouble-free performance.

IMPORTANT SAFEGUARDS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use your DVD player near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The openings should never be blocked by placing your DVD player on a cushion, sofa, or other similar surface.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 The AC adapter and vehicle charger are the disconnecting devices. The plugs must remain readily operable.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, outlets, and the point where they exit from your DVD player.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Do not place your DVD player on an unstable cart, stand, tripod, bracket, or table. It may fall, resulting in possible damage or injury.
- 13 Never place heavy or sharp objects on the LCD panel or frame.
- 14 Unplug your DVD player during lightning storms or when unused for long periods of time.
- 15 Refer all servicing to qualified service personnel. Servicing is required when your DVD player has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into your player, your player has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 16 Remote control batteries should not be exposed to excessive heat such as sunshine, fire, or the like.
- 17 Your DVD player should not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, should be placed on your player.
- 18 **WARNING:** Excessive sound pressure from earphones or headphones can cause hearing loss.



WARNINGS

Electric shock hazard

To reduce the risk of fire or electric shock, do not remove the cover or back. Do not expose your DVD player to rain or moisture. There are no user-serviceable parts inside. Refer servicing to qualified service technicians.

Handling the LCD panel

- Never place heavy or sharp objects on the LCD panel or frame.
- Your DVD player's screen is made of glass. Do not drop your player or hit, jolt, or press hard against the LCD panel. If the screen breaks, be careful of broken glass.
- If the LCD panel is broken, make absolutely sure that you do not touch the liquid in the panel. This may cause skin inflammation.
- If the liquid gets in your mouth, immediately gargle, rinse, and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer in clean water.

Replacement parts

When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

Safety check

After completing any service or repair to your DVD player, ask the service technician to perform routine safety checks to determine that your player is in correct operating condition.

Servicing

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

End of life directives

Your DVD player may contain materials that are regulated for environmental reasons. Your player also contains materials that can be recycled and reused. To help protect the environment, contact your local authorities for information about disposal or recycling and about finding a recycler in your area before you dispose of your player.

SAVE THESE INSTRUCTIONS

Safety precautions

WARNING: Your DVD player uses a low-level laser system. Use of controls, adjustments, or performance of procedures other than those specified in this *User Guide* may result in hazardous radiation exposure.

WARNING: To prevent direct exposure to the laser beam, do not open the enclosure. Visible laser radiation is present when open.

WARNING: Never stare directly into the laser beam.

WARNING: Class 1 laser product.

CAUTION: Do not install your player in a confined space such as a book case or similar unit.

WARNING: Chemical Burn Hazard. Do not ingest the battery.

- The remote control supplied with your DVD player contains a coin/button cell battery. If the battery is swallowed, it can cause severe internal burns in just two hours and can lead to death.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using your DVD player and keep it away from children.


Features

- 10-inch LCD screen
- Headphone jack for private listening
- Connect to a larger screen with an RCA cable (not included) to 3.5 mm adapter (included)
- Powered through your vehicle charger or a wall outlet
- Works with DVDs, VCDs, DVD+R/RWs, CDs, JPEGs, and MP3s

Package contents

- 10" Portable DVD Player
- Remote control
- AC adapter
- 12 Volt DC vehicle power adapter
- 3.5 mm to RCA cable adapter


About discs

- Your DVD player can play DVDs, VCDs, and Audio CDs (including CD-R and CD-RW).
- Your player is designed and manufactured to respond to the Region Management Information that is encoded on DVDs. If the region number printed on the DVD does not correspond to the region number of your player, it cannot play that disc. The region number of your player is 1.
- If the DVD is a region 1 disc, it may have the  logo on the packaging.
- Do not use irregularly shaped discs, such as heart-shaped or star-shaped discs, because they may cause your player to malfunction.
- Do not stick paper, tape, or glue on a disc.
- Do not expose a disc to direct sunlight or heat sources.
- Do not touch the surface of a disc. Handle a disc by its edge.
- Clean a disc by wiping the disc from the center out with a cleaning cloth.
- Remove a disc from your player and store it in its case after playing.

Some playback operations may be intentionally limited by software producers. Because your player plays discs according to the disc contents the software producers designed, some playback features may not be available. Refer to the instructions supplied with the discs.

DVD Player


Top

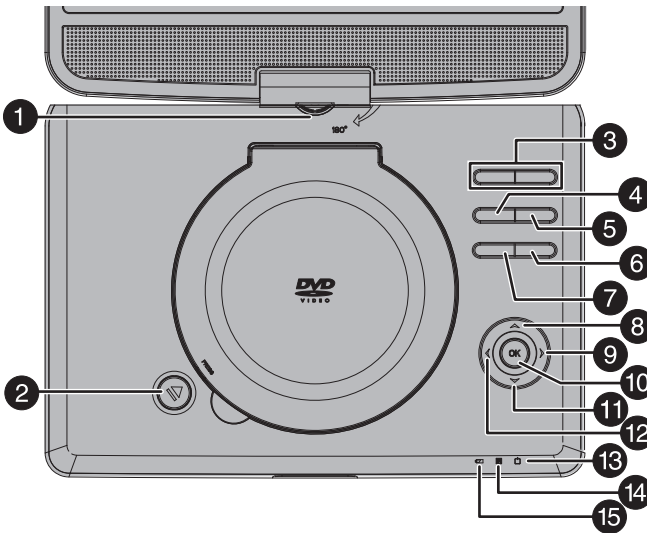

#	BUTTON	DESCRIPTION
1	Screen swivel	You can swivel the screen up to 180° clockwise
2	▲ (open)	Press to open the DVD compartment.
3	VOL-/VOL+	Press to decrease (-) or increase (+) the volume. Press and hold to quickly decrease or increase the volume.
4	PLAY/PAUSE	Press to pause a DVD. Press again to resume playback.
5	STOP	Press to stop playback.
6	MENU	Press to return to the DVD root menu (DVD) or PBC menu on/off switch (VCD)
7	SETUP	Press to access or exit the <i>SETUP</i> menu.
8	▲ Up/Prev	In Menu mode, press to move up in a list or menu. In playback mode, press to go to the previous title, chapter, or track.
9	▶ Right/Fast forward	In Menu mode, press to move right. In playback mode, press to fast forward the playback.
10	OK	In menu mode, press to confirm a selection. In playback mode, press to confirm a selection.


#	BUTTON	DESCRIPTION
11	▼ Down/Next	In Menu mode, press to move down in a list or menu. In playback mode, press to go to the next title, chapter, or track.
12	◀ Left/Fast reverse	In Menu mode, press to move left. In playback mode, press to fast reverse the playback.
13	Power indicator	Red light - power on Light off - power off
14	Remote control sensor	Point the remote control at this sensor.
15	Charging indicator	Blinks green when the unit is charging. Lights solid green when the unit is charged.

Side

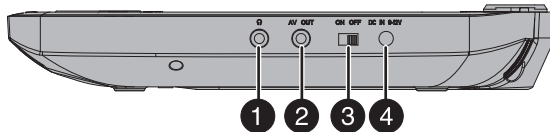

#	ITEM	DESCRIPTION
1	🎧 Headphone jack	Plug your headphones into this jack.
2	AV OUT jack	Plug a 3.5 mm to RCA cable adapter into this jack to view playback on a TV or monitor.
3	ON/OFF switch	Slide to turn your player on or off.
4	DC IN 9-12V jack	Plug the AC adapter or 12 V car adapter into this jack.

Remote control

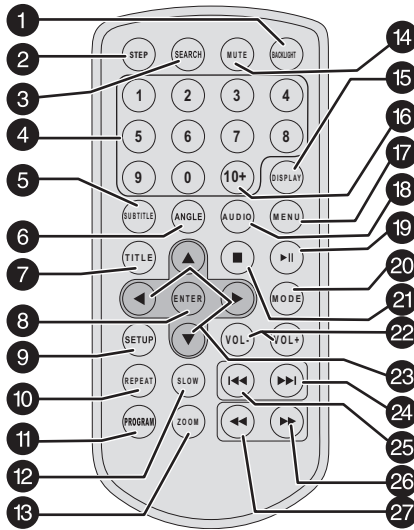

#	BUTTON	DESCRIPTION
1	BACKLIGHT	Press to turn on the remote control backlight. Press again to turn it off.
2	STEP	Pauses playback and advances the DVD/VCD picture one frame at a time.
3	SEARCH	DVD/VCD: Goes to a specific time, title, or chapter/track. Audio CD: Goes to a specific track. See Selecting a chapter or track on page 13.
4	Numbers	Playback mode: Selects a title, chapter, or track number. Menus: Selects a numbered menu item.
5	SUBTITLE	During DVD playback, selects a subtitle language, if available on the DVD.
6	ANGLE	During DVD playback, selects a viewing angle, if available on the DVD.
7	TITLE	Returns to the title menu on a DVD.
8	ENTER	Confirms selections.
9	SETUP	Opens or closes the menu.
10	REPEAT	During playback, selects the repeat mode. DVD: You can select CHAPTER , TITLE , ALL , or OFF . Audio CD/VCD: You can select TRACK , ALL , or OFF .


#	BUTTON	DESCRIPTION
11	PROGRAM	Opens the <i>PROGRAM</i> menu, where you can specify the playback order of titles, chapters, or tracks. See Setting up a playback program on page 14.
12	SLOW	Enters slow playback. Each time you press this button, the speed changes (1/2 to 1/4 to 1/8 to 1/16 to normal playback).
13	ZOOM	When playing a DVD/VCD or viewing a JPEG, enlarges or shrinks the picture. See Using zoom mode on page 14.
14	MUTE	Turns off the sound. Press this button again to unmute the sound.
15	DISPLAY	DVD: Displays the DVD playtime and status information. Audio CD/VCD: Displays the elapsed and remaining time for the playing track and for the entire CD/VCD.
16	10+	Selects a double-digit chapter or track number. For example, to select 12, press this button, then press the 2 button.
17	MENU	Press to return to the DVD root menu (DVD) or PBC menu on/off switch (VCD).
18	AUDIO	DVD: Selects a different audio language or audio track, if available. Audio CD/VCD: Selects an audio channel (Left, Right, Mix, or Stereo).
19	▶▶ (play/pause)	Starts or pauses playback.
20	MODE	Opens the <i>VIDEO SETUP PAGE</i> where you can adjust picture settings. See Adjusting video options on page 16.
21	■ (stop)	Stops playback. If you press this button once, then press ▶▶, playback resumes where it stopped. If you press this button twice, then press ▶▶, playback begins at the beginning of the disc.
22	VOL-/VOL+	Increases or decreases the volume.
23	▲ ▼ ◀ ▶	Navigates in menus.
24	▶▶ (skip forward)	Goes to the next chapter or track.
25	◀◀ (skip reverse)	Goes to the previous chapter or track.
26	▶▶ (forward)	Press to fast-forward on a disc. Each time you press this button, the speed changes (2x to 4x to 8x to 16x to 32x to normal playback). You can also press ▶▶ to exit fast-forward mode.
27	◀◀ (reverse)	Press to fast-reverse on a disc. Each time you press this button, the speed changes (2x to 4x to 8x to 16x to 32x to normal playback). You can also press ▶▶ to exit fast-reverse mode.

Setting up your DVD player

Preparing the remote control

The battery comes pre-installed in the remote control. Before you can use the remote control:

- Pull the plastic tab out of the battery compartment.

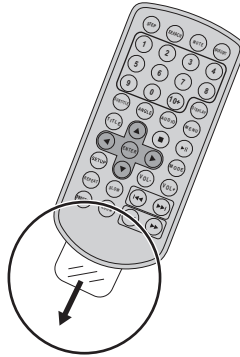

Charging your player

Your player has a built-in, rechargeable (lithium-polymer) battery. You must charge the battery before using your player for the first time.

During playback, when “LOW BATTERY” appears on the screen, your player automatically switches to standby mode. When this happens, your player should be connected to a power source to recharge the battery.

WARNINGS:

- Mishandling or mistreating the built-in battery in your player may present a risk of fire or chemical burn.
- Do not disassemble, heat above 100° C (212° F), or incinerate the battery.

CAUTIONS:

- When the AC adapter is plugged into a power outlet, your player is not completely disconnected from power, even when the power is turned off.
- Make sure that the AC adapter is easily accessible during use.
- Your player should not be exposed to excessive heat, such as direct sunlight, fire, or heat outlets.
- While using the built-in battery, the environmental temperature should be between 41° F (5° C) and 95° F (35° C).

Important:

- To get the longest service life from the built-in battery, charge it indoors.
- Do not use the included AC adapter with any other equipment.
- When you do not plan to use your player for an extended period of time, unplug the AC adapter from the wall outlet.
- When discarding the unit, environmental issues must be considered and local rules or laws governing the disposal of such products must be strictly followed.

Charging the battery with the AC power adapter

- 1 Plug the included AC adapter into the **DC IN 9-12 V** jack on your player, then into an AC power outlet. The battery charging indicator blinks green.

Notes:

- When the power switch is OFF while charging, the built-in battery is in fast-charge mode. In fast-charge mode, your player takes about three hours to fully charge.
- When the power switch is ON while charging, the built-in battery is in slow-charge mode. In slow-charge mode, your player takes about six hours to fully charge. You can use your player while it charges.




- 2 The battery charging indicator turns solid green when the battery is fully charged. Unplug the AC power adapter to use your player with the built-in battery.

Charging the battery with the 12 V DC vehicle power adapter

- 1 Plug the included 12 V DC vehicle power adapter into the **DC IN 9-12 V** jack on your player and then into a 12 V power outlet or vehicle cigarette lighter socket. The battery charging indicator blinks green.

Notes:


- When the power switch is OFF while charging, the built-in battery is in fast-charge mode. In fast-charge mode, your player takes about three hours to fully charge.
- When the power switch is ON while charging, the built-in battery is in slow-charge mode. In slow-charge mode, your player takes about six hours to fully charge. You can use your player while it charges in this mode.

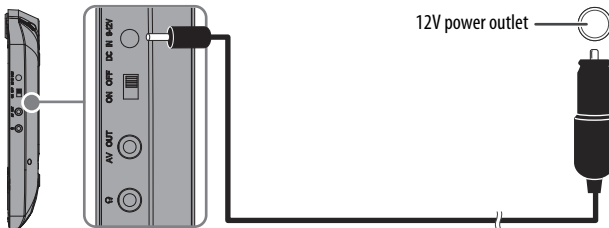


- 2 The battery charging indicator turns solid green when the battery is fully charged. Unplug the 12 V DC vehicle power adapter to use your player with the built-in battery.

Connecting headphones

When headphones are plugged into the headphone jack, sound from the built-in speakers is muted.


- Plug your headphones (not included) into the  (headphone) jack on the side of your DVD player.

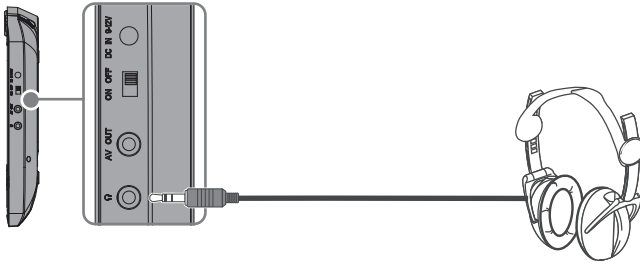

Connecting to a TV or monitor

You can connect your player to a TV or monitor so you can watch DVDs or view photos on the TV or monitor.

- 1 Plug the 3.5 mm to RCA cable adapter (included) into the **AV OUT** jack on your DVD player.

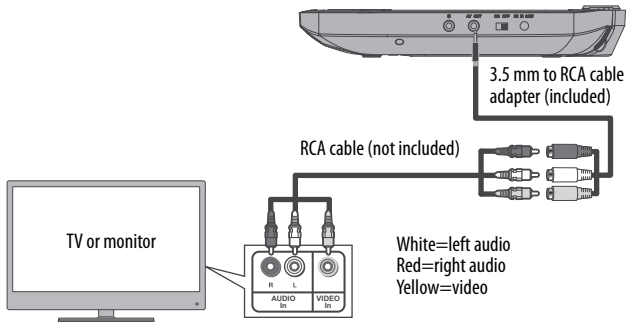

- 2 Plug an RCA cable (not included) into the other end of the 3.5 mm to RCA cable adapter. Make sure that the colors on the connectors match.
- 3 Plug the other end of the RCA cable into the AV jacks on the TV or monitor, making sure to match the colors on the connectors with the jacks.
- 4 Turn on the TV or monitor.

Note: You may need to select the correct input on the TV or monitor.

Using your DVD player

Turning your player on

- 1 Slide the **ON/OFF** switch on the side of your player to the **ON** position.
- 2 After use, slide the **ON/OFF** switch to the **OFF** position.

Playing a DVD/VCD or Audio CD

Notes:

- Most DVDs and your player have region codes that help control illegal distribution of DVDs. The region code for your player is 1. You can only play DVDs with a region code of 1 or ALL. The region code for a DVD is usually printed on the DVD or the DVD packaging.
- This *User Guide* explains the basic instructions for operating your player. Depending on how a DVD is produced, the DVD may have specific or limited playback features and may not respond to all your commands. THIS IS NOT A DEFECT. Refer to the instructions accompanying a specific DVD for more information about the options available on that DVD.

- 1 Make sure that your player is connected to power or the battery is charged.
- 2 Slide the **ON/OFF** switch to the **ON** position.
- 3 Press the **▲** (open) button. The disc tray opens.
- 4 Place a disc, label side up, in the disc tray, then close the tray. The disc starts playing automatically.
- 5 Use the player navigation controls and buttons on the DVD player to control playback.

Controlling DVD/VCD or Audio CD playback

- Press **■** (stop) to stop playback. If you press this button once, then press **▶||**, playback resumes playing where it stopped. If you press this button twice, then press **▶||**, playback begins at the beginning of the disc.
- Press **▶||** (play/pause) to pause playback. Press this button again to resume playback.
- Press **▶|** (skip forward) or **◀|** (skip back) to go to the next or previous chapter or track.
- Press **▶▶** (forward) or **◀◀** (reverse) to fast-forward or fast-reverse on a disc. Each time you press this button, the speed changes (2x to 4x to 8x to 16x to 32x to normal playback). You can also press **▶||** to exit fast-forward mode.

Selecting a chapter or track

You can select a DVD title or chapter or an audio CD/VCD track that you want to play.

- 1 Press **SEARCH**, then press **◀** or **▶** to select an option. You can select:
 - **For DVDs:**
 - **TIME**—Goes to a selected time.
 - **CHAPTER**—Goes to a selected chapter.
 - **TITLE**—Goes to a selected title.
 - **For Audio CDs/VCDs:**
 - **DISC GOTO**—Goes to a selected time on a disc.
 - **TRACK GOTO**—Goes to a selected time within a track.
 - **SELECT TRACK**—Goes to a selected track.

- 2 Use your remote control to enter a time, chapter, title, or track number. The list closes and your player goes to the time, chapter, title, or track you selected.

Viewing photos

You can view photos copied as JPEG files to a CD or DVD on your DVD player.

- 1 Insert the CD containing the photos into the disc tray. Your DVD player reads the CD and displays a list of the photos on the CD.
- 2 Press ▲ or ▼ to select a photo, then press **ENTER**. The photo you selected is displayed first, then your player displays the other photos in a slideshow.
- 3 To control playback:
 - Press ►► (skip forward) or ◀◀ (skip back) to select a photo.
 - Press ◀ or ► to rotate the photo.
 - Press ▲ to flip the photo horizontally or ▼ to flip the photo vertically.

Setting up a playback program

You can set up a playback program to play DVD titles or chapters or Audio CD tracks in a specific order.

- 1 Press **PROGRAM**. The *PROGRAM* menu opens.
- 2 Use the number keys to enter title, chapter, or track numbers in the order you want them to play.
- 3 Select the **START** option. The titles, chapters, or tracks play in the order you specified.
- 4 To resume normal playback, press **PROGRAM**, then select the **STOP**.
- 5 Press **PROGRAM** again to close the *PROGRAM* menu.

Using zoom mode

You can enlarge or shrink the picture displayed on the screen.

- For a DVD/VCD, press **ZOOM** during playback or still playback to activate the Zoom function. A square frame appears briefly in the right bottom of the picture.


Each press of the **ZOOM** button changes the picture size in the following sequence: 2x to 3x to 4x to 1/2 to 1/3 to 1/4 to normal size.


- For a JPEG, each press of the **ZOOM** button changes the picture size in the following sequence: 100% to 125% to 150% to 200% to 75% to 50%, then back to normal size.

Use ▲ ▼ ◀ or ► to navigate around the picture.

Using the menus

Adjusting general setup options

- 1 Press **SETUP**. The main setup menu opens.
- 2 Use **◀** or **▶** to select the general setup icon . **GENERAL SETUP PAGE** appears on the selection band below the icons.

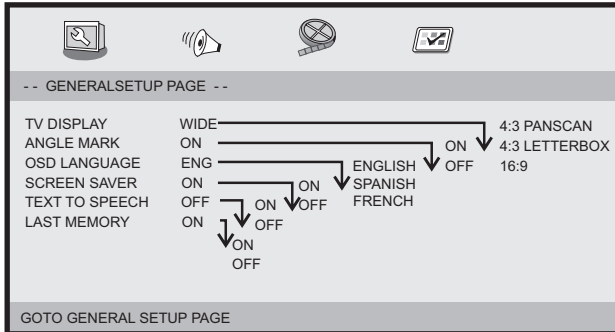

- 3 Press **▲** or **▼** to select an option, then press **ENTER** to select that option. In each sub-menu, press **▲** or **▼** to select an option, then press **ENTER** to select that option. You can select:
 - **TV DISPLAY**—Selects the aspect ratio of the picture. You can select:
 - **4:3 PANSCAN:** When you play wide-screen video, this mode crops the right and left sides of the image so you can view the image on a conventional screen.
Some wide-screen DVDs do not permit playback in PanScan mode, and the video automatically plays in letterbox mode (black bands on the top and bottom of the screen).
 - **4:3 LETTERBOX:** When you play wide-screen video in this mode on a conventional screen, black bands appear on the top and bottom of the screen.
 - **16:9: wide screen display:** Select this option to play wide-screen videos on a wide-screen TV.


Notes:


- The visible picture size is preset on a DVD. Therefore the playback picture of some DVDs may not conform to the picture size you select.
- When you play DVDs recorded in the 4:3 aspect ratio, the playback picture always appears in the 4:3 aspect ratio regardless of the **TV DISPLAY** option setting.

- **ANGLE MARK**—If this option is turned on and the DVD you are watching has multiple viewing angles, an icon appears in scenes that have multiple viewing angles. You can select **ON** or **OFF**.
- **OSD LANGUAGE**—Selects the menu language. You can select **ENGLISH**, **ESPAÑOL**, or **FRANÇAIS**.
- **SCREEN SAVER**—When this option is turned on, your player displays a screen saver when the same image stays on the screen for five minutes. You can select **ON** or **OFF**.

- **TEXT TO SPEECH**—Your DVD player provides audio descriptions of menus and some remote control functions. You can select **ON** or **OFF**.
 - **LAST MEMORY**—When this option is turned on and you open the disc tray, your player remembers where you stopped. If you close the tray with the same disc loaded, your player resumes playing where you stopped. You can select **ON** or **OFF**.
- 4 Use **▲** or **▼** to select a setting, then press **ENTER**.
 - 5 Press **SETUP** to close the menu.


Selecting the audio mode


- 1 Press **SETUP**. The main setup menu opens.
- 2 Use **◀** or **▶** to select the audio setup icon . **AUDIO SETUP PAGE** appears on the selection band below the icons.

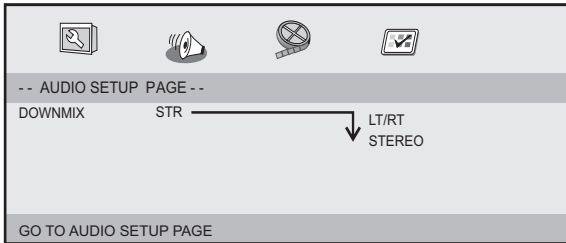

- 3 Press **▲** or **▼** to select **DOWNMIX**, then press **ENTER**.
- 4 Press **▲** or **▼** to select a stereo analog audio mode. You can select:
 - **LT/RT**—Select this option if your DVD Player is connected to external speakers or a sound system with a Dolby Pro Logic decoder.
 - **STEREO**—Select this option when using the two built-in speakers.
- 5 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Adjusting video options


- 1 Press **SETUP**. The main setup menu opens.
- 2 Use **◀** or **▶** to select the video setup icon . **VIDEO SETUP PAGE** appears on the selection band below the icons.

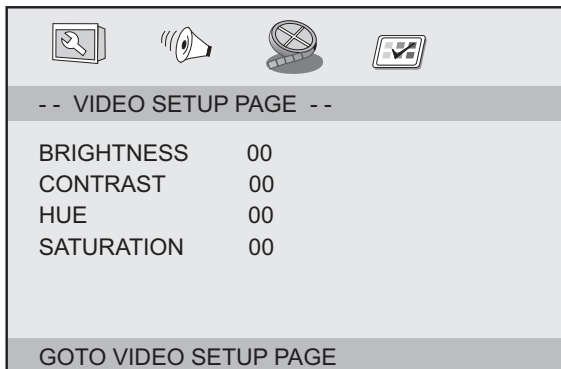


- 3 Press **▲** or **▼** to select an option, then press **◀** or **▶** to adjust the setting. You can select:
 - **BRIGHTNESS**—Increases the brightness to add more light to dark areas of the picture or decreases the brightness to add more dark to light areas of the picture.
 - **CONTRAST**—Increases the contrast level to adjust the white areas of the picture or decreases the contrast level to adjust the black areas of the picture.
 - **HUE**—Increases the color level to add more green to skin tones or decreases the color level to add more purple to skin tones.
 - **SATURATION**—A high saturation level makes vivid colors brighter.
- 4 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Setting video and audio preferences

Note: You can only access the *PREFERENCE PAGE* when there is no disc in the disc tray.

- 1 Press **SETUP**. The main setup menu opens.
- 2 Use **◀** or **▶** to select the preference setup icon . **PREFERENCE SETUP PAGE** appears on the selection band below the icons.

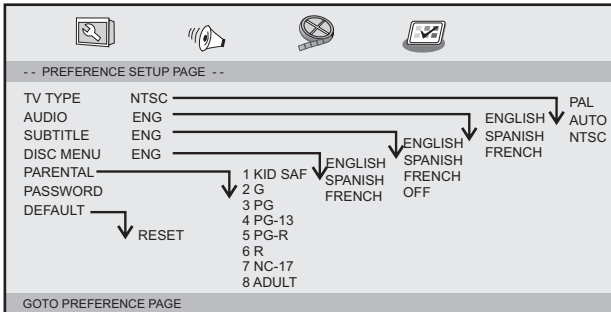

- 3 Press **▲** or **▼** to select an option, then press **ENTER** to select that option. In each sub-menu, press **▲** or **▼** to select an option, then press **ENTER** to select that option. You can select:
 - **TV TYPE**—Selects the color system your TV uses. You can select:
 - **PAL**—Select this option if the connected TV uses the PAL system. Your player changes the video signal from a NTSC disc and outputs the signal in the PAL format. This type of color system is typically used in Europe.
 - **AUTO**—Select this option if you want your player to automatically change the video signal based on the type of disc you are playing.
 - **NTSC**—Select this option if the connected TV uses the NTSC system. Your player changes the video signal from a PAL disc and outputs the signal in the NTSC format. This type of color system is typically used in the U.S.
 - **AUDIO**—Selects the audio language. If the language you select is not recorded on the DVD, your player plays the default audio language. You can select **ENGLISH**, **ESPAÑOL**, or **FRANÇAIS**,


- **SUBTITLE**—Selects a language for subtitles (if subtitles are available on the DVD). If the language you select is not available on the DVD, your player displays subtitles in the default language. You can select **ENGLISH, ESPAÑOL, FRANÇAIS, or OFF**.
 - **DISC MENU**—Selects a language for a disc menu (if multiple languages are available on the DVD). If the language you select is not available on the DVD, your player displays the default language. You can select **ENGLISH, ESPAÑOL, or FRANÇAIS**.
 - **PARENTAL**—Some DVDs may have parental levels assigned to the complete DVD or to certain scenes on the DVD. This feature lets you set a playback limitation level. The rating levels are **1 KID SAF, 2 G, 3 PG, 4 PG-13, 5 PG-R, 6 R, 7 NC-17, and 8 ADULT**. Ratings are country dependent. You can block entire DVDs that are not suitable for your children. Also, some DVDs automatically display alternate scenes based on the rating you select.
 - **PASSWORD**—Lets you create or change a parental control password, or lets you turn the password feature on and off. See [Setting up or changing a parental control password](#) on page 19.
 - **DEFAULT**—Resets all options to the default settings.
- 4 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Using parental controls

Note: The parental control LEVEL is set from the PREFERENCES SETUP PAGE. See [Setting a parental control rating](#) on page 20.

Turning parental controls on or off

- 1 Press **SETUP**. The main setup menu opens.
- 2 Use **◀** or **▶** to select the preferences setup page, then select **PASSWORD**. **PASSWORD SETUP PAGE** appears on the selection band below the icons.

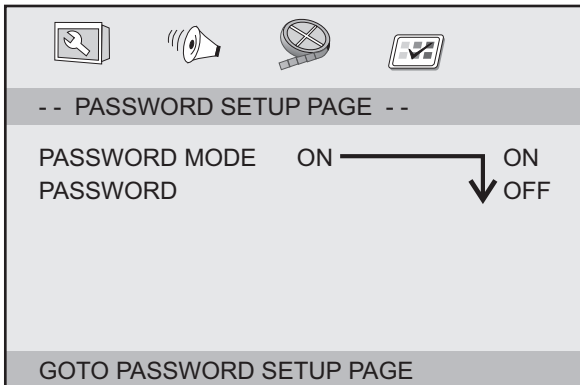

- 3 Press **▲** or **▼** to select **PASSWORD MODE**, then press **▲** or **▼** to select **ON** or **OFF**.


Notes:

- If the **PASSWORD MODE** option is set to **ON**, you must enter the password when you select the **PARENTAL** option to set a rating level.
- If the **PASSWORD MODE** option is set to **OFF**, you do not need to enter the password.
- After you turn on the **PASSWORD MODE** option and set a rating level, you are prompted for your password when watching content with a higher rating.

- 4 Press **ENTER** to save your setting, then press **SETUP** to close the menu.

Setting up or changing a parental control password

- 1 Make sure that the **PASSWORD MODE** option is set to **ON**.
- 2 Press **SETUP**. The main setup menu opens.
- 3 Use **◀** or **▶** to select the preferences setup page. **PASSWORD SETUP PAGE** appears on the selection band below the icons.
- 4 Press **▲** or **▼** to select **PASSWORD**, then press **ENTER**. The password change page opens.

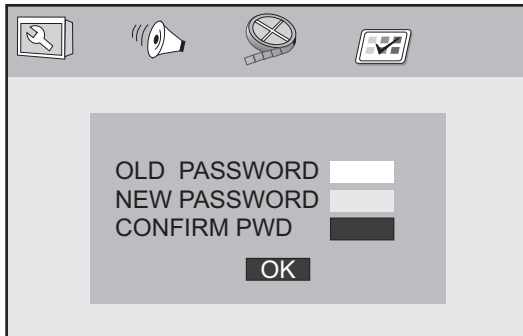


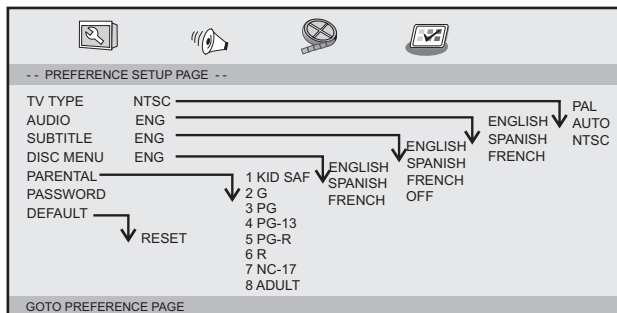
- 5 Use your remote control to enter a four-digit password, then enter the password again.

Note: The master password is **1369**. If you forget your password, you can enter the master password.

- 6 Press **ENTER** to save your password, then press **SETUP** to close the menu.

Setting a parental control rating

- 1 Press **SETUP**. The main setup menu opens.
- 2 Use **◀** or **▶** to select the preference setup icon . **PREFERENCE SETUP PAGE** appears on the selection band below the icons.



- 3 Press **▲** or **▼** to select **PARENTAL**, then press **ENTER**.
- 4 Press **▲** or **▼** to select a parental control rating. You can select **1 KID SAF**, **2 G**, **3 PG**, **4 PG-13**, **5 PGR**, **6 R**, **7 NC17**, or **8 ADULT**.
- 5 Use the remote control to enter your four-digit password.
- 6 Press **ENTER** to save your selection, then press **SETUP** to close the menu.

Maintaining your player


Cleaning your player

Clean the outside of your player with a clean cloth, slightly dampened with water.


CAUTION: Do not use liquid cleaners or aerosol cleaners because they may damage your player.

Cleaning discs

- Before playback, wipe the disc outwards from the center with a clean cloth.

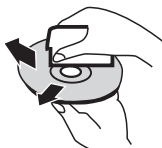

Troubleshooting

PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"> • Make sure that the AC adapter is plugged in and connected. • Make sure that your player is turned on.
No sound or distorted sound	<ul style="list-style-type: none"> • Adjust the volume. • Make sure that all cables are inserted correctly into the appropriate jacks. • Make sure that your player is not paused. • Make sure that your player is not in fast forward or fast reverse mode. • Make sure that your player is not too hot. Let it cool for 30 minutes, then try it again. • Make sure that the headphones are not plugged in.
Cannot fast-forward or fast-reverse through a movie	<ul style="list-style-type: none"> • You cannot fast-forward through opening credits and warning information at the beginning of a movie. • Some DVDs do not allow rapid scanning or skipping of titles or chapters.
The  icon appears on the screen	<p>The action you tried cannot be done because:</p> <ul style="list-style-type: none"> • The DVD software does not allow it. • The DVD does not support the feature (for example the Subtitle feature). • The feature is not available at the current point on the DVD. • You entered a title or chapter number that is out of range.
Picture is distorted	<ul style="list-style-type: none"> • During fast-forwarding or fast-reversing, distortion is normal. • The DVD may be damaged. Try another DVD.
Disc does not play	<ul style="list-style-type: none"> • Make sure that the disc is inserted with the label side up. • Make sure that the disc is compatible with your player. Your player can play DVDs, VCDs, and audio CDs.
The player gets warm while charging	<ul style="list-style-type: none"> • It is normal for the player to get warm while charging. • Make sure that your player is not exposed to excessive heat, such as direct sunlight, fire, or heat outlets. • Make sure that your player is between 41° F (5° C) and 95° F (35° C) while charging.

Specifications

Specifications subject to change without notice.

Compatible discs	DVDs (Region 1 for U.S.), VCDs, Audio CDs, and MP3 discs
Signal system	PAL or NTSC
LCD	10 in (25.4 cm)
Frequency response	20 Hz to 20 kHz
Audio S/N	> 80 dB
Dynamic range	> 85 dB
Laser	Semiconductor
Wave length	650 nm
Power requirements	AC 100-240 V, 50/60 Hz
Operating temperature	32° to 113° F (0° to 45° C)
Weight	1.9 lbs. (.86 kg)
Dimensions (H × W × D)	9.7 × 7.5 × 1.6 in. (246 x 190 x 42 mm)

Legal notices

Macrovision

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

ONE-YEAR LIMITED WARRANTY

Definitions:

The Distributor* of Insignia branded products warrants to you, the original purchaser of this new Insignia-branded product ("Product"), that the Product shall be free of defects in the original manufacturer of the material or workmanship for a period of one (1) year from the date of your purchase of the Product ("Warranty Period").

For this warranty to apply, your Product must be purchased in the United States or Canada from a Best Buy branded retail store or online at www.bestbuy.com or www.bestbuy.ca and is packaged with this warranty statement.

How long does the coverage last?

The Warranty Period lasts for 1 year (365 days) from the date you purchased the Product. Your purchase date is printed on the receipt you received with the Product.

What does this warranty cover?

During the Warranty Period, if the original manufacture of the material or workmanship of the Product is determined to be defective by an authorized Insignia repair center or store personnel, Insignia will (at its sole option): (1) repair the Product with new or rebuilt parts; or (2) replace the Product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Insignia and are not returned to you. If service of Products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your Insignia Product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the Product.

How to obtain warranty service?

If you purchased the Product at a Best Buy retail store location or from a Best Buy online website (www.bestbuy.com or www.bestbuy.ca), please take your original receipt and the Product to any Best Buy store. Make sure that you place the Product in its original packaging or packaging that provides the same amount of protection as the original packaging.

To obtain warranty service, in the United States and Canada call 1-877-467-4289. Call agents may diagnose and correct the issue over the phone.

Where is the warranty valid?

This warranty is valid only in the United States and Canada at Best Buy branded retail stores or websites to the original purchaser of the product in the country where the original purchase was made.

What does the warranty not cover?

This warranty does not cover:

- Customer instruction/education
- Installation
- Set up adjustments
- Cosmetic damage
- Damage due to weather, lightning, and other acts of God, such as power surges
- Accidental damage
- Misuse
- Abuse
- Negligence
- Commercial purposes/use, including but not limited to use in a place of business or in communal areas of a multiple dwelling condominium or apartment complex, or otherwise used in a place of other than a private home.
- Modification of any part of the Product, including the antenna
- Display panel damaged by static (non-moving) images applied for lengthy periods (burn-in).
- Damage due to incorrect operation or maintenance

- Connection to an incorrect voltage or power supply
- Attempted repair by any person not authorized by Insignia to service the Product
- Products sold "as is" or "with all faults"
- Consumables, including but not limited to batteries (i.e. AA, AAA, C etc.)
- Products where the factory applied serial number has been altered or removed
- Loss or Theft of this product or any part of the product
- Display panels containing up to three (3) pixel failures (dots that are dark or incorrectly illuminated) grouped in an area smaller than one tenth (1/10) of the display size or up to five (5) pixel failures throughout the display. (Pixel based displays may contain a limited number of pixels that may not function normally.)
- Failures or Damage caused by any contact including but not limited to liquids, gels or pastes.

REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF WARRANTY. INSIGNIA SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO, LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. INSIGNIA PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Contact Insignia:

1-877-467-4289

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

*Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

INSIGNIA™

www.insigniaproducts.com

1-877-467-4289 (U.S. and Canada) or 01-800-926-3000 (Mexico)

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2019 Best Buy. All rights reserved.

V3 ENGLISH
19-0738