


# Ozeri


## Pronto Digital Kitchen Scale Model #: ZK14

### Instruction Manual

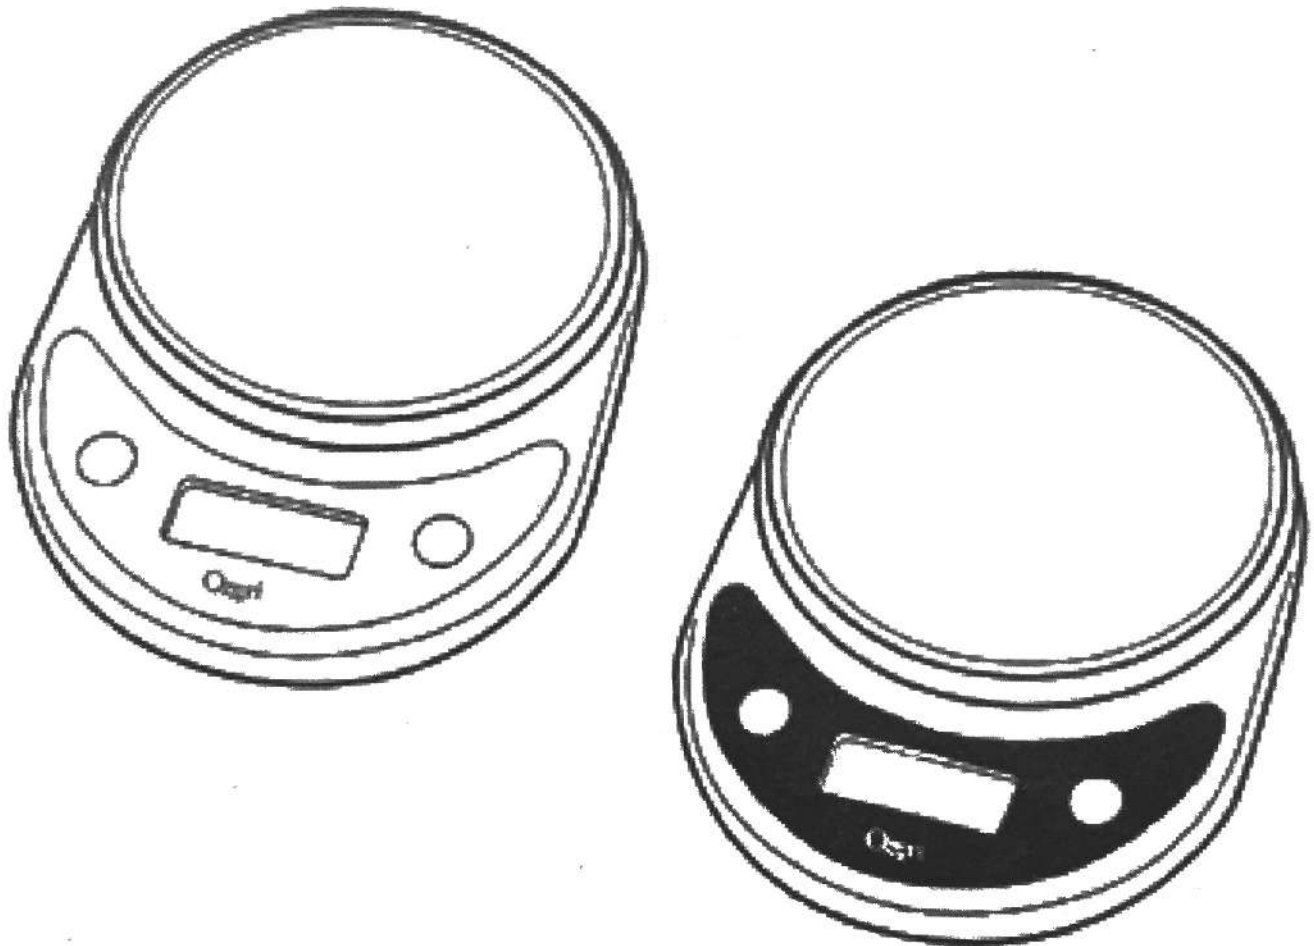

Before operating this scale please read the instruction manual and keep it handy for future reference.

## LCD DISPLAY

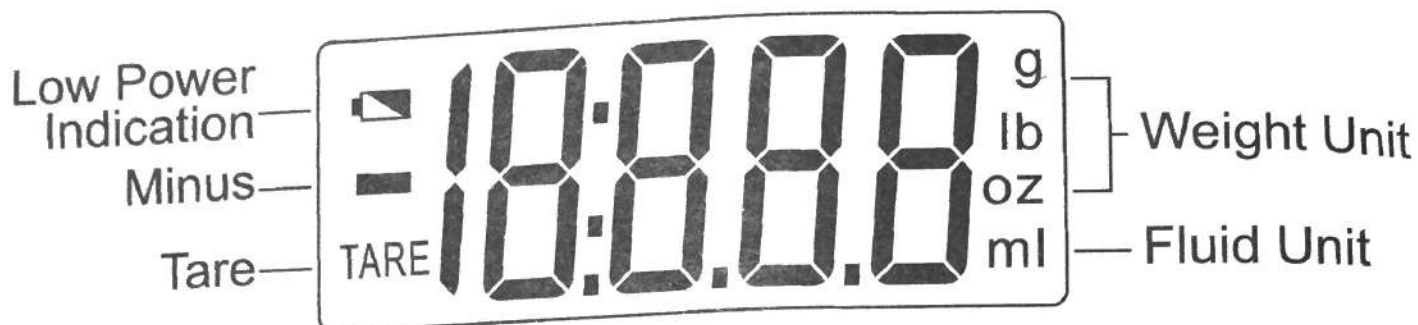

## SPECIFICATIONS

- 1) Capacity: 0.04 oz – 11 lbs (1 g – 5 kg)
- 2) Graduation: 0.04 oz (1g)
- 3) Unit: g / oz / lb / ml
- 3) Power: 2 AAA batteries (included)
- 4) Working temperature: -10C to 50 C
- 5) Working humidity level: < 90% RH

## OPERATING INSTRUCTIONS

### INITIAL SETUP:

Open the battery cover located beneath the scale and place the included AAA batteries into the battery compartment. Ensure that the batteries +/- terminals are correctly oriented.

To turn on the scale, place on a hard even surface and press the On/Off/Tare button located to the right of the LCD screen.

To turn off the scale, first ensure there is nothing on the weighing platform (the LCD should display zero). Then press and hold the On/Off/Tare button.

**Note:** to extend battery life the scale will automatically turn off after 2 minutes of inactivity.

### **WEIGHING MODE:**

Turn the scale on and gently place an item on the center of the weighing platform. The weight will immediately display on the screen. If the object is uneven the scale may fine tune the computed weight during the first 2 or 3 seconds of measurement. Be sure to always gently place objects on the center of the scale's weighing platform. Do not leave an object on the scale's weighing platform for an extended period of time.

### **CHANGING THE UNIT OF MEASUREMENT:**

When the scale is powered on, simply press the unit button to change between ounces (oz), pounds (lbs), grams (g), and milliliters (ml).

You can also change the unit of measurement while an object is on the scale. The scale will remember the unit of measurement you last selected each time it is turned on.

**Note:** The milliliter measurement is an approximation of fluid measure and assumes that you are measuring a liquid such as water or oil, and not a powder or thick emulsion.

### **USING THE TARE FEATURE:**

Use the tare feature to automatically subtract the weight of a bowl or plate, and determine the net weight of the ingredients being weighed. To use the Tare feature:

- 1) First place the empty bowl, plate or container onto the scale's weighing platform. The scale will display a weight on the LCD.
- 2) With the empty bowl or container remaining on the scale, Press the Tare button once to reset the scale to zero.

- 3) Place the ingredients you would like measured into the bowl, plate or container, and the net weight will then display on the LCD. After removing the container from the weighing platform, the scale will display a negative number. Simply press the On/Off/Tare button to reset it and deactivate the Tare feature.

## IMPORTANT INDICATORS

“LO” - When the LCD displays “LO” and automatically powers off the batteries need to be changed.

Only use new AAA batteries. Do not mix old and new batteries. Do not mix rechargeable and non-rechargeable batteries.

“Err” - When the weight detected exceeds 11 lbs or 5 kg, the LCD will display “Err”. Remove the object from the scale’s weighing platform to avoid damage to the scale’s sensors.

“Unst” - If the scale displays “Unst” on its LCD, the object being weighed may have shifted. Remove the object from the weighing platform and allow a few seconds for the scale to reset. Then ensure the object being weighed is stationary before gently replacing it on the scale.

“out2” - If the scale displays “out2” on the LCD, the scale was not able to successfully reset itself. Remove all objects from the scale, and turn it off and back on. If the problem persists, briefly remove the batteries from the scale to force a hard reset.

## WARNING MAINTINANCE

- 1) To clean the scale, use only a damp cloth. Do not soak or submerge the scale in water or any other liquids. This scale is not waterproof. Do not expose the scale to moisture as this will cause damage to the scale and void the warranty.

- 2) Always ensure the scale is stored and operated at room temperature and on a stable flat surface.
- 3) Gently place all items on the scale's weighing platform. Never drop an item on the scale, or leave an object on the scale's weighing platform for an extended period of time.
- 4) Avoid placing the scale near cell phones or other devices that can cause electromagnetic interference. This can cause the scale to malfunction.
- 5) Store the scale in a clean dry location. Dust, dirt and moisture from humidity can accumulate on the weighing sensors and electronics, causing inaccuracy or malfunction.
- 6) Remove the batteries if the scale will not be used for an extended period of time.
- 7) Do not operate or store the scale in extreme temperatures.
- 8) This product is not a toy and should be kept away from children.
- 9) Do not attempt to operate this scale if it is dropped or damaged in any manner.
- 10) This scale is intended for indoor use only.
- 11) Do not attempt to disassemble this scale. Doing so will void the warranty.
- 12) This product is battery operated. Improper use of this product may cause the batteries to leak or explode, which may cause personal injury. If contact is made with a leaking battery, immediately flush the local poison control center or seek medical attention.

## WARRANTY INFORMATION

Your "Ozeri Scale" is warranted to the original owner for 1 year from the date of purchase against defects in material and workmanship under normal use and service. Should your scale prove defective within 1 year from the date of purchase, return the defective part or unit, freight prepaid along with an explanation of the claim to "Ozeri Scale". Please pack your scale carefully to avoid damages in transit. Under this warranty, Ozeri will repair or replace any parts found to be defective due to a manufacturer's defect. This warranty extends only to personal use and does not extend to any product that has been used for commercial use, rental use, or use which is not intended. There are no warranties other than that expressly set forth herein. This warranty is not transferable. Ozeri is not responsible in any way for damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use not in accordance with the "User Guide" or any additional safety, use, or warnings included in the product materials. Further, Ozeri is not liable for incidental or consequential damages of any nature resulting from the purchase price of the product. This Warranty gives you specific legal rights. You may also have other rights which vary from state to state.

**THIS WARRANTY DOES NOT APPLY TO  
THE FOLLOWING:**

- Damage due to accident, misuse, abuse, alterations or vandalism.
- Improper or inadequate maintenance.
- Unauthorized modification or commercial use.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Ozeri Scale Customer Service:

Phone: 1-877-299-1296

Email: [support@ozeri.com](mailto:support@ozeri.com)

(Ozeri™ and its subsidiaries no liability for damage caused by the use of the Ozeri Scale other than for its intended use or as instructed above and in the User Manual.)