



Bird-X Handheld Fat Laser Operating Instructions



USAGE INSTRUCTIONS

1. Before use, remove the red trigger guard (1) and store it for future shipping or storage. The trigger guard prevents unintended laser activation when not in use.
2. When aiming the laser, direct it at the ground near the birds or focus it on the body of a prominent bird within the flock.
3. As the laser beam reflects off the ground or nearby objects, the birds will recognize the laser as an approaching threat and raise an alarm. Laser “harassment” will prompt the flock to disperse and take flight, ensuring their safety.

BATTERY REPLACEMENT INSTRUCTIONS

1. To safely replace the batteries, pivot open the battery door (2).
2. Insert four (4) AAA batteries into the compartment, ensuring correct polarity (+/-) alignment.
3. Always replace all four batteries simultaneously to maintain optimal performance and prevent potential issues.
4. Close the battery door securely to prevent accidental dislodging during use.

WARNINGS

- Avoid Eye Exposure: Never look directly at the laser beam or point the laser at anyone’s eyes.
- Avoid Aircraft Hazards: Do not point the laser into the sky, especially if airplanes are in the vicinity. Interfering with aircraft can lead to severe legal consequences.
- Battery Precaution: For extended periods of inactivity (greater than 1 month), it is recommended to remove the batteries from the device. This helps prevent unintentional activation and ensures safety when not in use.