



eufy
PET

QUICK START GUIDE

Automatic Dog Paw Cleaner

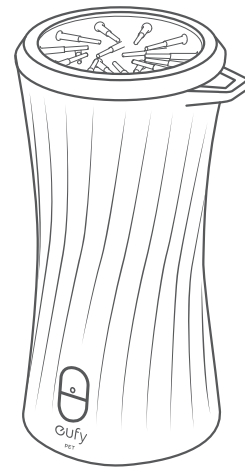

1 / OVERVIEW

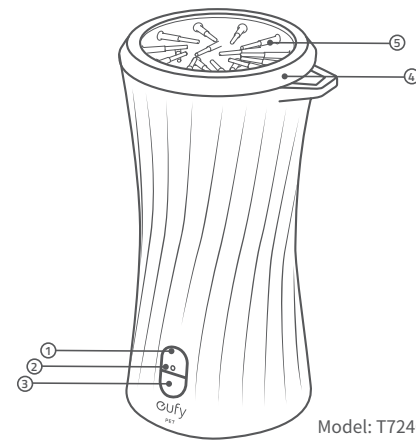


- ① Power Button
- ② Status LED
- ③ Charging Port
- ④ Container
- ⑤ Silicone Bristles

Model: T7240


1

2 / CHARGING

Fully charge the cleaner before first use.

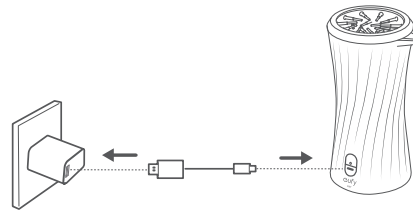

Status LED	Description
Red	Charging
Green	Fully Charged
Flashing Red	Low Battery

 Do not use the cleaner while charging.

2


3 / WASHING PAWS

1. Add a little water.



2. Press the Power button.




 When the cleaner is powered on, do not twist the container in the opposite direction.

3

3. Insert the paw to wash it.



 The status LED will turn blue if the silicone bristles get stuck by the paw. In this case, take the paw out of the container, then insert it again.

4. After washing, press the Power button to stop.


4

4 / CLEANING

1. Take out the container, then pull the silicone bristles out of the container.



2. Clean the container and silicone bristles.

 Dry the outside of the container before putting it back.



6



Anker Innovations Limited. All rights reserved. eufy Pet and eufy Pet Logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. All other trademarks are the property of their respective owners.

51005003241 v1

5 / DESENSITIZATION

How to get your dog used to the cleaner?

1. Show each individual part of the cleaner to your dog, and encourage your dog to slowly approach them. Give your dog snacks each time it gets closer until your dog touches the cleaner.
2. Assemble the cleaner in front of your dog, and encourage your dog to approach the cleaner. Give your dog snacks each time it gets closer until your dog actively touches the cleaner.
3. Put your dog's paw into the cleaner that is powered off, then slowly rotate the cleaner with your hand. At the beginning, give your dog snacks once the paw is put into the cleaner, then give snacks after the paw stays in the cleaner for a while. Gradually extend the duration.
4. Power on the cleaner. Help your dog feel relaxed and distract it with snacks. Encourage your dog to approach the cleaner. Give your dog snacks each time it gets closer until your dog actively touches the cleaner.
5. Keep the cleaner powered on and slowly put your dog's paw into the cleaner. At the beginning, give your dog snacks once the paw is put into the cleaner, then give snacks after the paw stays in the cleaner for a while. Gradually extend the duration.

8

6 / NOTICE

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
4. This appliance contains one non-replaceable rechargeable lithium ion battery.
5. For used battery, dispose it according to local regulation.
6. For leaking battery, don't use it anymore and dispose it according to local regulation.
7. Do not expose the appliance or battery to excessive temperatures.
8. Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
9. This appliance contains battery that is non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.

9

10. Normal temperature range for charging the battery is 0°C ~ 40°C.
11. The suitable operating temperature range is 0°C ~ 40°C.

Notice (United States Of America)

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

10

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

The following importer is the responsible party
Company Name: POWER MOBILE LIFE, LLC
Address: 10900 NE 8th St, Ste 501, Bellevue WA 98004
Telephone:1-800-988-7973

11

CUSTOMER SERVICE

Warranty

12-month limited warranty

Call Us

United States	+1 (800) 988 7973	Mon-Fri 6:15-17:00(PT) Sat-Sun 6:30-16:30(PT)
United Kingdom	+44 (0) 1604 936 200	Mon-Fri 6:00-17:00 Sat-Sun 6:00-14:00
Germany	+49 (0) 69 9579 7960	Mon-Fri 8:00-16:00

Email Us

Customer Support: support@eufylife.com

Anker Innovations Limited
Room 1318-19, Hollywood Plaza, 610 Nathan Road,
Mongkok, Kowloon, Hong Kong

@EufyOfficial @EufyOfficial

@EufyOfficial

12