


Angelcare[®]
FOR YOUR PEACE OF MIND

Congratulations!


With Angelcare, you're not alone in
this new adventure of parenthood

Quick Start Guide

Models: AC417, AC510, AC517

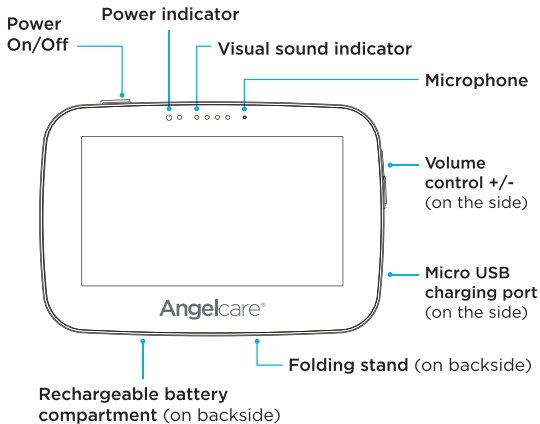

Parent unit

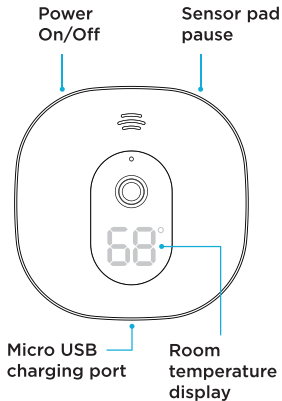

Camera

Parts & Pieces

* Always place printed side up *



Touchscreen parent unit



AC adapter
(for parent unit)


Lithium ion battery pack
(for parent unit)



Wall mount
(for camera)
with hardware



Camera

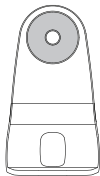

Tabletop stand
(for camera)



AC adapter
(for camera)



Adhesive strips
(for flat micro USB cable)



Wireless movement sensor
(for models AC417, AC517)



Flat micro USB cable
(for camera adapter)



CR3032 battery
(for sensor pad)

Camera Setup

The camera can be hung on a wall or placed on a flat, stable surface. Consider you will need a suitable wall outlet within reach, be mindful the camera and cord should always be more than 3 feet away from children.





WARNING

Strangulation Hazard: Children have been STRANGLED by cords. Keep cords out of the reach of children (more than 3 feet away).

Note:

Each time you power on your camera, the internal thermometer will need to calibrate to ensure accuracy. This automatic process will take approximately 30 minutes. The color changing temperature display, by default, will be turned "off." You may turn this feature "on" in the settings mode on your parent unit.

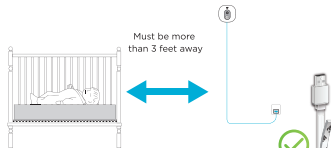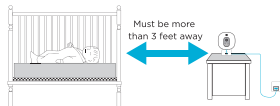

Adhesive strips


Six strips of double-sided adhesive tape have been included for use when wall-mounting the camera. These strips are intended to keep the USB cable neatly in place along the wall from the camera to the AC adapter.

- The two sides of the tape have different strengths so be sure to place the side which is labeled "3M" against the wall.
- It is recommended to test the tape in an obscure location on the wall first to ensure there will not be any damage.





Charging the Parent Unit

- Prior to the first use, we recommend that you charge the parent unit for 8 hours.
- Unlock the battery compartment on the backside and remove the cover. Insert the provided rechargeable battery into the compartment. The contacts of the battery and the compartment must be aligned.
- To turn the parent unit On/Off, press and hold the power button for 2 - 3 seconds.

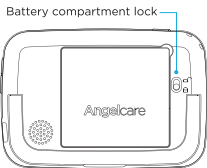

Powering the Camera

Your camera and parent unit come pre-paired, so you should see video within 3 - 4 seconds of turning on the units. The camera connection signal strength icon will appear in the status bar.

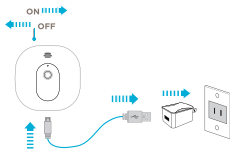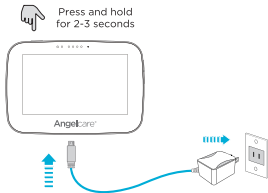

Navigating the Parent Unit

In the top section of your screen you will see a blue bar with all of the necessary information concerning the status of units, alerts, temperature, and your chosen settings.




Models AC417, AC517

Powering the Movement Sensor Pad

When using the sensor pad for the first time, you will need to insert the provided CR3032 battery.

1. Remove the battery cover using a coin. Turn in the direction of the arrow.
2. Place the CR3032 battery into position and replace the battery cover, making sure to lock correctly. The sensor pad is now ON.

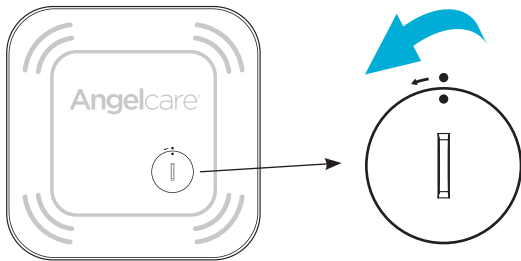

Models AC417, AC517


Positioning the Movement Sensor Pad

1. Position the sensor pad, **printed side up**, under the mattress in center of the crib.
2. Ensure your sensor pad is connected by rubbing your hand on the mattress. Verify the wireless sensor pad icon is on the status bar of your parent unit.

Note: To “pause” the alarm refer to the next page.

Note:

- If the bottom of the crib is not a solid, stable surface you will need to place a hard support board (not included) underneath the sensor pad to ensure correct operation of the system.
- Place the sensor pad directly underneath the mattress (and on top of support board, if needed) in the center of the crib. Make sure there is nothing between the mattress and sensor pad to interfere with operation.
- The sensor pad is designed to work with all regulatory standard mattresses. It is not compatible with hollow core mattresses or mattresses containing memory foam that comes in contact with the sensor pad.
- **Never immerse the sensor pad in water or other liquids!**

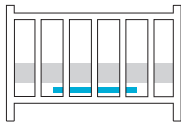

WARNING


Strangulation Hazard: Children have been STRANGLED by cords.

- Because of the serious strangulation risk to infants and toddlers, parents and caregivers should never place the camera within 3 feet (0.9 m) of a crib.

Models AC417, AC517

Adjusting the Sensitivity of the Sensor Pad


- To ensure adequate monitoring of your child's movements, you can adjust the sensitivity of the sensor pad in the main settings menu.
- Set a high sensitivity for a newborn and a lower sensitivity as the child grows and gains weight. A thicker mattress will also need a higher sensitivity.
- Alarm will sound if there is no movement after 20 seconds.

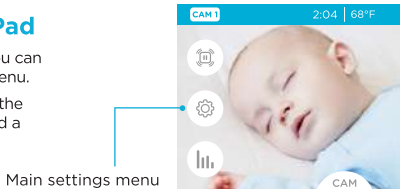

Models AC417, AC517

Pausing/Restarting the Sensor Pad

- If you remove baby from the crib, e.g. for feeding or comforting, remember to pause the sensor pad. That can be done from the parent unit by pressing OK and then navigate to the pause sensor to activate / deactivate or from the camera by pressing the pause button on the top right of the unit.
- **Don't forget to restart** by utilizing the same methods to re-engage the sensor pad.
- If you do not pause the sensor pad, the alarm will sound if there is no movement after 20 seconds.

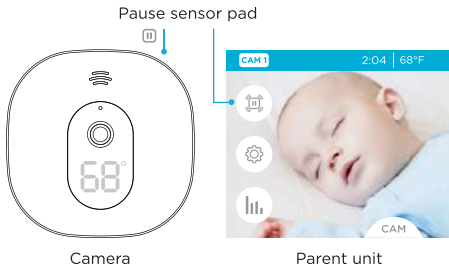


Models AC417, AC517 Movement Monitoring

Angelcare monitors are designed to sense baby's slightest movements and sound an alarm if no movement is detected after 20 seconds. This monitor is also equipped with "Activity Analytics" which track, record and report on baby's bigger movements (like restlessness, rollovers and kicks).



The monitor records data every ten seconds, and if one or more "big movements" is detected, the system records your baby as being "active" during that time period. Three times every hour, the system compiles the collected data and a "movement activity report" can be viewed on the parent unit.

Activity analytics and room temperature tracking give you insight into your little one's activity level during sleep, helping you to better adapt routines and respond to their needs.

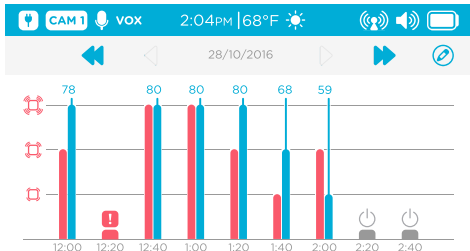

Additional Information



Product Registration

Registering your Angelcare monitor allows us to send you important product and safety updates.

To register your product online, please visit: www.angelcarebaby.com/product-registration

Customer Support

To obtain a full user guide, please visit: www.angelcarebaby.com/customer-support/manuals

For additional customer support, please contact us at: Email: angelcare@cdecinc.ca Phone: **1-877-281-8827**

1 Year Limited Warranty - visit www.angelcarebaby.com, call us at the number above, or write us at the address below for a copy of the complete warranty statement. Please keep this quick start guide for future reference.

Angelcare Monitors Inc., 201 Boulevard de l'Industrie, Local 104, Candiac, Quebec, J5R 6A6 Canada
Designed in Canada. Made in China.

While Angelcare intends to provide peace of mind to our consumers, monitoring of a premature baby or babies considered to be at risk should be carried out only under the supervision of a doctor or health care professional. This product is not intended to diagnose, treat, mitigate, cure or prevent any disease or condition. This monitor should NOT be used to prevent Sudden Infant Death Syndrome (SIDS).

Vibration Source - When the monitor is in use, DO NOT use a crib mobile or other crib accessories that may produce vibration. Other sources of vibration may include fans, washing machines, loud music, etc. These sources of vibration may interfere with the performance of your Angelcare monitor and the alarm will not sound if it continues to detect any movement other than your baby's. Be sure all vibration sources are eliminated before using the monitor.

The Angelcare sensor pad feature is not designed for use with adults, children or infants over 24 months. This product is intended to be used only for parental reassurance to monitor your baby's movements.