

Elgato Systems



# Hardware Reference Guide EyeTV Infrared Remote Control

2.5

© 2005

Elgato Systems LLC  
900 Kearny Street • Suite 750  
San Francisco, CA 94133  
United States of America


Elgato Systems GmbH  
Nymphenburgerstr. 86  
80636 München

[support@elgato.com](mailto:support@elgato.com)

elgato

# Infrared Remote Control

This document describes the functions of the EyeTV infrared remote control, which is included with all EyeTV models except EyeTV USB and EyeTV Wonder USB 2.0.

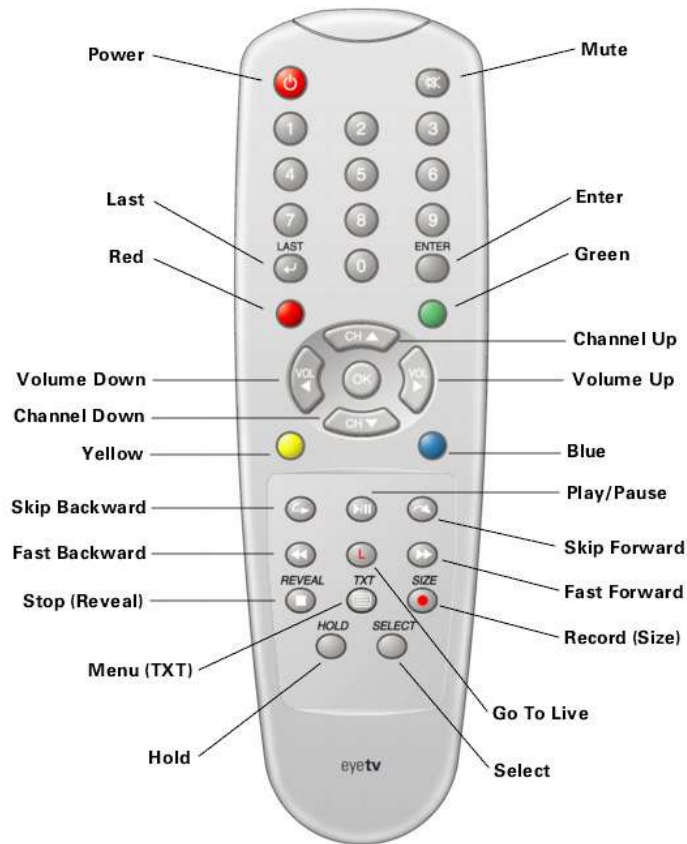

NOTE: Button legends in *ITALICS* are Teletext functions.

## Power

If EyeTV isn't displaying a window, a Live TV window is opened. If there are

windows playing EyeTV content, the front playing window is closed, and the next window is brought to the front. If the frontmost window is an alert dialog, pressing the Power key is like pressing **Cancel** or hitting **Escape**.

### **Mute**

Click this button to mute the sound, click it again to turn it back on.

### **Number keys**

Used to enter channel number.

### **Last**

Switches the live TV window to go to the last channel used. If you're watching a recording, pressing this button jumps playback to the start of the recording. If the front-most window is an alert dialog, pressing the LAST key is like pressing **Cancel** or hitting **Escape**.

### **Enter / OK**

Enters a sequence of numbers. If the front-most window is an alert dialog, pressing the Enter key is like pressing **OK** or hitting **Enter**.

### **Red**

Cycles through open windows backwards.

### **Green**

Cycles through open windows forwards.

### **Yellow**

Opens/closes the EyeTV Programs window, which displays all of the shows that have been or will be recorded.

### **Blue**

Shows/hides the on-screen remote controller.

### **Channel Up/Down**

Switches to the next higher or lower channel.

### **Volume Up/Down**

Increases or decreases the sound volume.

### **Instant Replay**

Playback jumps backwards for the duration specified in the Preferences' Controls pane. The default is 7 seconds.

### **Play/Pause**

Toggles between playing back or pausing video

### **Jump**

Fast-forwards the current program 30 seconds and then continues playing. This is useful for jumping over less desirable content.

### **Fast Backward**

Plays the current program in reverse at high speed.

### **Red 'L'**

Jumps playback to live.

### **Fast Forward**

Plays the current program at high speed.

### **Stop/REVEAL**

Stops playback of the current program. *REVEAL* is a Teletext function.

### **Menu/TXT**

*TXT* is a Teletext function.

### **Record/SIZE**

Starts or stops recording the current program. The default recording duration is three hours. To extend or shorten the recording time, open the currently recording program by selecting it in the EyeTV software's Programs window, clicking the **Show Info** button in the toolbar, and changing the recording's

ending time. Because EyeTV has only one tuner, and can only handle one video source at a time, channels and inputs cannot be changed while recording. Once a recording has started, the cache is flushed so you cannot skip backwards beyond the start time of the recording.

*SIZE* is a Teletext function.

**HOLD**

*HOLD* is a Teletext function. Also toggles full-screen mode.

**SELECT**

*SELECT* is a Teletext function. Also cycles through EyeTV's video inputs.