

# DANKESCHÖN!

Thank you for choosing the Kone Aimo and welcome to the ROCCAT® family. The Kone Aimo is a very special product for us. It comes ten years after the original Kone, our very first peripheral. The Kone broke the mould with its pioneering lighting system and sensor technology, and each of its successors continued to disrupt the industry with new innovations. You now hold in your hand the result of ten years' worth of refinement – a boundary-pushing mouse full of ideas. It's made with our signature formula of esports know-how and precision in-house German engineering, which is the only way we know.

We hope you enjoy being a part of our community, ROCCATEER.

## AIMO LIGHTING SYSTEM

Aimo is a state-of-the-art intelligent lighting system that reacts organically to your behaviour without the need for extensive configuration. It is enriched by the apps and devices you use, presenting fluid, nature-inspired scenarios.

## OWL-EYE OPTICAL SENSOR

Featuring the world-beating Owl-Eye optical sensor expertly developed by ROCCAT. Translating your mouse movements on screen with 1:1 accuracy, Owl-Eye delivers unrelenting pointer precision making it a leading optical sensor.

## ROCCAT® SWARM

Swarm is the software incarnation of ROCCAT's future ready philosophy. It'll cover you for all relevant gaming platforms and devices. It's the next-gen system that keeps on top all games, apps and ROCCAT products in one place.

# WHAT'S EASY-SHIFT[+]™?

The Kone Aimo features world-famous Easy-Shift[+]™ button duplicator technology, which lets you assign a secondary function to each of the mouse's buttons, doubling the amount of command power at your disposal. This gives you the power to pack a massive amount of quickly-accessible control into a clean, uncluttered space.

Activate secondary functions by pressing buttons while Easy-Shift[+] is held down




## QUICK-INSTALLATION GUIDE

# DEFAULT BUTTON ASSIGNMENT

(without Swarm driver installed)

### STANDARD

- 1 = Left mouse button
- 2 = Right mouse button
- 3 = Universal scroll
- 4 = Tilt left
- 5 = Tilt right
- 6 = Scroll up
- 7 = Scroll down
- 8 = IE forward
- 9 = IE back
- 10 = Easy-Shift[+]™
- 11 = DPI up
- 12 = DPI down

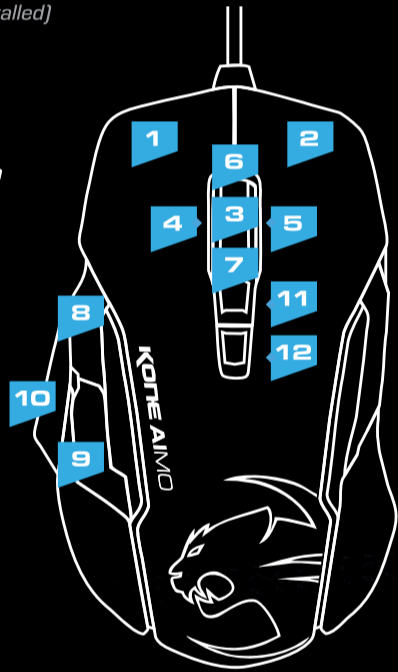


### EASY-SHIFT[+]™

- 10 + 1 = Not assigned
- 10 + 2 = Not assigned
- 10 + 3 = Multimedia play/pause
- 10 + 4 = Previous media track
- 10 + 5 = Next media track
- 10 + 6 = Volume up
- 10 + 7 = Volume down
- 10 + 8 = Not assigned
- 10 + 9 = Not assigned
- 10 + 10 = Disabled
- 10 + 11 = Profile up
- 10 + 12 = Profile down



Default DPI steps: 400, 800 (default), 1,200, 1,600, 3,200

PLEASE USE YOUR PRODUCT'S SERIAL NUMBER (LOCATED ON THE BOTTOM LABEL) FOR REGISTRATION. SIGN IN AT: [WWW.ROCCAT.ORG/SUPPORT/AUTHENTICITY-CHECK](http://WWW.ROCCAT.ORG/SUPPORT/AUTHENTICITY-CHECK)

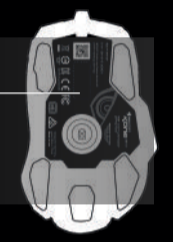

© 2018 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be made liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

BSMI 限期符合聲明查詢請上 <http://bsmi.roccat.org/190/>

FCC CAUTION:  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

GENERAL SAFETY GUIDELINES AND INTENDED USE

1. Do not open or modify the product.
2. Not approved changes or modifications may void the operation authority and/or warranty.
3. In case of trouble or doubt, contact us immediately.
4. Keep the product away from fire/water/humidity/temperature extremes.
5. Only use as intended with a compliant PC and connector part.
6. Improper or incorrect use of the product or use of the product for purposes not recommended by the manufacturer void the liability and/or warranty.
7. Don't look into the light beam on bottom of the mouse.

Hereby, ROCCAT GmbH declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full Declaration of Conformity can be found on [www.roccat.org/product\\_declarations](http://www.roccat.org/product_declarations)

Should you need assistance ...  
Our support team is ready to help with any technical questions. Just send an e-mail to [support@roccat.org](mailto:support@roccat.org). Or visit our website: [WWW.ROCCAT.ORG/SUPPORT](http://WWW.ROCCAT.ORG/SUPPORT)



### DE ANLEITUNG

1. Verbinde deine ROCCAT® Kone Aimo mit einem freien USB Steckplatz deines Computers.
2. Starte deinen Computer neu und stelle eine Verbindung zum Internet her.
3. Rufe [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) auf und lade dir die neueste Swarm Version herunter.
4. Starte die Software Installation und folge den Anweisungen.

### DK INSTRUKTIONER

1. Sæt USB-forbindelsen på din ROCCAT® Kone Aimo ind i en ledig USB port.
2. Start computeren op, og forbind den med internettet.
3. Navigér til [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm), og download den nyeste version af Swarm.
4. Start software-installationen, og følg anvisningerne på skærmen.

### EN INSTRUCTIONS

1. Plug the USB connector on your ROCCAT® Kone Aimo into any free USB port.
2. Boot your computer and connect to the internet.
3. Navigate to [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) and download the latest version of Swarm.
4. Start the software installation process and follow the on-screen instructions.

### ES INSTRUCCIONES

1. Enchufe el conector USB en un puerto USB libre del ROCCAT® Kone Aimo.
2. Reinicie el ordenador y conéctese a internet.
3. Acceda a la página [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) y descargue la última versión de Swarm.
4. Inicie el proceso de instalación de software y siga las instrucciones de la pantalla.

### FI OHJEET

1. Pistä USB-liitin sisään ROCCAT® Kone Aimo -laitteessasi mihin tahansa vapaaseen USB-porttiin.
2. Käynnistä tietokoneesi ja yhdistä internetiin.
3. Siirry osoitteeseen [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) ja lataa Swarm-ohjelmiston uusin versio.
4. Käynnistä ohjelmiston asennusprosessi ja seuraa näyttöruudulla näkyviä ohjeita.

### JP 使用説明

1. 空き USB ポートにお使いの ROCCAT® Kone Aimo 上の USB コネクタを差し込みます。
2. コンピュータを起動し、インターネットに接続します。
3. [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) にナビゲートし、Swarm の最新バージョンをダウンロードします。
4. ソフトウェアインストール処理を開始し、画面上の指示に従います。

### KO 지시사항

1. ROCCAT® Kone Aimo의 USB 커넥터를 비어 있는 USB 포트에 연결하십시오.
2. 컴퓨터를 부팅하여 인터넷에 연결하십시오.
3. 웹사이트 [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) 으로 가서 Swarm 최신 버전을 다운로드하십시오.
4. 소프트웨어 설치 과정을 시작하고 화면상 지침을 따르십시오.

### TC 使用說明

1. 將 ROCCAT® Kone Aimo 上的 USB 連接器插入任何可用的 USB 連接埠。
2. 開啟電腦並連接至網路。
3. 前往 [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) 並下載最新版本的 Swarm。
4. 開始軟體安裝程序，然後依畫面說明操作。

### FR INSTRUCTIONS

1. Insérez le connecteur USB de votre ROCCAT® Kone Aimo à un port USB libre.
2. Allumez votre PC et connectez-vous à internet.
3. Allez sur [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) et téléchargez la dernière version de Swarm.
4. Débutez l'installation du programme et suivez les indications.

### PL INSTRUKCJA

1. Podłącz wtyk USB ROCCAT® Kone Aimo do wolnego portu USB.
2. Uruchom komputer i połącz się z Internetem.
3. Przejdź do strony [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) i pobierz najnowszą wersję Swarm.
4. Rozpocznij instalację oprogramowania i postępuj zgodnie z instrukcjami na ekranie.

### PT INSTRUÇÕES

1. Ligue o conector USB ao seu ROCCAT® Kone Aimo numa porta USB livre.
2. Ligue o computador e estabeleça ligação à internet.
3. Navegar para [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) e descarregar a versão mais recente do Swarm.
4. Iniciar o processo de instalação do software e seguir as instruções indicadas no ecrã.

### RU ИНСТРУКЦИИ

1. Вставьте USB-коннектор ROCCAT® Kone Aimo в любой свободный USB-порт.
2. Включите компьютер и выйдите в Интернет.
3. Зайдите на [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) и загрузите самую новую версию Swarm.
4. Начните процесс установки программного обеспечения и следуйте указаниям на экране.

### SE INSTRUKTIONER

1. Sätt ROCCAT® Kone Aimo USB-kontakt i en ledig USB-port.
2. Boota datorn och koppla upp dig på Internet.
3. Gå till [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) och ladda ned den senaste versionen av Swarm.
4. Starta programvaruinstallationen och följ anvisningarna på bildskärmen.

### TH คำแนะนำ

1. เสียบขั้วต่อ USB บน ROCCAT® Kone Aimo ของคุณเข้ากับพอร์ต USB ใด ๆ ว่าง
2. บูทเครื่องคอมพิวเตอร์ของคุณแล้วเชื่อมต่อกับอินเทอร์เน็ต
3. นำทางไปที่ [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) และดาวน์โหลด Swarm เวอร์ชันล่าสุด
4. เริ่มต้นกระบวนการติดตั้งซอฟต์แวร์และปฏิบัติตามคำแนะนำบนหน้าจอ

### VN HƯỚNG DẪN

1. Cắm đầu cắm USB của chuột ROCCAT® Kone Aimo vào bất cứ cổng USB nào trống trên máy tính.
2. Khởi động máy và kết nối internet.
3. Truy cập [www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm) và tải về phiên bản Swarm mới nhất.
4. Khởi động quá trình cài đặt phần mềm và thực hiện theo các hướng dẫn trên màn hình.

### SC 说明

1. 将ROCCAT® Kone Aimo上的USB接头插入任意空闲的USB接口。
2. 启动计算机并连接网络。
3. 访问[www.roccat.org/roccat-swarm](http://www.roccat.org/roccat-swarm)，下载最新版本版本的Swarm。
4. 启动软件安装过程，按照屏幕上的说明操作。

