 


eufy
PET

User Manual

eufy Pet Water Fountain P940

eufy
PET

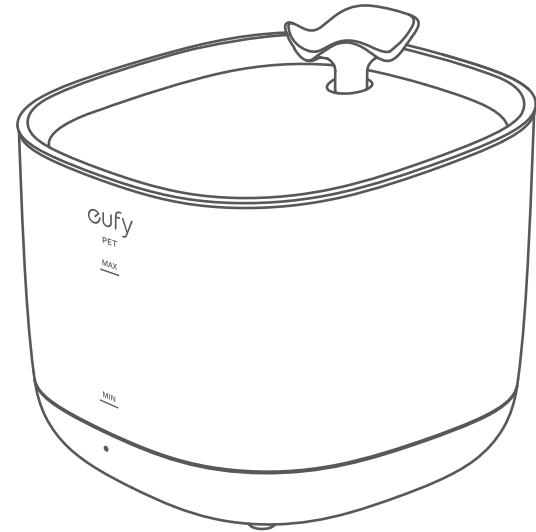

Anker Innovations Limited. All rights reserved. eufy PET and eufy PET Logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. All other trademarks are the property of their respective owners.

51005003454 V01

English 01


日本語 11

한국어 20

1 / IMPORTANT SAFETY INFORMATION

1. Replace the filter every 2-4 weeks.
2. When the device is not in use, the power should be turned off.
3. Turn off the power before cleaning the base. Ensure that it is fully dry before use.
4. Make sure the water level in the tank is between the "MIN" and "MAX" water lines, which are marked inside the water tank.
5. The water tank is detachable. DO NOT lift the device by the water tank when moving.
6. Only the stainless drinking tray can be washed by a dishwasher.
7. Wash away the activated carbon powder on the filter before use.

 
2 / AT A GLANCE

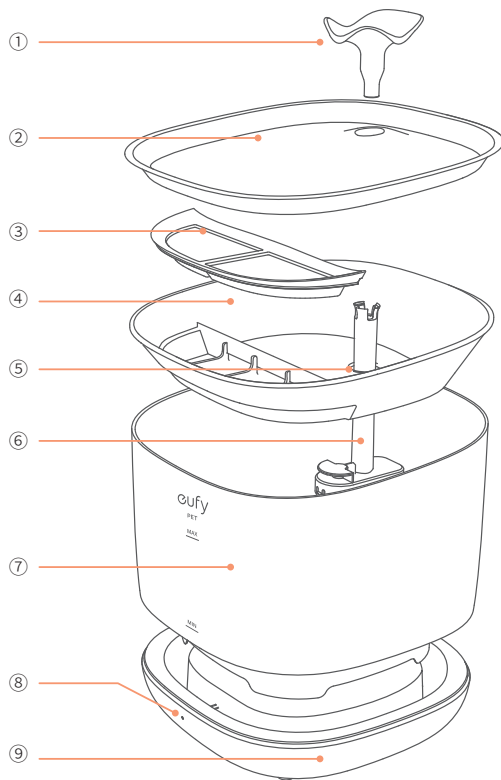


- ① Spout
- ② Drinking Tray
- ③ Filter
The filter removes fur, metal ions, and odors.
- ④ Filter Tray
- ⑤ Water Outlet
- ⑥ Water Pipe
- ⑦ Water Tank
- ⑧ LED Indicator
Steady Red:
No water left → Refill water
Flashing Red:
- No rotator in the device → Put in a rotator
- Water tank displacement → Put it in place
- Pump damage → Contact eufy Support Team
- ⑨ Base

3 / GETTING STARTED

 
1. Put the rotator in the hole.

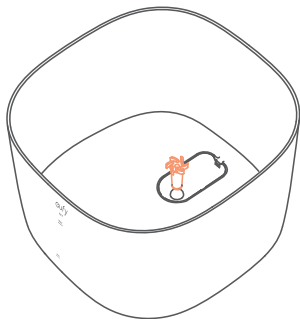

 
2. Align the rear end of the water pipe with the rotator and press down until it locks in place tightly.

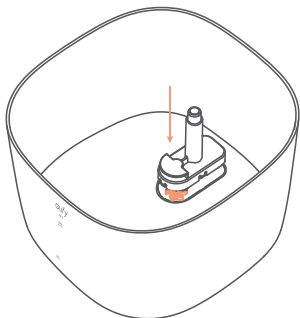

 
3. Connect the two parts of the water pipe tightly.

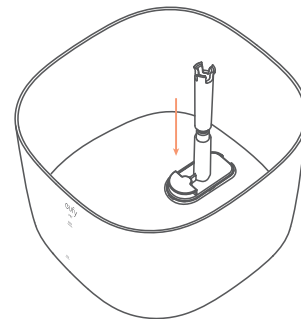

 
4. Add water to the max level.

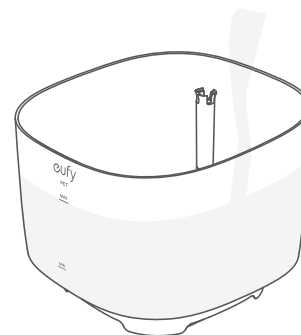


5. Attach the filter tray onto the tank, and put the filter on the filter tray. Wash the filter before using it.

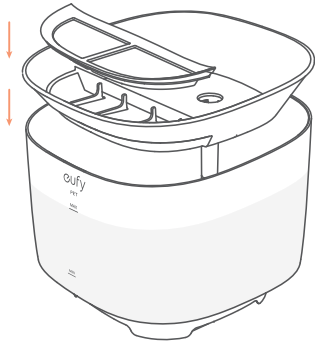 


6. Attach the drinking tray onto the filter tray.

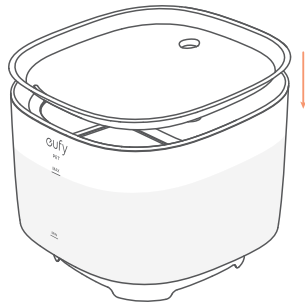 

 7. Insert the spout into the head of the water pipe.

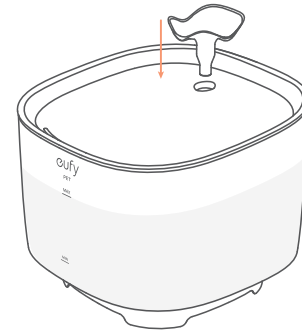

 8. Plug in the base to power your Pet Water Fountain P940.

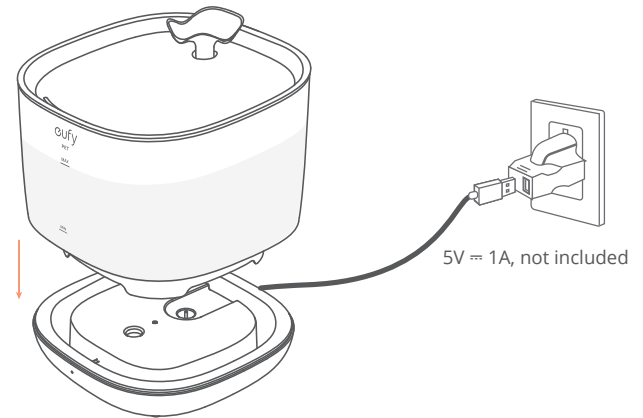

Note:

- After powered on, Pet Water Fountain P940 will continuously dispense water.
- If no water left in the tank, the device will stop working automatically. To resume normal operation, refill the water first. Then unplug and plug the charging cable, or lift up and put down the water tank.

4 / MAINTENANCE

Excess impurities on the filter, water pipe, and rotator will reduce water quality and lower water flow. We recommend cleaning these parts each time you clean the device and replacing the filter every 2-4 weeks.

Section	Cleaning Frequency	Replacement Frequency
Filter	Once every week	Every two to four weeks
Drinking tray	Once every week	/
Water tank and other parts	Once every week	/

Note:

- Be careful not to lose the rotator while cleaning the device.
- Do not clean the base with water. Use a dry cloth instead.
- The rotator may stop working due to slight shaking, but it can automatically resume working after a while.

5 / NOTICE

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

The following importer is the responsible party

Company Name: POWER MOBILE LIFE, LLC

Address: 10900 NE 8th St, Ste 501, Bellevue WA 98004

Telephone:1-800-988-7973

Customer Service

Anker Innovations Limited
Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon,
Hong Kong



Warranty
12-month limited warranty



United States
+1 (800) 988 7973 Mon-Sat 6:15AM-6:45PM(PT) Sun 6:15AM-5:45PM(PT)



Customer Support: support@eufylife.com



@EufyOfficial



@EufyOfficial

 


@EufyOfficial

1 / 安全にご使用いただく ために

1. 2～4週間ごとにフィルターを交換してください。
2. 本製品を使用しない時は、電源ケーブルを抜いてください。
3. ベースを清掃する際は、電源ケーブルを抜いてください。また、次にご使用される前に完全に乾燥させてください。
4. 水タンク内の水位が、「MAX」と「MIN」の間にあることを確認してください。
5. 水タンクは取り外しができる構造になっています。本製品を移動させる際は、水タンクではなくベースの下を持ってください。
6. 本製品はおもちゃではありません。ご使用の際は、お子様に十分注意を払ってください。
7. 食器洗い機で洗えるのは、ステンレス製の飲用トレイだけです。
8. フィルターはご使用前によく洗ってください。
9. 高温または低温の環境で本製品を使用しないでください。5～25°Cの環境で使用されることをお勧めします。
10. 直射日光が当たる場所や、湿った場所に本製品をさらさないでください。

2 / 外観

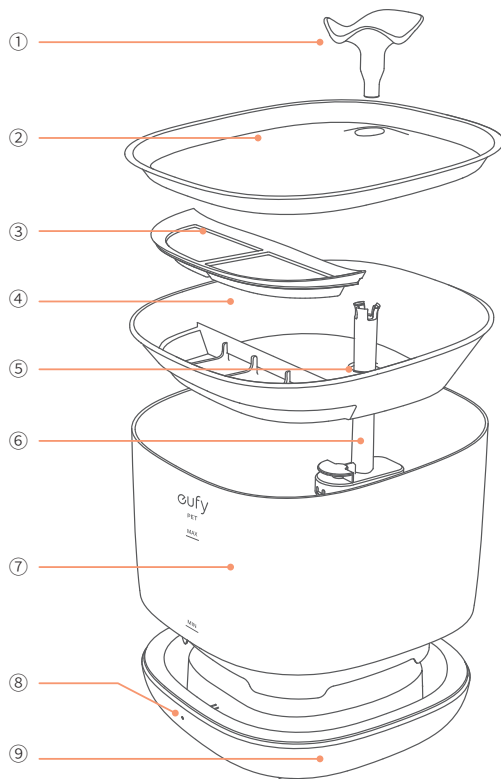

① 飲み口

② 飲用トレイ

③ フィルター
フィルターは、毛や金属イオン、臭いを取り除きます。

④ フィルタートレイ

⑤ 放水口

⑥ 送水パイプ

⑦ 水タンク

⑧ LED インジケーター

赤色で点灯：水を補充してください

赤色で点滅：

・ローターを取り付けてください

・水タンクを取り付けてください

 
・上記を試しても直らない場合は、送水システムが故障している可能性があります。

カスタマーサポートまでお問い合わせください。


⑨ ベース

3 / 設置方法


1. ローテーターを水タンクの穴に挿し込みます。

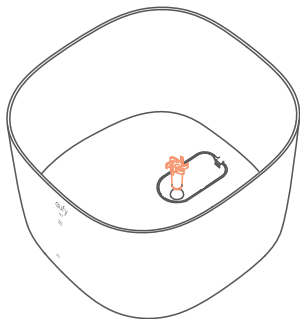

 
2. 送水パイプの下部を、イラストの向きでローテーターにはめ込み、カチッと音がするまで下げます。

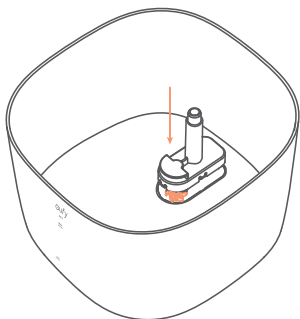

 
3. 送水パイプの上部を送水パイプの下部に取り付けます。

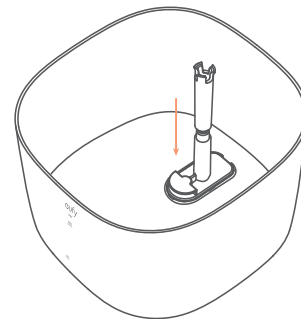

 
4. 「MAX」の目盛りまで水を注ぎます。

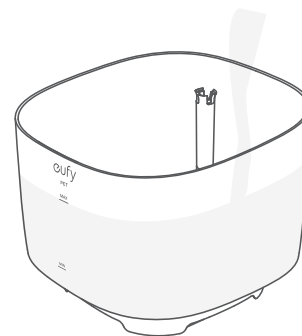

 
5. フィルタートレイを水タンクに取り付け、フィルターをフィルタートレイに設置します。
注意) フィルターは、ご使用前に水でよく洗ってください。

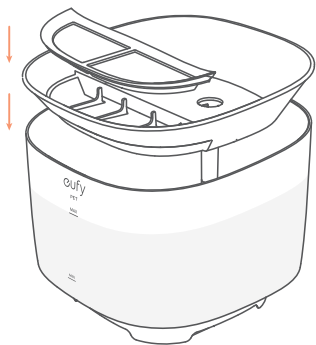

 
6. 飲用トレイをフィルタートレイに取り付けます。

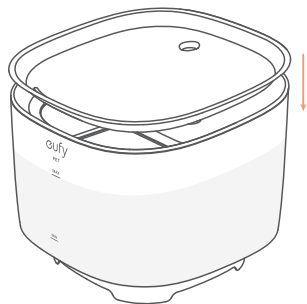

 7. 飲み口を送水パイプの上部に挿入します。

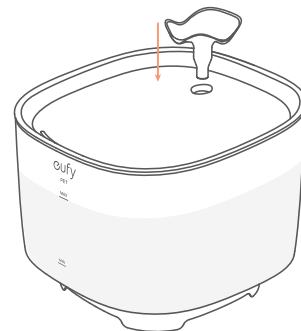

 8. 水タンクをベースの上に取り付け、電源ケーブルをコンセントに繋ぎます。

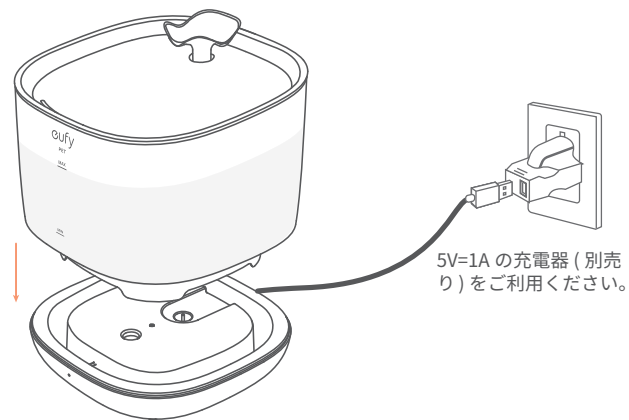

注意：

- 電源が入ると、本製品は自動で給水を開始します。
- 水タンクの水量が少なくなると、本製品の作動は停止します。再開するには、水を入れ、充電ケーブルを差し直すか、水タンクを上げ下げしてください。


4 / お手入れ方法

フィルター、送水パイプ、ローテーターに不純物が溜まると、水質の悪化や水の流速の低下につながります。お手入れの際にはこれらの部品を清掃し、フィルターは2～4週間ごとに交換することを推奨します。

パーツ	清掃頻度	交換頻度
フィルター	1週間ごと	2～4週間ごと
飲用トレイ	1週間ごと	/
水タンクとその他のパーツ	1週間ごと	/

注意：

- 本製品の清掃中にパーツをなくさないように注意してください。
- ベースは水洗いできません。お手入れの際は、乾いた布を使用してください。
- ローテーターはわずかな揺れで動作を停止する場合がありますが、しばらくすると自動的に動作を再開します。

 本製品は、リサイクルおよび再利用が可能な高品質の素材および部品を使用して設計・製造されています。

カスタマーサポート

Anker Innovations Limited
Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok,
Kowloon, Hong Kong



保証内容

通常保証 18 ヶ月 (延長あり)



電話：

03 4455 7823 平日 9:00-17:00 / 年末年始を除く



Eメール：support@anker.com

詳しい情報については www.ankerjapan.com をご覧ください。



@Anker Japan



@Anker_JP
@Eufy_JP

 


@eufy_by_anker

1 / 중요 안전 지침

1. 2~4 주마다 필터를 교체하십시오 .
2. 기기를 사용하지 않을 때는 전원을 꺼두십시오 .
3. 베이스를 청소하기 전에 전원을 끄십시오 . 다시 사용하기 전에 완전히 건조되었는지 확인하십시오 .
4. 탱크의 수위가 물탱크 내부에 표시된 "MIN" 과 "MAX" 급수선 사이에 있는지 확인하십시오 .
5. 물탱크는 탈부착이 가능합니다 . 이동을 위해 기기를 들어올릴 때는 물탱크를 잡고 들어올리지 마십시오 .
6. 스테인리스 드링킹 트레이만 식기세척기로 세척할 수 있습니다 .
7. 사용하기 전에 필터에 있는 활성탄 분말을 씻어내십시오 .

2 / 요약

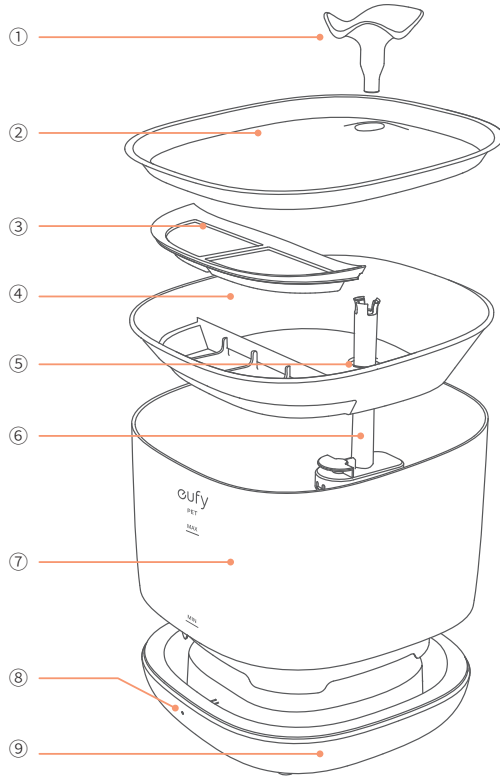

①스파우트

②드링킹 트레이

③필터
필터는 동물의 털, 금속 이온, 냄새를 제거합니다.

④필터 트레이

⑤물 배출구

⑥배수관

⑦물탱크

 
⑧ LED 표시등
 빨간색으로 켜져 있음 :
 물이 없음 → 물을 보충하십시오
 빨간색으로 깜박임 :
 · 기기에 회전 장치가 없음 → 회전 장치를 삽입하십시오
 · 물탱크가 제자리에 있지 않음 → 제자리에 다시 설치하십시오
 · 펌프 손상 → eufy 지원팀에 문의하십시오

⑨베이스


모델 : T7320

3 / 시작하기


1. 회전 장치를 구멍에 넣습니다.

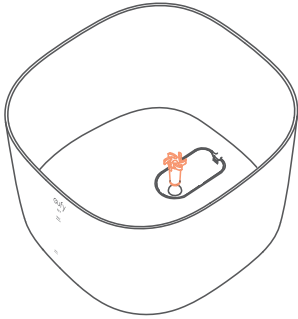

 
2. 급수관의 뒤쪽 끝을 회전 장치에 맞추고 아래로 눌러 제자리에 단단히 고정시킵니다.

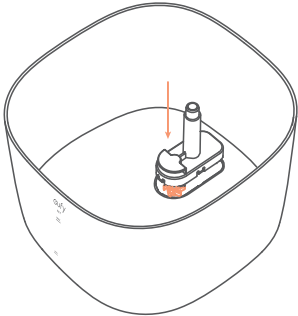

 
3. 수도관 두 부분을 단단히 연결합니다.

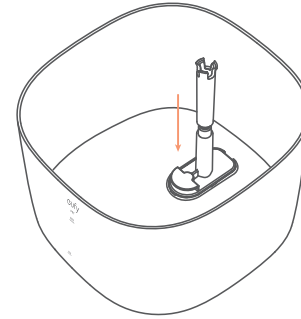

 
4. 물을 최대 수위까지 넣습니다.

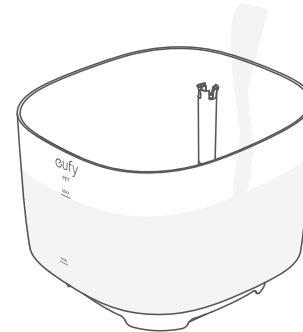

 
5. 필터 트레이를 탱크에 부착하고 필터를 필터 트레이에 놓습니다. 필터를 사용하기 전에 먼저 세척하십시오.

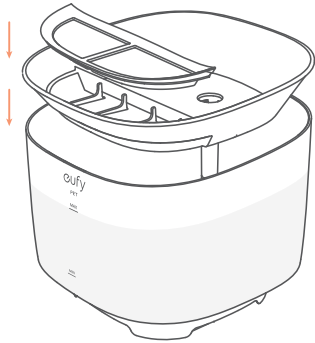

 
6. 필터 트레이에 드링크 트레이를 부착합니다.

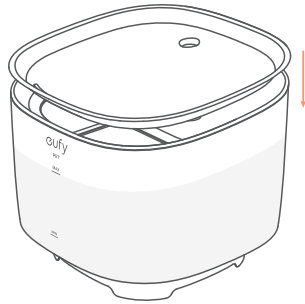

 7. 수도관 헤드에 스파우트를 삽입합니다.

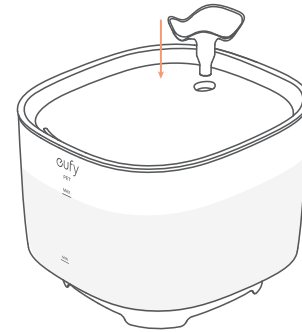

 8. 베이스의 케이블을 꽂아 Pet Water Fountain P940 에 전원을 공급합니다.

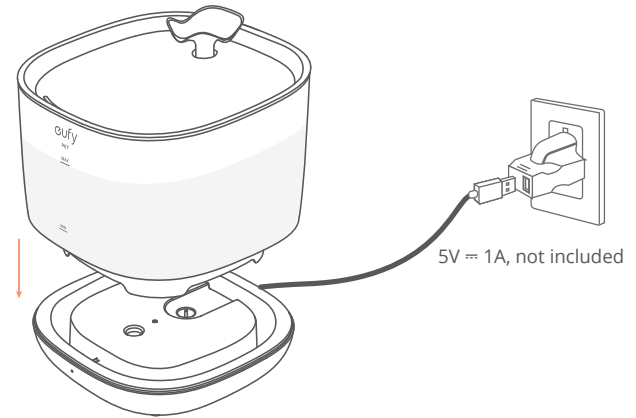

참고 :

- 전원이 켜지면 Pet Water Fountain P940 에서 물 공급이 지속적으로 이루어집니다 .
- 탱크에 물이 없으면 기기가 자동으로 작동을 멈춥니다 . 정상 작동을 재개하려면 먼저 물을 다시 채워주세요 . 그런 다음 충전 케이블을 뽑았다가 다시 꽂거나 물탱크를 들어 올렸다가 내리면 됩니다 .

4 / 유지 관리

필터, 수도관 및 회전 장치에 불순물이나 찌꺼기가 많으면 수질이 저하되고 물의 흐름도 약해집니다 . 따라서 기기를 청소할 때마다 이러한 부품도 함께 세척하고 2~4 주마다 필터를 교체하는 것을 권장합니다 .

구성품	청소 빈도	교체 빈도
필터	매주 한 번	2~4 주마다 한 번
드링킹 트레이	매주 한 번	/
물탱크 및 기타 부품	매주 한 번	/

참고 :

- 기기를 청소하는 동안 회전 장치를 분실하지 않도록 주의하세요 .
- 베이스는 물로 세척해서는 안 됩니다 . 마른 천으로 닦으십시오 .
- 회전 장치가 약간의 흔들림으로 인해 작동이 중지될 수 있으나 이 경우 잠시 후 자동으로 다시 작동합니다 .



모델명 : T7320
 인증번호 : R-R-AH-T7320
 제품명 : 특정소출력 무선기기 (무선데이터통신시스템용 무선기기)
 제조자및제조국가 : Anker Innovations Limited
 제조년월 : 2022.04
 해당 무선설비는 운용 중 전파혼신 가능성이 있음 . 해당 무선설비는 전파혼신 가능성이 있으므로 인명안전과 관련된 서비스는 할수 없음 .

고객 서비스

Anker Innovations Limited
 Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok,
 Kowloon, Hong Kong



보증

12 개월 제한 보증



한국 +82 02-1670-7098 월 - 금 10:00 - 17:00



고객 지원 : support@eufylife.com



@EufyOfficial



@EufyOfficial



@EufyOfficial