

GETTING Started

WITH YOUR

FRIGIDAIRE GALLERY ELECTRIC RANGE

BEFORE YOU START



Set up your oven

Make sure your oven racks are in place prior to operating the range. Check out your Use & Care Guide.



Set your clock

It's easy! Press , enter the time using numeric keys, then press OK/START.



Before cooking for the first time


Set your oven to bake at 350°F for about 30 minutes. As the range gets settled in your home, it's normal to experience some noises and smoke.

YOU'RE IN CONTROL



Your oven controls

Using your oven starts with just pressing the keys on your oven control. Temperature and cooking modes will appear in the display as you go.

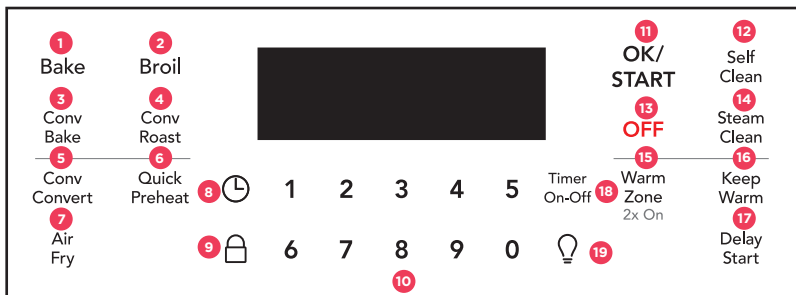

*To turn on Warm Zone

Press the Warm Zone key **twice (2X)**.



To turn off Warm Zone

Press the Warm Zone key **once**.

Refer to your Use & Care for more tips on the Warm Zone feature.

1. BAKE is for foods that need heat to rise and move gently in the oven.
2. BROIL is for broiling and grilling foods under direct, high heat.
3. CONV BAKE circulates the oven heat continuously for baking.
4. CONV ROAST uses a convection fan to gently brown meats and seal in the juices.
5. CONV CONVERT converts standard bake temperatures to convection temperature in convection bake feature.
6. QUICK PREHEAT is best used for single rack baking.
7. AIR FRY quickly and evenly circulates heated air to deliver crispy, golden results with little to no oil.
8. SET CLOCK is used to set the time of day.
9. OVEN LOCK is used to lock out oven controls.
10. 0-9 keys are used to set temperature and time.
11. OK/START starts cooking functions and sets the clock.
12. SELF CLEAN sets a self-clean cycle.
13. OFF turns off all cooking functions.
14. STEAM CLEAN offers a time saving method to assist in the routine cleaning of small and light soils.
15. WARM ZONE uses radiant heat to keep cooked foods at serving temperature on the cooktop. (*see above)
16. KEEP WARM is used to keep cooked foods at serving temperature in the oven.
17. DELAY START sets a delayed starting time to oven cooking or cleaning functions.
18. TIMER ON-OFF is used to set or cancel the minute timer.
19. OVEN LIGHT turns the interior light on and off at a touch.

REMEMBER

- Do not use aluminum foil or any other materials to line any part of the oven.
- All oven racks should be removed before a self clean operation.
- Do not add bleach, ammonia, oven cleaner, or any other abrasive household cleaners to the water used for Steam Clean.

AIR FRY

Deliver all of the flavor and none of the guilt. Our Air Fry button allows you to make healthy and delicious meals for the entire family - right in your oven. Use a dark, nonstick baking sheet when using Air Fry.

For perfect crispy-golden results, may we suggest our ReadyCook™ Air Fry Tray. The Air Fry Tray can be purchased from frigidaire.com or from an authorized dealer.



QUICK CARE



A little love goes a long way

Quick ongoing care keeps your range working great for years to come!



Be gentle

Clean with warm water and mild soap, or use Frigidaire™ ReadyClean Oven and Microwave Cleaner.



Setting a self-clean cycle is easy

1. Remove the racks from your oven and clean by hand. Make sure you close the oven door.
2. Press Self Clean.
3. The default clean time 3 0 0 (3 hours) will appear in the display. To choose a different clean time, use the numeric keys to enter any time between 2 and 4 hours.
4. Press OK/START twice to activate self clean.
5. After a few seconds you'll hear the door lock. Be careful around the oven during and after cleaning, things can get hot!

FAQs

Why does my range make noises when I'm cooking?

Temp changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temps. Different fans run to heat up the oven or cool down different parts of oven, even when it's off. These sounds are normal.

This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new range, you may need to test and adjust cooking times and temperatures for recipes. Consult your Use & Care Guide for detailed instructions on how to adjust temperature or call us if you need help!

Why does my oven smoke when I use the broil setting?

Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the element. Watch food to prevent burning.



Find more troubleshooting tips in the back of your Use & Care Guide.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new range.

Look for the PhotoregisterSM icon on your registration card.



WE ARE
here



Have a question?



Want help?



Need service?

owner support

FOR YOU

frigidaire.com 1 (800) 374-4432

frigidaire.ca 1 (800) 265-8352

