

HEARTFELT THANK YOU

Thank you so much for purchasing from us and placing your trust in our brand.
Growsny - Parent's best helper.
Growsny committed to creating modern and thoughtful baby products that let parents enjoy the parenthood. We are always passionate and devote to making the ideal products that show love and care. Customer satisfaction is our first priority.

For any questions or issues, please email us:
service@growsnyofficial.com

Or SMS **GROWNSY** to **(833)524-0498**

We will go above and beyond to resolve any customer issue within 24 hours.

Best Regards,
Randell
Founder of GROWNSY



2

FEATURES

No more waiting to warm up bottles! Simply pour the warm water from GROWNSY instant warmer into your bottle, scoop the formula and shake. Replaces Traditional Baby Bottle Warmers.

Knob Control
35-96°C(95-204.8°F)Temperature control,built in Semiconductor sensing probe & External NTC temperature control probe. Set the temperature you need.

Boil Function
Just choose Boil Function the instant warmer will work as electric kettle be ready to use for tea, oatmeal, coffee, pasta and much more.

Night Light
Choose Night Light Function and lights will on that makes night operation more relieved and safer.

LED Display
Innovative wide touch screen-live a modern&convenient life

 
SPECIFICATIONS

Product name	Instant Warmer	
Model	K113	
Rated voltage	120V	
Rated power	600W	
Capacity	1.3L	
Packing	One set	
Origin	China	
Executive standard	FCC and FDA	
Recommended Room Temperature	15°C~30°C	
Recommended humidity	50%~80%	


3

WARNING


The kettle should only be used with the instant warmer base

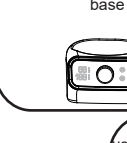


Do not add water above the maximum water level to prevent scalding




Never touch the instant warmer when heating water to prevent scalding



 The lid should not be used to lift the kettle to prevent the body from falling or being leaking

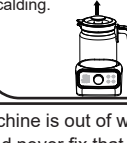


Keep Children away from this product




*If the machine is out of work, please contact GROWNSY Service Team directly and never fix that by yourself.
*Never sterilize this product by microwave.

ATTENTION


 
Never immerse this product for cleaning

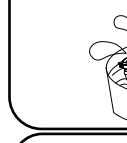

 When water dry out please turn off the power button

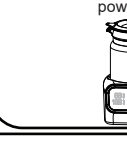


  Never put noodles, milk or others into this warmer for heating.

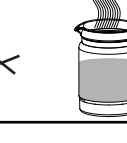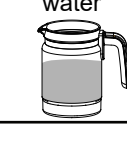4

 PANEL DESCRIPTION

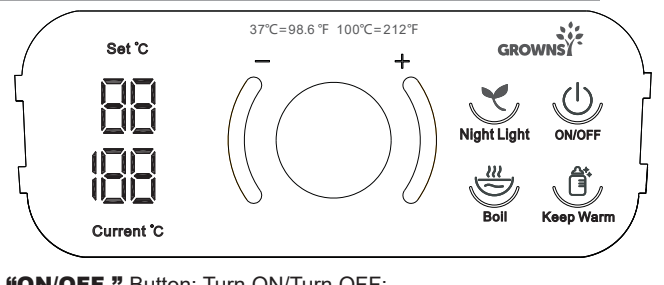

"ON/OFF " Button: Turn ON/Turn OFF;
"Boil" Button: Boil Water as Electrical Kettle;
"Night Light" Button: Turn on or off the night light on both sides of the Knob;
"Keep Warm" Button: Keep warm all day and night until water dry out;
"Knob": Adjust the temperature you need .

Note:
Due to differences in regional atmospheric pressure, the boiling point may be lower or higher than 100°C(212°F).

OPERATION

Make sure cleanliness of this instant warmer before use.
Please Sterilize the warmer before use at the first time: Boil the water and pour it out.
Do not add water beyond the maximum level to prevent scalding.
It is highly recommended to use purified or distilled water to prevent scales.
When plug in the power, you will hear "Beep" sounds and there is no display on the screen.

5

OPERATION

- ON/OFF:** Touch the ON/OFF button, light will be on and the display shows the current temperature and the set temperature (default temperature is 45°C/113 °F).
- Keep Warm:** Touch the "Keep Warm" button, light will be on and the appliance will keep water warm at certain temperature. Adjust the temperature by turning knob. Adjustable range is 35-96°C (95-204.8°F).
If the screen is too bright for you, press for 3 seconds to enter the off-screen mode. Only the indicator light of the "Keep Warm" button is on in this mode.
- Night light:** Turn on or off the night light on both sides of the Knob.
- Boil:** Touch the "boil" button, light will be on and the instant warmer will boil water. After the water is boiled, light goes off and the product automatically enters the "Keep Warm" mode. You can set the keep warm temperature by turning knob.

During the working process, if you press the "ON/OFF" button, it will stop working.

For above functions, if you press the "ON/OFF" button during the working process, it will stop working and enter the standby mode.

CLEANING

- Please unplug the power and wait for it to cool down before cleaning.
- Never immerse this product and just wipe it with a rag.

6

DESCALING

It is recommended to descale the bottle warmer every four weeks to ensure it continues to work efficiently.

- Mix 10g citric acid cleaner with 200ml/7oz of cold water to descale the instant warmer. Turn on the instant warmer, select the "Boil" function then wait for 2-3 minutes after boiling, the descaling is completed.
- Mix 50ml/1.7 oz of white vinegar with 100ml/3.5oz of cold water to descale the instant warmer. Switch on the instant warmer, select the "Boil" function then wait for 10 minutes after boiling. Leave the solution in the instant warmer until all scale has dissolved.

NOTE:
1) Never dry out.
2) Do not use other types of descalers.

If you still see traces of scale after rinsing, repeat the descaling procedure.

7

WARRANTY&CUSTOMER SERVICE

GROWNSY strives for user friendly products for newborn and household items. We aim not only to create a product, but also an item that is filled with care love from us to our customers. If you have any issues at all, please contact us directly (service@growsnyofficial.com) and we will help you out.

Or SMS **GROWNSY** to **(833)524-0498**



8