 
First Start



Open the charging case lid and take out both earbuds, then remove the insulating film and put them back.

- When the charging case has power, open the lid of the charging case, the
 two earphones will turn on and enter the pairing mode. For the main
 earphone, the red and white lights will flash alternately; for the secondary
 earphone, the white light will keep on.
- Activate the Bluetooth on your device and choose "SOUNDPEATS H2" to connect.

Reset

- 1. Clear the pairing data from your device.
- Place back both earbuds, make sure they are in charging.
- Press and hold for 10 seconds until the red and white lights of both earbuds flash twice alternately, reset complete.



 
Wearing

- 1. Identify the left and right earbuds.
- 2. Rotate earbuds and find the most comfortable position.





Product Diagram





Control

| Power On | Auto: Open up the case lid |
|--------------------------|---|
| | Manually: Press and hold the MFB for 1.5s |
| Power Off | Auto: Place back into charging case and close the lid |
| | Manually: Press and hold the MFB for 10s |
| Play / Pause | Double tap the MFB |
| Volume - | Single tap the left MFB |
| Volume + | Single tap the right MFB |
| Previous Track | Press and hold left MFB for 1.5s |
| Next Track | Press and hold right MFB for 1.5s |
| Answer / Hang Up Phone | Double tap the MFB |
| Call | |
| Reject Phone Call | Press and hold the MFB for 1.5s |
| Switch Between Two Calls | Press and hold the MFB for 2s |
| Manually Enter Pairing | Press and hold the MFB for 6s |
| Mode | |
| Activate Voice Assistant | Triple tap the right MFB |
| Enter / Exit Game Mode | Triple tap the left MFB |

Q&A

Q1: What does the indicator on the charging case tell?

| Indicator Flash (From Left -Right) | Battery Left |
|--|--------------|
| First one white light flashes | 0%-33% |
| First one white light is on, second light flashes | 34%-66% |
| First two white lights are on, third light flashes | 67%-99% |
| All three lights are on | 100% |



Q2: How to charge the charging case?

- Use a Type-C adapter to charge the case (current no more than 1A), when indicators flash, that means in charging.
- Please charge the earbuds and charging case at least once per 3 months when not in use for a long time.



Q3: Why are the earbuds still connected to my phone after placing them back and closing the case lid?

- The charging case has no remaining power. Placing the earbuds back into the charging case can't make themselves turn off if the case battery is dead.
- 2. Please make sure the earbuds are correctly placed in the charging case, and make sure the charging metal sheet and the PIN pin are clean. Please try to clean the contactors between the charging case and the earphone with somethina like microfiber cloth.

Q4: Why is the playtime not same as described?

A single charge will not support continuous use for 20 hours. The earbuds work 5 hours for a single charge, and the charging case provides extra 3 recharges.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no augrantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules, Operation is subject to the following two conditions: This device may not cause harmful interference.

- (2) this device must accept any interference received, including interference that may cause undesired operation
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC ID

- English: "

This device complies with Industry Canada licence-exempt RSS standard(s), Operation is subject to the

following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference thatmay cause undesired operation of the device."

- French:"

- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
- (1) l'appareil nedoit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.