

kogan

8" Digital Photo Frame

KADPF08XXXB

USER MANUAL

 
 


 **WARNING:**
CHOKING HAZARD - Small parts and batteries. Not for children. Use with adult supervision only

Contents

| | |
|--------------------------------|----------|
| 1. Frame Diagrams | 3 |
| 2. Remote Control | 4 |
| 3. Installation | 4 |
| 4. Main Menu | 4 |
| 4.1 Memory Select | 4 |
| 4.2 Computer connecting | 4 |
| 4.3 Function Select | 4 |
| 4.3.1 Photo Display | 5 |
| 4.3.2 Music Display | 5 |
| 4.3.3 Photo Display | 6 |
| 4.3.4 Calendar Display | 6 |
| 4.3.5 Files Display | 6 |
| 4.3.6 Setting | 6 |
| 5. FAQ | 8 |

Frame Diagrams

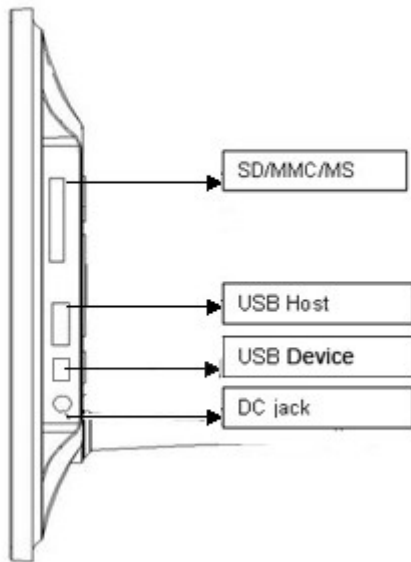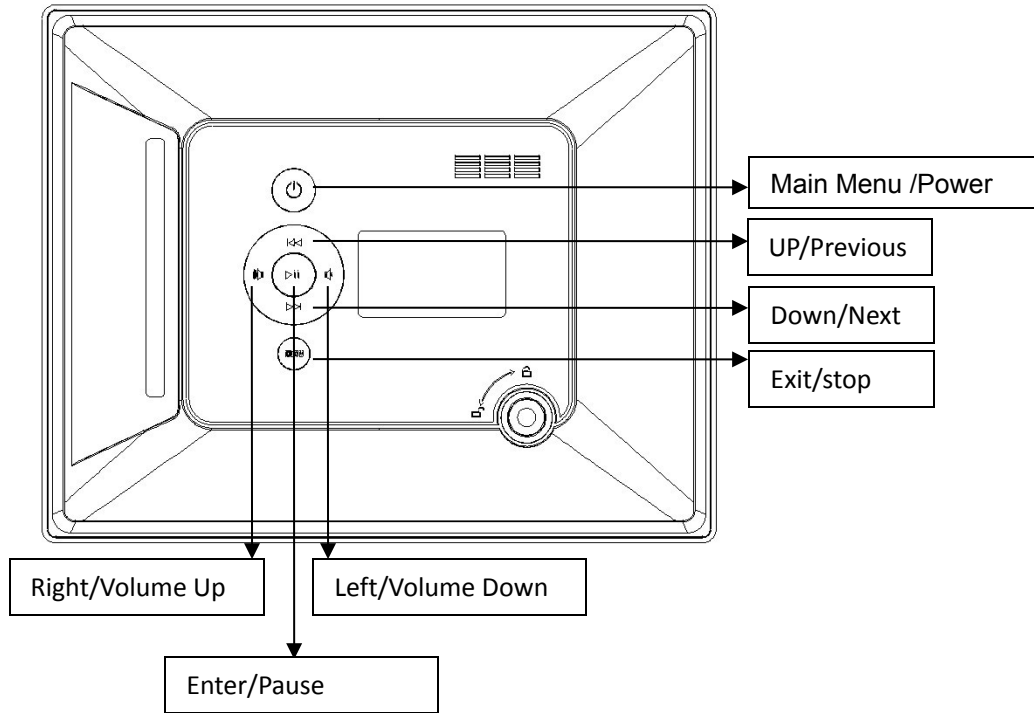

Remark:

Press and hold the Power button for 3 seconds to turn the device into Standby mode. Press the Power button again to re-activate the digital photo frame.

Remote Control



Installation

Insert the jack of the DC adapter into the digital photo frame, and then plug the DC adapter into a standard power outlet. Your frame will start up automatically.

Main Menu

1. Memory Select (Exhibit 1)

Press **Menu** on remote control or **Menu** on backside button to go to the Memory selection interface. Press Up and Down to choose different between different memory.

- 1) Internal Memory
- 2) Card select: Shows the memory card you insert into frame. The icon will be highlighted if a compatible card is inserted
- 3) USB stick icon.

 
2. Computer connection

- 1) Connect the frame to computer via USB cable
- 2) Edit files via computer

3. Function Select (Exhibit1)


Press [**◀**]/[**▶**] button to choose different function and then press **ENTER** to confirm.

- 1) Photo: Select to play as a photo slideshow.
- 2) Music: Select to play music files.
- 3) Video: Select to play video files.
- 4) Calendar: Select to show the calendar and clock.
- 5) Files: Select to display and edit files.
- 6) Setting: Select to make changes to the settings.

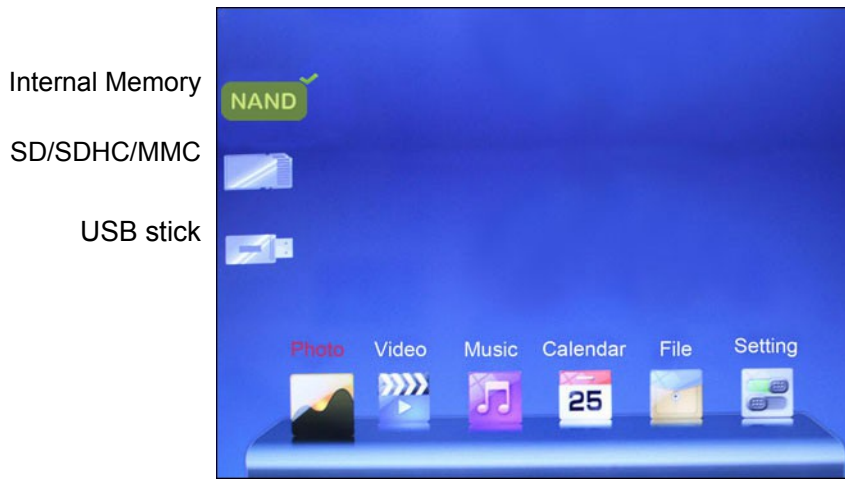


3.1 Photo Display

 - Choose **Photo** icon, press [ENTER] on remote control, it will play picture the slideshow automatically on the screen.
- During photo slideshow, press [ENTER] go to different modes “**Browse Mode**” or “**Slideshow**”. Press [▲][▼] to view the previous or next photos under Browse Mode.
- Press [Exit] on remote control, or instead press the **MENU** button on device to return back to the thumbnail (as shown below).

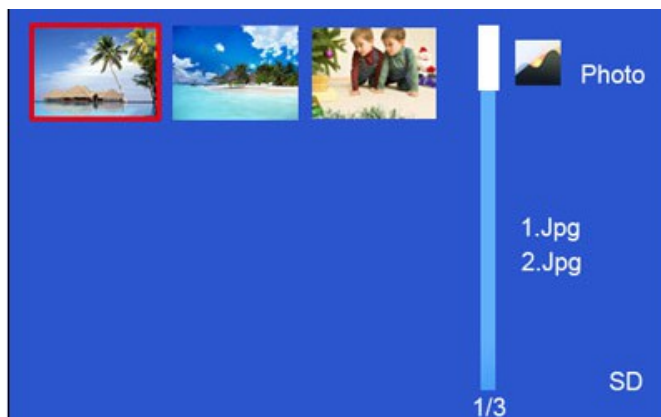

3.2 Music Display

 - Choose **Music** icon, press [▲][▼] to choose music and press **ENTER** to display music (as shown below).
- Press [ENTER] on remote control or **ENTER** on device to activate and stop music during music display.

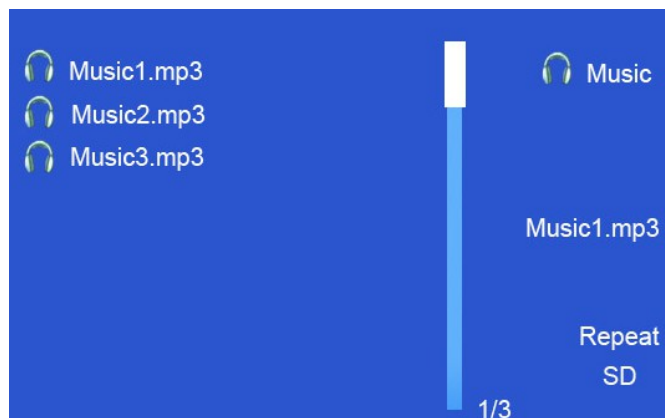

3.3 Video Display

- Choose **Video** icon, press [▲][▼] to choose one video and press **ENTER** to display video. (as shown below).
- Press [**ENTER**] on remote control or **ENTER** on device to activate and stop video during video display.



3.4 Calendar Display

- Choose **Calendar** icon, to show the Calendar / Clock with photo slideshow (as shown below).
- Press [◀]/[▶] to change the slideshow picture, and [▲][▼] to check calendar by month.



Calendar with photo display

3.5 Files Display

- Choose **File** icon, whereupon all the files in selected memory card will be listed on the screen. (as shown below)
- Under Memory card mode, press [▶] to choose “Copying to internal” to copy chosen files into internal memory” or “Delete files” to delete the chosen files
- Under Internal memory mode, press [▶] to choose “Delete files” to delete the chosen files



3.6 Setting

- Select the setting icon or instead press the **SETUP** key on the remote control to setup your frame. (as shown below)

Operation method

- [**▲**]/[**▼**] button to shift items or choose parameters
- [**◀**]/[**▶**] button to change the parameters.
- [**ENTER**] button to confirm the setup result.
- [**EXIT**] button to back to main menu.



Setting table

| Photo Setup | |
|--------------------|--|
| Display mode | Slideshow/Thumbnail/Browse Mode |
| Music | On/ Off (choose to open or close background music during photo slideshow) |
| Display ratio | Fit to screen/ Crop to fill/Full screen |
| Slideshow duration | 5sec/15sec/30sec/1min/5min/15min |
| Slideshow repeat | Repeat/Once/Random |
| Slideshow effect | 11 modes (Random / Snake/ Partition/ Erase/ Blinds/Random lines/ Grid/ Cross/ Spiral/ Rect/ Close) |
| Calendar Setup | |
| Display Mode | Monthly Calenda/ Digital Clock/ Analog Clock |
| Date | Set date, Month/day/year |
| Clock Mode | 24hr/12hr |
| Clock Time | Set clock time, Hour/minute |
| Alarm Status | On/Off |
| Alarm Time | Set alarm time, Hour/minute |
| Alarm Frequency | Once/ Everyday/ Mon. to Fri. /Weekend |
| Video Setup | |
| Display Mode | Full Screen/Original Size |
| Play Mode | Repeat/ Random/ Once |
| Music Setup | |
| Play Mode | Repeat/ Random/ Once/ Repeat One |
| Show Spectrum | On/ Off |
| System Setup | |
| Language | Multi languages |
| Brightness | Brightness adjustable |
| Contrast | Contrast adjustable |
| Saturation | Saturation adjustable |
| Start up Mode | Main menu/ Photo /Music/ Video/ Calendar |
| Auto Power on | On/Off |
| Auto Boot Time | Set auto boot time, Hour/minute |

| | |
|-----------------------|---|
| Auto Power off | On/Off |
| Auto Shut Time | Set auto shut time, Hour/minute |
| Auto-Power Frequency | Once/ Everyday/ Mon. to Fri. /Weekend |
| Volume | Volume adjustable |
| Reset default setting | Restore to the factory settings |
| Version | Show the software version |
| System Upgrade | Software firmware update (if available) |

* The above settings are subject to change in case of any spec modification

Frequently Asked Questions

Q. Why can't the Digital Photo Frame play all images or movie files?

A: The Digital Photo Frame can support JPEG, MP3 and some video formats depending on the firmware specification. It may not read some files downloaded from the internet.

Q. I have a memory card in the Digital Photo Frame, but it's not reading the card, what should I do?

A: Firstly, make sure that you are using a memory card that is supported by the Digital Photo Frame. Secondly, ensure that the memory card is inserted all the way into the correct slot. Thirdly, choose the correct card icon which you want to play.

Q. Why do some pictures load faster than others?

A: Higher resolution pictures usually load slower.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. Please contact the local council or waste disposal center for advice on the correct disposal of electronic devices.

NOTE: All rights for modifications reserved

- The above settings are subject to change if the product specifications are modified.