



32 FULL HD CURVED FREESYNC GAMING MONITOR

(1920 x 1080, 75Hz)

KAMN32F7CSA

SAFETY & WARNINGS

- Read all instructions before using the appliance and retain this user guide for future reference.
- Unplug the monitor before cleaning it.
- Use a clean, slightly-dampened cloth to wipe the main monitor body.
- To clean the screen: turn it off, unplug it and wait for it to cool completely, then wipe it with a dry microfibre cloth.
- Do not use cleaning alcohol, ammonia-based liquids or other harsh cleaners.
- This monitor is designed with ventilation holes on the back of the casing. Do not cover or block them.
- Do not insert any object or spray any liquid into the vents.
- Avoid placing the monitor near heaters, stoves, fireplaces or other sources of heat, as well as in rooms lacking adequate ventilation.
- Do not position the monitor in unsafe locations. If the monitor falls, it may be damaged and may injure nearby people.
- Unplug the monitor if it is not going to be used for an extended period.
- Do not place heavy objects on the monitor, its power cord or any connected cable.
- Do not open the back panel of the monitor, as it contains a high-voltage current even when not plugged in.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

 
COMPONENTS




Monitor




Stand arm

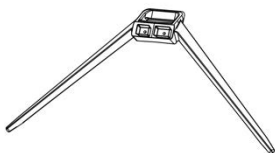


Stand base

 


Stand base screw
(M4 x 16mm)

 

VESA screws (x4)

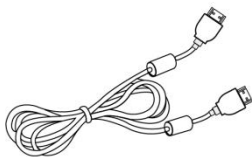 

HDMI cable

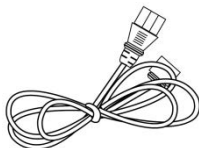 


Power cable



User guide


OVERVIEW

 Monitor Controls

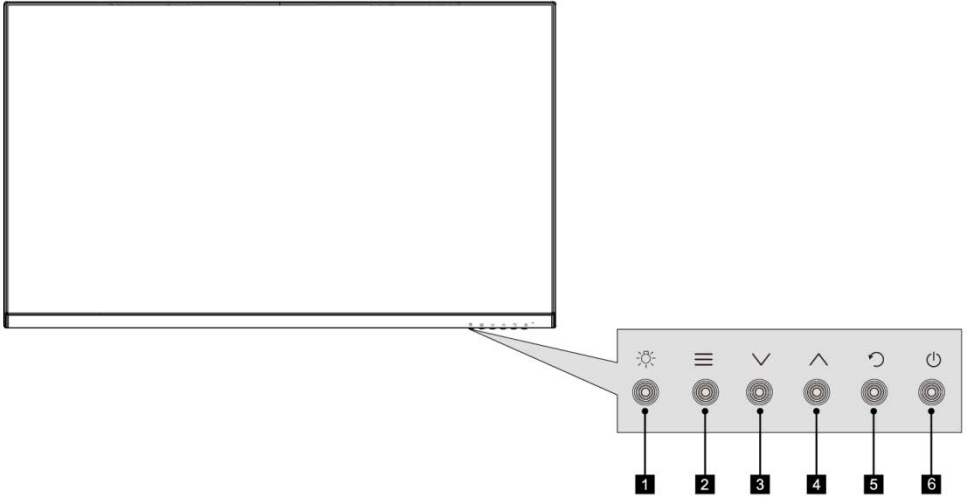

- | | | |
|---|------------------|---|
| 1 | Backlight button | Press to turn the display backlight on/off. |
| 2 | Menu button | Press to display the OSD menu or enter sub-menus. |
| 3 | Down button | Press to move down in the menu. |
| 4 | Up button | Press to move up in the menu. |
| 5 | Exit button | Press to exit the menu. |
| 6 | Power button | Press to turn the monitor ON/OFF. |

 Monitor Ports


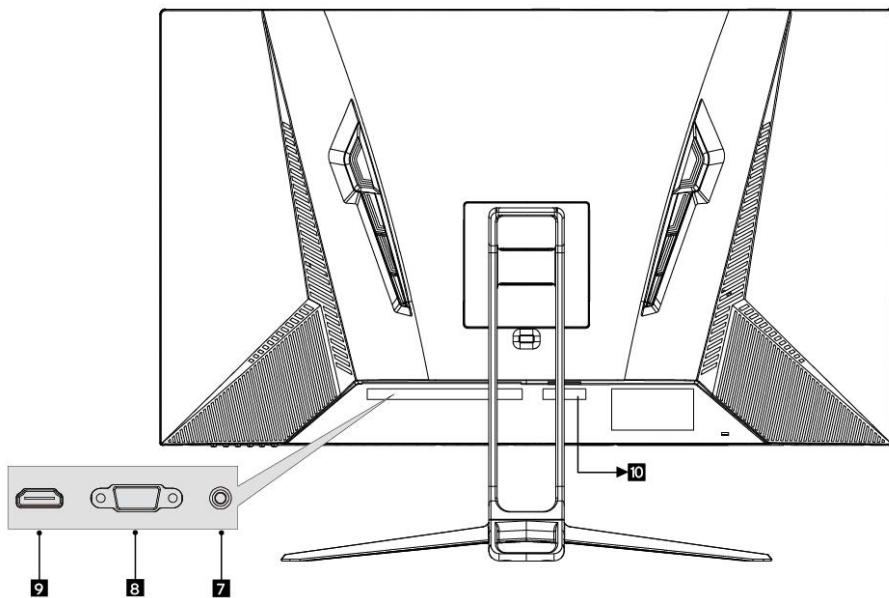


- 7 Audio in
- 8 VGA input
- 9 HDMI input
- 10 Power input



ASSEMBLY

Before disposing of any packaging, place all items on a soft, clean and flat surface to ensure all components are accounted for.

  WARNING: The panel of the monitor is fragile. Keep the foam underneath the monitor screen while assembling the stand.

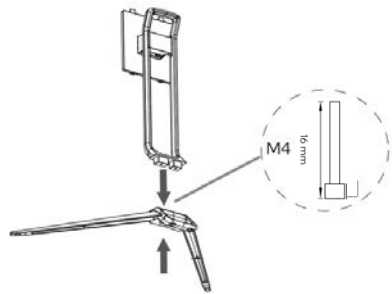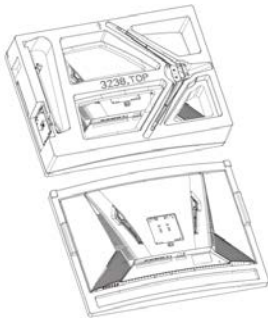

  1. Carefully remove the monitor, stand arm and stand base from the box.
2. Attach the stand base to the stand arm using the M4x16 screw provided.

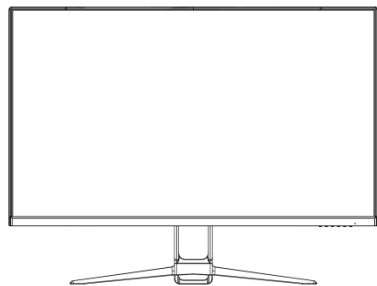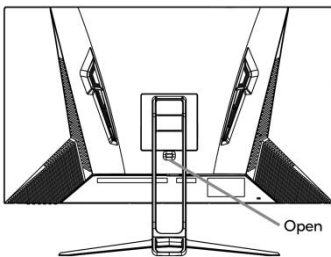

3. Insert the stand arm block into the back cabinet and push down until firmly connected.
4. Lift the monitor up straight and remove the bottom foam. Stand the monitor up on the installed base.

 
VESA MOUNT




VESA mounting pattern 100 x 100mm, screw size M4.

Note: VESA mount or mounting accessories are **NOT** included.

Open the box, take out the monitor with protection form attached and gently place it on a desktop or table. Remove the extra parts and the foam covering the back of the monitor. Press the release button to remove the stand plate. If the monitor was already attached to the stand assembly, remove it.

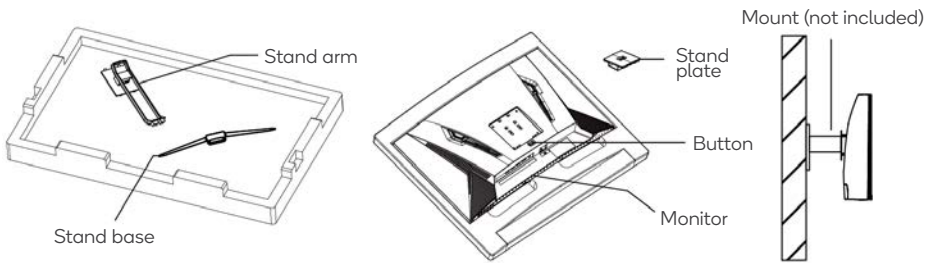

 
Assemble the mount following the instructions provided with the mount.

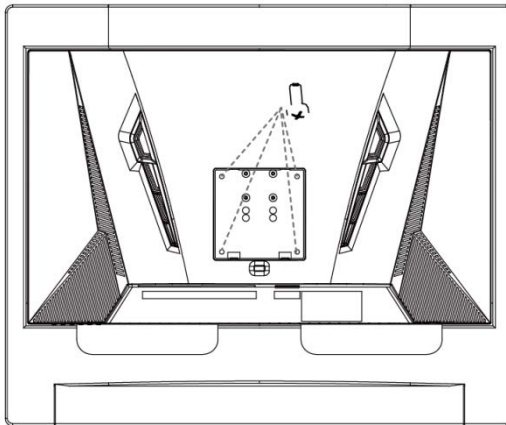

CONNECTIVITY


Power

 Connect the included power cable to the monitor power port, then connect the other end to a power outlet.

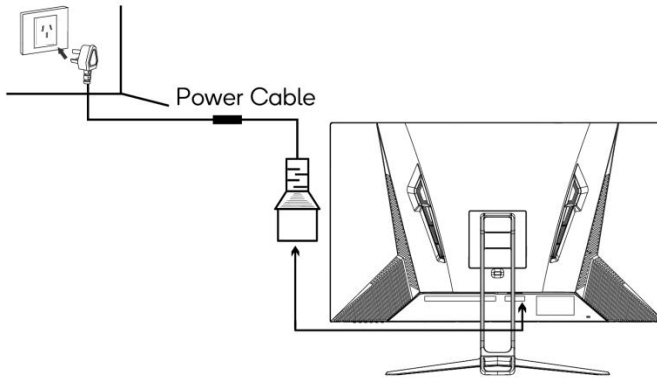


Audio In

 Connect an audio cable to the 3.5mm audio port on the monitor (Audio In) and the 3.5mm audio port on your computer.

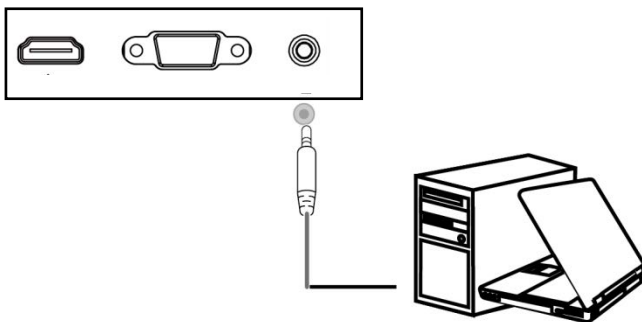


HDMI

 Connect an HDMI cable from the computer's display output to the monitor's display input.

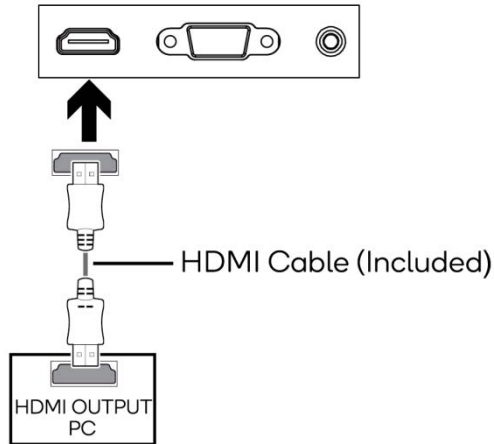

VGA

 Connect a VGA cable from the computer's display output to the monitor's display input.

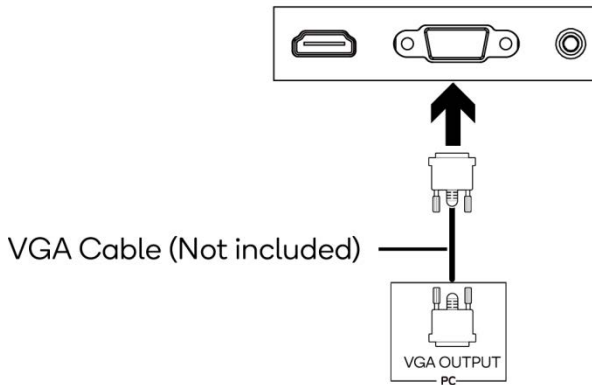


OPERATION

1. Connect the monitor to the input device via HDMI or VGA.
2. Connect the power cable to the monitor, then connect the other end directly to a power socket.
3. Use the power button to turn the monitor on.

Indicator Light

 The indicator light will illuminate green when the monitor is powered on.

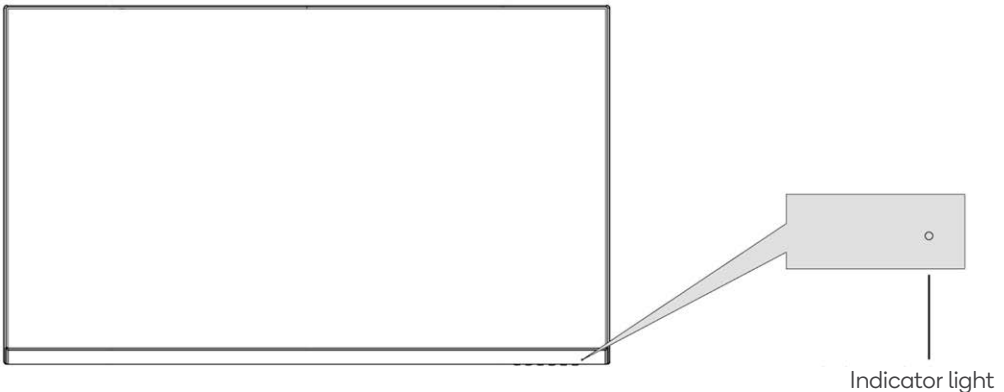

FreeSync

- In order to use this feature, ensure your hardware has FreeSync capability and the graphics drivers are fully up to date.
- After connecting, you may receive a prompt to enable the feature on your computer. If you do not receive the prompt, you may need to enable the function in your graphics card menu.
- See your graphics card manufacturer's documentation for instructions on how to turn on and/or enable FreeSync.

The On-Screen Display (OSD)

The OSD menu may be used to adjust your monitor's settings and appears on screen after turning on the monitor and pressing the "≡" button.

When using the monitor for the first time, settings will automatically adjust to optimal parameters according to your computer's configuration and parts etc.

1. Press "≡" to enter the OSD menu.

 
2. Press "∨" or "∧" to browse functions.

With the desired function highlighted, press "≡" to enter the sub-menu.

Press "∨" or "∧" to browse sub-menus, then press "≡" to highlight the desired function.

Press "∨" or "∧" to highlight an option, then press "≡" to confirm the settings and exit the current screen.

3. Press "↻" to exit the current screen.

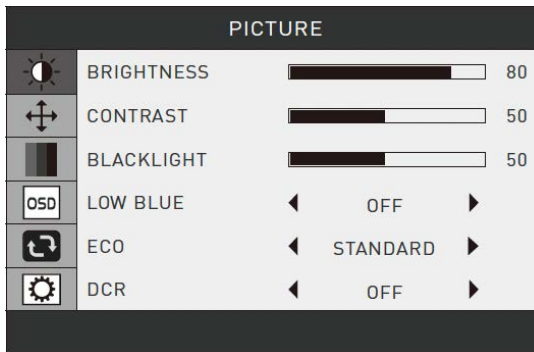

List of Functions

Main Menu	Sub-Menu	Options	Description
Brightness	Picture	~0-100	Adjust display brightness
	Contrast	~0-100	Adjust display contrast
	Blacklight	~0-100	Adjust display Blacklight
	Low blue	On	Enable/disable blue light reduction
		Off	
	ECO	STANDARD/ TEXT/GAME/ MOVIE/ FPS/RTS	Preset colour modes
DCR	On	Enable/disable dynamic contrast ratio	
	Off		
Image	Horizontal position	~0-100	Adjust video display area left to right (VGA only)
	Vertical position	~0-100	Adjust video display area up and down (VGA only)
	Clock	~0-100	Adjust display Clock
	Phase	~0-100	Adjust display Phase
	Aspect	Wide (16:9), 4:3	Adjust display Phase Aspect
	FreeSync	On/Off	Adjust display FreeSync On/Off


Colour	Warm mode	Red/green/blue	Adjust red/green/blue levels
	Cool mode	Red/green/blue	Adjust red/green/blue levels
	User mode	Red/green/blue	Adjust red/green/blue levels
	HDR mode	On/Off	Enable or disable HDR mode
OSD Setting	Language	English, 简体中文, 한국어, Русский, Español, Deutsch, Italiano, Français, Portugues, Turkce, Polski, Nederlands	Set OSD language
	OSD H-Position	~0-100	Adjust OSD horizontal position
	OSD V-Position	~0-100	Adjust OSD vertical position
	OSD Timer	5~60	Set how long the OSD remains open after last input
	Transparency	~0-100	Set OSD overall transparency

Reset	Image	None	Restore VGA image defaults
	Colour	None	Automatically configure VGA colour settings
	Reset	None	Restore factory defaults
	Power down	On	Enable/disable Power down function
		Off	
	Time count	10-90min	Adjust Time count
	OD	On (default)	Enable/Disable Overdrive
Off			
Misc	Signal source	VGA/HDMI	Adjust input source
	Mute	On	Enable or disable monitor speaker output
		Off	
Volume	-0-100	Adjust monitor speaker volume	

GAMEPLUS MODE


Gameplus

 Press “🕒” button to switch Gameplus modes. According to the needs of your game, choose the corresponding game icon. These game icons are primarily designed to optimize your aim during shooting games, though they can be used for other scenarios.

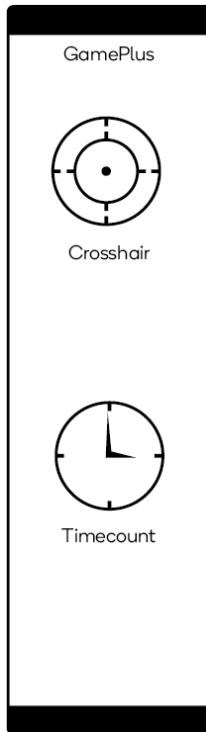

SPECIFICATIONS

Screen size	32
Aspect ratio	16:9
Brightness	280cd/m ² (typical)
Panel	VA
Resolution	1920 x 1080
Refresh rate	75Hz
Response time	10ms with Overdrive enabled (20ms typical)
Viewing angle	≥178°(H) / 178°(V)
Contrast ratio	3000:1
VESA mounting	100 x 100mm
Colours	16.7M
Signal input	HDMI 1.4 x 1, VGA x 1
Power	AC 100-240V~ 50/60Hz 1.1A
Speakers	YES
Power cable	YES
HDMI Cable	YES
Low Blue Light	YES
Flicker Free	YES
Dimensions (w. Stand)	714.4 x 231.6 x 536.4 (mm)
Dimensions (w/o Stand)	714.4 x 106.2 x 424 (mm)
Net weight	7.2kg
Gross weight	9.2kg

 

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com**

kogan.com