



Contents
English 1-7
Deutsch 8-14
Français 15-21
Español 22-27
Italiano 28-33
日本語 34-39
中文 40-45

First Start
Open the charging case lid and take out both earbuds. Then remove the protective film from the earbuds.
1. The earbuds will automatically pair to each other after being taken out from the charging case. LED indicator on each earbud flashes red and white, the second earbud flashes in white.
2. Activate Bluetooth on the device and choose "SOUNDPEATS Mini Pro HS" on Bluetooth list to pair.

ANC Mode
Place and hold the left earbuds for 1.5 second switch from Normal mode to ANC Pass through mode.
Reset
1. Check the pairing record from your device.
2. Place both earbuds into charging case. Press and hold both earbuds for 10 seconds. LED indicator red and white flashes, reset complete.

Product Diagram
Wearing
Touch Control
Touch ID: Auto Stop at the close lid and take out the earbuds.
Touch CF: Manual Pause and Play the MP3 for 1s.
Touch FS: Manual Play and Pause the MP3 for 1s.
Touch PA: Single tap left earbud.
Touch RA: Single tap right earbud.
Touch PS: Double tap left earbud.
Touch PR: Double tap right earbud.
Touch PC: Press and hold the left earbud for 1s.
Touch RC: Press and hold the right earbud for 1s.
Touch MC: Press and hold both earbuds for 1s.
Touch MS: Single tap left earbud.
Touch MR: Single tap right earbud.
Touch MS: Press and hold both earbuds for 1s.

Q&A
Q1: What does the LED of earbuds mean?
Q2: What does the LED on the charging case tell?
Q3: How to charge the case?

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

Q&A
Q1: What does the LED of earbuds mean?
Q2: What does the LED on the charging case tell?
Q3: How to charge the case?

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

First Start
Open the charging case lid and take out both earbuds. Then remove the protective film from the earbuds.
1. The earbuds will automatically pair to each other after being taken out from the charging case. LED indicator on each earbud flashes red and white, the second earbud flashes in white.
2. Activate Bluetooth on the device and choose "SOUNDPEATS Mini Pro HS" on Bluetooth list to pair.

ANC-Modus
Halten Sie die linke Ohrhörer für 1,5 Sekunden lang gedrückt, wechselt Sie von Normalmodus in Normal-Modus (ANC-Modus / ANC ON / Transparenzmodus / Pass through).
Zurücksetzen
1. Überprüfen Sie den Paarungs-Record von Ihrem Gerät.
2. Legen Sie beide Ohrhörer wieder in das Ladegerät und drücken Sie gleichzeitig beide Ohrhörer für 10 Sekunden lang gedrückt. LED-Indikator blinkt rot und weiß, das Zurücksetzen ist abgeschlossen.

Produktbeispiel Diagramm
Wearing
Touch Control
Touch ID: Auto Stop at the close lid and take out the earbuds.
Touch CF: Manual Pause and Play the MP3 for 1s.
Touch FS: Manual Play and Pause the MP3 for 1s.
Touch PA: Single tap left earbud.
Touch RA: Single tap right earbud.
Touch PS: Double tap left earbud.
Touch PR: Double tap right earbud.
Touch PC: Press and hold the left earbud for 1s.
Touch RC: Press and hold the right earbud for 1s.
Touch MC: Press and hold both earbuds for 1s.
Touch MS: Single tap left earbud.
Touch MR: Single tap right earbud.
Touch MS: Press and hold both earbuds for 1s.

Q&A
Q1: What does the LED of earbuds mean?
Q2: What does the LED on the charging case tell?
Q3: How to charge the case?

Fragen und Antworten
F1: Was bedeutet das LED der Ohrhörer?
F2: Was sagt das LED am Ladekasten?
F3: Wie lade ich den Ladekasten?

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

First Start
Open the charging case lid and take out both earbuds. Then remove the protective film from the earbuds.
1. The earbuds will automatically pair to each other after being taken out from the charging case. LED indicator on each earbud flashes red and white, the second earbud flashes in white.
2. Activate Bluetooth on the device and choose "SOUNDPEATS Mini Pro HS" on Bluetooth list to pair.

Mode ANC
Le mode normal (Normal Mode) / mode ANC (ANC ON) mode Normal (Pass through) / mode ANC (ANC ON / Transparence mode / Pass through).
Réinitialiser
1. Vérifier les informations d'appariement de votre appareil.
2. Placer les deux écouteurs dans le boîtier de charge et appuyer simultanément sur les deux écouteurs pendant 10 secondes. Les LED des écouteurs clignotent rouge et blanc, la réinitialisation est terminée.

Diagramme de Produit
Wearing
Touch Control
Touch ID: Auto Stop at the close lid and take out the earbuds.
Touch CF: Manual Pause and Play the MP3 for 1s.
Touch FS: Manual Play and Pause the MP3 for 1s.
Touch PA: Single tap left earbud.
Touch RA: Single tap right earbud.
Touch PS: Double tap left earbud.
Touch PR: Double tap right earbud.
Touch PC: Press and hold the left earbud for 1s.
Touch RC: Press and hold the right earbud for 1s.
Touch MC: Press and hold both earbuds for 1s.
Touch MS: Single tap left earbud.
Touch MR: Single tap right earbud.
Touch MS: Press and hold both earbuds for 1s.

Q&A
Q1: What does the LED of earbuds mean?
Q2: What does the LED on the charging case tell?
Q3: How to charge the case?

Questions et réponses
Q1: Que signifie le voyant lorsque les écouteurs sont en charge?
Q2: Que signifie le voyant lorsque le boîtier de charge est en charge?
Q3: Comment charger le boîtier de charge?

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

First Start
Open the charging case lid and take out both earbuds. Then remove the protective film from the earbuds.
1. The earbuds will automatically pair to each other after being taken out from the charging case. LED indicator on each earbud flashes red and white, the second earbud flashes in white.
2. Activate Bluetooth on the device and choose "SOUNDPEATS Mini Pro HS" on Bluetooth list to pair.

Mode ANC
Modo Normal (Normal Mode) / modo ANC (ANC ON) modo Normal (Pass through) / modo ANC (ANC ON / Transparencia modo / Pass through).
Reiniciar
1. Verificar la información de emparejamiento de su dispositivo.
2. Colocar los auriculares en el estuche de carga y presionar simultáneamente los dos auriculares durante 10 segundos. Las luces LED de los auriculares parpadearán rojo y blanco, se completará el reinicio.

Ejemplo de Producto
Wearing
Touch Control
Touch ID: Auto Stop at the close lid and take out the earbuds.
Touch CF: Manual Pause and Play the MP3 for 1s.
Touch FS: Manual Play and Pause the MP3 for 1s.
Touch PA: Single tap left earbud.
Touch RA: Single tap right earbud.
Touch PS: Double tap left earbud.
Touch PR: Double tap right earbud.
Touch PC: Press and hold the left earbud for 1s.
Touch RC: Press and hold the right earbud for 1s.
Touch MC: Press and hold both earbuds for 1s.
Touch MS: Single tap left earbud.
Touch MR: Single tap right earbud.
Touch MS: Press and hold both earbuds for 1s.

Q&A
Q1: What does the LED of earbuds mean?
Q2: What does the LED on the charging case tell?
Q3: How to charge the case?

Preguntas y respuestas
P1: ¿Qué significa el indicador cuando los auriculares se están cargando?
P2: ¿Qué significa el indicador de la cubierta de carga cuando se está cargando?
P3: ¿Cómo cargar la tapa de carga?

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

First Start
Open the charging case lid and take out both earbuds. Then remove the protective film from the earbuds.
1. The earbuds will automatically pair to each other after being taken out from the charging case. LED indicator on each earbud flashes red and white, the second earbud flashes in white.
2. Activate Bluetooth on the device and choose "SOUNDPEATS Mini Pro HS" on Bluetooth list to pair.

Modalità di connessione attiva del rumore
Ripristino
1. Controlla il record di associazione del tuo dispositivo.
2. Riposizionare entrambi gli auricolari nello stesso modo in cui sono stati inseriti nel caricabatterie.
3. Tenere premuti entrambi gli auricolari per 10 secondi. Le luci LED dei due auricolari lampeggiano rosso e bianco, il ripristino è completo.

Schema del Prodotto
Wearing
Touch Control
Touch ID: Auto Stop at the close lid and take out the earbuds.
Touch CF: Manual Pause and Play the MP3 for 1s.
Touch FS: Manual Play and Pause the MP3 for 1s.
Touch PA: Single tap left earbud.
Touch RA: Single tap right earbud.
Touch PS: Double tap left earbud.
Touch PR: Double tap right earbud.
Touch PC: Press and hold the left earbud for 1s.
Touch RC: Press and hold the right earbud for 1s.
Touch MC: Press and hold both earbuds for 1s.
Touch MS: Single tap left earbud.
Touch MR: Single tap right earbud.
Touch MS: Press and hold both earbuds for 1s.

Q&A
Q1: What does the LED of earbuds mean?
Q2: What does the LED on the charging case tell?
Q3: How to charge the case?

Domande e risposte
Domanda 1: Cosa significa il LED degli auricolari?
Domanda 2: Cosa significa il LED sulla custodia di ricarica?
Domanda 3: Come caricare la custodia?

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

First Start
Open the charging case lid and take out both earbuds. Then remove the protective film from the earbuds.
1. The earbuds will automatically pair to each other after being taken out from the charging case. LED indicator on each earbud flashes red and white, the second earbud flashes in white.
2. Activate Bluetooth on the device and choose "SOUNDPEATS Mini Pro HS" on Bluetooth list to pair.

イヤホンモードの切り方
リセット
1. 接続記録を確認してください。
2. イヤホンケースに両イヤホンを入れ、同時に両イヤホンを10秒間押し続けてください。イヤホンのLEDが赤と白で点滅し、リセットが完了します。

製品図解
Wearing
Touch Control
Touch ID: Auto Stop at the close lid and take out the earbuds.
Touch CF: Manual Pause and Play the MP3 for 1s.
Touch FS: Manual Play and Pause the MP3 for 1s.
Touch PA: Single tap left earbud.
Touch RA: Single tap right earbud.
Touch PS: Double tap left earbud.
Touch PR: Double tap right earbud.
Touch PC: Press and hold the left earbud for 1s.
Touch RC: Press and hold the right earbud for 1s.
Touch MC: Press and hold both earbuds for 1s.
Touch MS: Single tap left earbud.
Touch MR: Single tap right earbud.
Touch MS: Press and hold both earbuds for 1s.

操作方法
Q1: イヤホンの点滅、イヤホンのLEDインジケータの点滅の意味と操作方法
Q2: イヤホンケースのLEDインジケータの点滅の意味と操作方法
Q3: イヤホンケースの充電方法

Q&A
Q1: イヤホンの点滅、イヤホンのLEDインジケータの点滅の意味と操作方法
Q2: イヤホンケースのLEDインジケータの点滅の意味と操作方法
Q3: イヤホンケースの充電方法

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

First Start
Open the charging case lid and take out both earbuds. Then remove the protective film from the earbuds.
1. The earbuds will automatically pair to each other after being taken out from the charging case. LED indicator on each earbud flashes red and white, the second earbud flashes in white.
2. Activate Bluetooth on the device and choose "SOUNDPEATS Mini Pro HS" on Bluetooth list to pair.

ANC/ANCモード、ANC/ANCモード (ANC ON) / 透過モード (Pass through) / ANCモード (ANC ON / 透過モード (Pass through)).
リセット
1. 接続記録を確認してください。
2. イヤホンケースに両イヤホンを入れ、同時に両イヤホンを10秒間押し続けてください。イヤホンのLEDが赤と白で点滅し、リセットが完了します。

製品図解
Wearing
Touch Control
Touch ID: Auto Stop at the close lid and take out the earbuds.
Touch CF: Manual Pause and Play the MP3 for 1s.
Touch FS: Manual Play and Pause the MP3 for 1s.
Touch PA: Single tap left earbud.
Touch RA: Single tap right earbud.
Touch PS: Double tap left earbud.
Touch PR: Double tap right earbud.
Touch PC: Press and hold the left earbud for 1s.
Touch RC: Press and hold the right earbud for 1s.
Touch MC: Press and hold both earbuds for 1s.
Touch MS: Single tap left earbud.
Touch MR: Single tap right earbud.
Touch MS: Press and hold both earbuds for 1s.

Q&A
Q1: イヤホンの点滅、イヤホンのLEDインジケータの点滅の意味と操作方法
Q2: イヤホンケースのLEDインジケータの点滅の意味と操作方法
Q3: イヤホンケースの充電方法

Q&A
Q1: イヤホンの点滅、イヤホンのLEDインジケータの点滅の意味と操作方法
Q2: イヤホンケースのLEDインジケータの点滅の意味と操作方法
Q3: イヤホンケースの充電方法

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not properly installed and used, may cause interference to radio communication. It is your responsibility to ensure that your installation, use, and operation of this equipment does not cause such interference.