 
### USER GUIDE

# kugan.com




## APPLE COMPATIBLE PENCIL

WITH MAGNETIC ATTACH AND CHARGING

NBAPCLMGWSA

### OVERVIEW

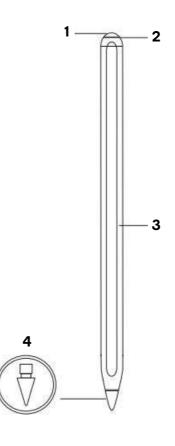


- 1 Button
- 2 Indicator
- **3** Magnetic surface
- 4 Detachable nib

### OPERATION
 
#### **Powering On**

Press and hold the button on the top of the pencil until the indicator illuminates. The pencil is now ready for use. Press and hold the button on the top of the pencil until the indicator turns off.



Button

#### Connecting the Pen to iPad

- 1. On your iPad, open the Settings menu and tap "Bluetooth" to ensure Bluetooth is enabled.
- 2. Find the device named "RDpen" and tap to connect the pencil.




**3.** Long press the screen to add a battery widget to display the remaining power of the pen in real time.





#### Charging

The pen can be charged by attaching the magnetic surface to the side of the iPad under the volume button. The battery level can be monitored using the battery widget.

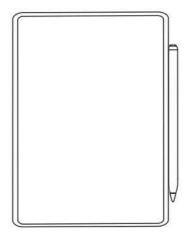


**Note:** Adsorption charging only available on iPad mini (Series 6) iPad Pro, Pad Air (Series 4) & iPad Air (Series 5).

#### Indicator Light

Operating	Solid light green	Battery level 100%-70%
	Solid light blue	Battery level 70%-20%
	Solid light red	Battery is less than 20%
Recharge	Flashing green	Battery level 100%-70%
	Blue light flashing	Battery level 70%-20%
	Flashing red	Battery is less than 20%

#### **Replacing the Nib**

To remove the nib, rotate the nib in a counter-clockwise direction. To replace the nib, rotate the nib in a clockwise direction until it is firmly in place.

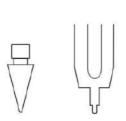



Disassembled

Installed

### SPECIFICATIONS

Material	AE
Input	5V
Tilt pressure feeling	Ye
Bluetooth	Ye
Pen head	Re

ABS 5V-0.2A Yes Yes Replaceable nib

iPad Mini (Series 6) A2567/A2568/A2569

iPad Air (Series 4) A2316/A2324/A2325/A2072

iPad Air (Series 5) A2588/A2589/A2591

**iPad Pro 11"** A1980/A2013/A1934/A1979

iPad Pro 11" (Series 2) A2228/A2068/A2230/A2231

iPad Pro 11" (Series 3) A2377/A2301/A2459/A2460

**iPad Pro12.9" (Series 3)** A1983/A2014/A1895/A1876

iPad Pro 12.9" (Series 4) A2229/A2069/A2232/A2233

iPad Pro 12.9" (Series 5) A2378/A2379/A2461/A2462

Applicable models

#### Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com** 

### kugan.com