



USING SWAMI ON THE COURSE:


When you arrive at the golf course, turn on SWAMI by holding the  button until "IZZO GOLF" appears on the screen.

SWAMI will count off seconds until it locates satellites. "LOCATING SAT" will also appear at the bottom the screen.

Once the satellites are located, SWAMI 3000 will find your course. "FINDING GC" will appear at the bottom of the screen. When the course is found, the name of the course will appear at the bottom of the screen and the distance (in yards) to the center of the green on hole No. 1 will show.

- If the wrong course is found, press the  button once. "COURSE MODE" will appear at the bottom of the screen. Then press the  or  button to find the correct course. Press the  button again to return to yardage mode.

Press the  or  button to move from hole to hole. The hole number will appear on the left side of the screen. The default distance is set to the center of the green.

When you're on a hole, press (but don't hold) the  button to toggle distance between the Front, Center and Back of the green (Front, Center or Back icons are on the right side of the screen).

Turn off your SWAMI by pressing the  button until "SHUT DOWN" appears on the screen.

TROUBLESHOOTING:





If your SWAMI appears to be unresponsive it may be caused by a temporary software issue. If this is the case, your unit will shut itself off within 15-20 seconds. Restarting SWAMI should solve the issue. If you have any other questions or concerns, please call 1-800-777-7899 or go to IZZO.com.

USING SWAMI ON THE COURSE:


When you arrive at the golf course, turn on SWAMI by holding the  button until "IZZO GOLF" appears on the screen.

SWAMI will count off seconds until it locates satellites. "LOCATING SAT" will also appear at the bottom the screen.

Once the satellites are located, SWAMI 3000 will find your course. "FINDING GC" will appear at the bottom of the screen. When the course is found, the name of the course will appear at the bottom of the screen and the distance (in yards) to the center of the green on hole No. 1 will show.

- If the wrong course is found, press the  button once. "COURSE MODE" will appear at the bottom of the screen. Then press the  or  button to find the correct course. Press the  button again to return to yardage mode.

Press the  or  button to move from hole to hole. The hole number will appear on the left side of the screen. The default distance is set to the center of the green.

When you're on a hole, press (but don't hold) the  button to toggle distance between the Front, Center and Back of the green (Front, Center or Back icons are on the right side of the screen).

Turn off your SWAMI by pressing the  button until "SHUT DOWN" appears on the screen.

TROUBLESHOOTING:

If your SWAMI appears to be unresponsive it may be caused by a temporary software issue. If this is the case, your unit will shut itself off within 15-20 seconds. Restarting SWAMI should solve the issue. If you have any other questions or concerns, please call 1-800-777-7899 or go to IZZO.com.