

## Package Content



①



②



③



④



⑤




⑥

## Specifications

Bluetooth profile	5.0
Maximum Working Range	10m (without obstacle)
Play Time	About 4 hours
Earbuds Charging Time	About 2.0 hours
Charging Case Charging Time	About 2.0 hours
Charging Case Recharge Earbuds	4times
Dimension(L * W * H)	27.7*20.8*24.9mm (earbud)

## Product Diagram

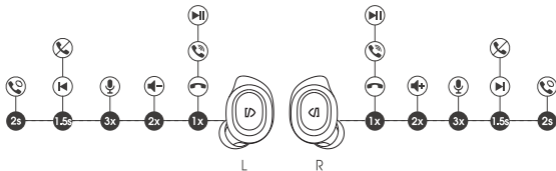

## Touch Control

Power on	<p><b>Automatically:</b> Take out the earbuds from charging case</p> <p><b>Manually:</b> Press and hold the multifunction button for 1.5s</p>
Power off	<p><b>Automatically:</b> Place the earbuds back into the charging case</p> <p><b>Manually:</b> Press and hold the multifunction button for 8s</p>
Volume-	Double-click the multifunction button of the left headset
Volume+	Double-click the multifunction button of the right headset
Previous Track	Press and hold the multifunction button of the left headset for 1.5s

Next Track	Press and hold the multifunction button of the right headset for 1.5s
Play/Pause	Press the multifunction button
Answer/ Hang Up Phone Call	Press the multifunction button
Reject Phone Call	Press and hold the multifunction button for 1.5s
Switch Between Two Active Calls	Press and hold the multifunction button for 2.0s
Enter Pairing Mode Manually	With the earbuds off, press and hold the multifunction button for 5s
Activate the voice assistant	Triple-click the multifunction button of any headset

## Wearing the earbuds

1. Identify the left and right earbuds.
2. Rotate the earbuds, and adjust to and the best angle.
3. Make sure the ear fins fit your cymba conchae.
4. Make sure the ear tip seals in the ear canal.



## Getting Started

### Pairing & Re-pairing

1. Take both earbuds out of the charging case while the case is with enough power left. The left and right earbuds will pair to each other at first with a prompt suggests successfully connected. After this, the LED on the left earbud stays on, and right earbud LED flashes in red and white alternately with a voice prompt "Pairing" indicating the earbuds enter pairing mode.
2. "SOUNDPEATS TrueFree 2" will show up on the Bluetooth list, click it to connect. You will hear a voice prompt "connected" from right earbud when the earbuds connect with your device successfully.
3. SOUNDPEATS TrueFree 2 Bluetooth earbuds can remember previously paired devices. When you make the second connection, simply activate the Bluetooth in your device, take out both earbuds from the charging case. They will connect to each other, and reconnect to your device automatically. If the earbuds don't automatically connect to your device, please activate the Bluetooth in your device and hit "SOUNDPEATS TrueFree 2" on the Bluetooth list.
4. Mono mode: after SOUNDPEATS TrueFree 2 is paired successfully, both the left earbud and the right earbud can be used separately.

## Note:

If you want to change the pairing device in the connected status, you can have it enter pairing mode directly just by a long press for the multifunction button for 5s when the headset is off.

 
## Reset

Try the following steps to reset if you fail to build connection between two earbuds or between earbuds and device:

1. Clear pairing record between the earbuds and all your devices.
2. Place back both earbuds into the charging case and ensure they're in charging status. Then long press the multifunction button of both earbuds for 10s until the LED light of both earbuds flash white twice. Reset is complete.

## Charging

SOUNDPEATS TrueFree 2 Bluetooth earbuds are equipped with a charging case which is not only a charging dock to charge the earbuds, but also a carrying case. With a built-in rechargeable battery, the charging case can provide 4 times full charge for the earbuds (both left and right).



### Charging the earbuds

The earbuds are partially charged at the factory. Please make sure they are fully charged before first use.

1. Put the earbuds into corresponding charging docks, make sure the charging contactors are match.
2. The LED indicator will turn red when it starts charging.
3. The red LED indicator will turn off when the earbuds are fully charged.

## Charging the case

When the charging case is in low battery level, the last white led indicator flashes, please recharge the case:

1. Connect the charging port with Type-C charging adapter or computer Type-C port.(current less than 5V 1A)
2. Please charge the earbuds at least once every 3 months when not in use for a long time.

## Warranty

We warrant this device 12 MONTHS from date of the original purchase for manufacturer defects.

✉ [support@soundpeatsaudio.com](mailto:support@soundpeatsaudio.com)

🌐 [www.soundpeatsaudio.com](http://www.soundpeatsaudio.com)

Please scan QR code to know the PDF user manual.



<https://soundpeatsaudio.com/downloads/>

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.