

kogan

MU \ h70ouU °

USER MANUAL



Disposal



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact your local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater.

IMPORTANT SAFEGUARDS

PLEASE READ CAREFULLY

When using an electric appliance, basic precautions should always be followed, including the following:


READ ALL INSTRUCTIONS BEFORE USING THIS STEAM CLEANER

WARNING – BE CAUTIOUS TO AVOID SCALDING

SAVE THESE INSTRUCTIONS

KEY FEATURES OF THE FOLDING MOP

- A) HANDLE
- B) TRIGGER
- C) REGULATING KNOB
- D) WATER TANK
- E) FILTER
- F) BODY
- G) LED
- H) FOLDING/UNFOLDING BUTTON
- I) POWER CORD
- J) HEAD
- K) MICROFIBER CLOTH PAD
- L) GLIDER
- M) MEASURING CUP
- N) SMALL SCREW
- O) UPPER CORD WRAP
- P) UNDER CORD WARP

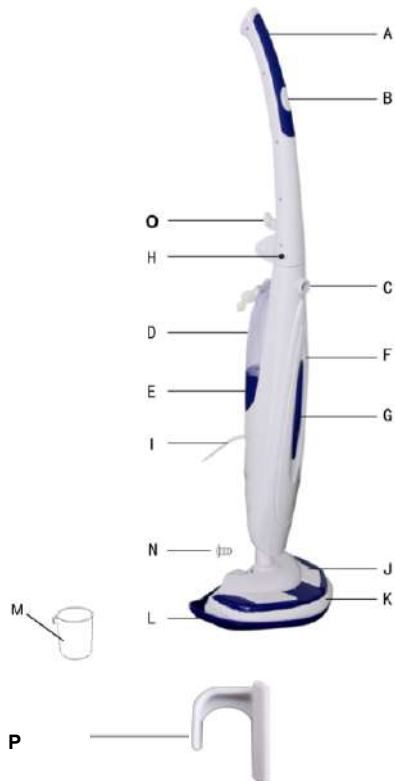

The following information is provided for service by a qualified electrician only:

Rated voltage: 100~120V, 60Hz, 1500W

220~240V, 50Hz, 1500W

CAUTION - To reduce the risk of fire, electric shock, or injury:

1. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
2. Check that the main voltage corresponds to the voltage indicated on the rating label, see specifications as below:
100~120V, 60Hz, 1500W
220~240V, 50Hz, 1500W
3. This product is designed for domestic use only.
4. Do not use outdoors.
5. Do not leave the Folding Mop unattended while switched on. Turn off the switch and unplug the electrical cord when not in use and before servicing.
6. Do not allow to be used as a toy. Close attention is necessary when used near children, pets or plants.
7. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
8. Young children should be supervised to ensure that they do not play with the appliance.
9. Never direct steam towards people, animals, plants, or equipment containing electrical components, such as interior ovens.
10. Do not immerse the Folding Mop into water or other liquids.
11. Do not use with damaged cord or plug. If the Folding Mop is not working as it should, has been dropped, damaged, left outdoors, or immersed in water, return it to the distributor before continuing use. If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person to avoid a hazard.
12. Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
13. Never force the plug into an outlet.
14. Do not use extension cords or outlets with inadequate current carrying capacity.

15. Unplug the appliance after use and before carrying out user maintenance on the appliance. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
16. Do not handle plug or Folding Mop with wet hands or operate without shoes.
17. Do not insert any objects into openings. Do not use with any opening blocked.
18. Do not use without floor cloth in place. Do not use without water in the water tank.
19. When using on stairs use extra caution.
20. Store your Folding Mop indoors in a cool, dry area.
21. Keep your work area well lighted.
22. Never put any cleaning detergents into the Folding Mop. This will make the operation unsafe and damage the unit.
23. Never block the steam openings of the product or place it on a soft surface, where the steam openings may be blocked. Keep the steam openings free of lint, hair etc..
24. Use only as described in this manual. Use only manufacturer's recommended accessories.

This appliance must be grounded. Use only the proper type outlet when plugging in the appliance, do not attempt to override the ground wire feature.

Thank you and congratulations for choosing the Folding Mop. The Folding Mop is a new way of cleaning that is effective and far more hygienic than conventional methods. The Folding Mop achieves a high degree of hygienic and cleansing power by converting water into steam using a microfiber floor cloth enhancing absorbency. When contact is made with floor surfaces, dirt and grime can be eliminated in a matter of seconds.

Since the Folding Mop uses the active power of steam without the use of detergents or soap, it is environmentally friendly.

When used correctly the Folding Mop can kill dust mites and some types of bacteria. To disinfect a specific area, position the steamer over the area for a minimum of eight seconds. The steam temperature will reach to approximately 90-100°C (194-212°F). Use this procedure to disinfect floors in bathrooms, showers, around kitchen counters, pet sleeping quarters, etc.

INSTRUCTIONS FOR USE

The Folding Mop is designed to thoroughly clean floor surfaces, such as marble, ceramic, stone, linoleum, sealed hardwood floors and parquet.

WARNING: On surfaces that have been treated with wax, the wax may be removed by the heat and steam action. Do not use on unsealed wood floors or let unit stand on any wood floor for an extended period of time. This could cause the wood grain to rise. When using on vinyl, linoleum or any other heat sensitive floors, use extra caution. Too much heat can melt down glue in the flooring. It is therefore recommended that a sample cleansing be carried out on an isolated area of the floor. It is also recommended that you check the use and care instructions of the surface from the floor manufacturer to ensure suitability to steam cleaning.

Folding Mop uses tap water. Residents in areas with hard water should use distilled water for better performance.

HOW TO ASSEMBLE AND USE

- 1) Attach head to body.
- 2) Secure head with the small screw and the under cord warp if you like, until it is fully tightened.



3) Make the folding handle to be straight, no screw needed.



4) Place the Microfiber Cloth Pad or other pads (optional item) onto the mop head.

Note: Microfiber Cloth is washable while other pads (optional items) may intend for one-time use.



5) Fasten the Microfiber Cloth Pad by pulling the cord while pressing on Toggle.

6) When using Folding Mop on carpets, place the mop head (with microfiber cloth or other pads in place) over the Carpet Glider.



NOTE: Do not operate without either Microfiber Cloth or other pads (optional item) in place.

7) To remove the Water tank push it up and detach from the body as shown below.



8) Please pour two measuring cups of water into the Water tank (The MAX is 580ml/20oz; do not try to over fill).

9) To remove the Water Filter push it up and detach from the body.



10) Twist the Cord Wrap to unwrap the Power Cord completely and plug into a grounded outlet.

11) When plugged in, the LED light located on the front of the Folding Mop body will be red. After 20-25 seconds, it means the mop is ready to emit steam. To release steam, press the trigger located on the handle, and the unit will start releasing steam. To stop releasing steam, press the trigger again.

12) Slowly pass over surface to be cleaned. It is recommended to sweep or vacuum floor prior using the Folding Mop.

13) Rotate the regulating knob to control the flow of steam



NOTE: It is recommended that another high wattage appliance is not operated on the same circuit to avoid a circuit overload.

CAUTION: To sanitize an area of your floor, leave the Folding Mop over area for a minimum of 8 seconds, but no longer than 15 seconds. Leaving the Folding Mop in a stationary position for a longer period than recommended may cause the build up of a pale residue. This residue can be removed by using a decalcifying product or with a few drops of vinegar. (See troubleshooting guide)

14) When the Folding Mop stops emitting steam, this will occur after approximately 20 minutes of use, turn off the Folding Mop and simply remove the Water tank, refill, and then again turn on and continue cleaning.

WARNING: NEVER run the Folding Mop without water. NEVER direct steam at any person or animal. Use the Folding Mop on sealed hard floor only.

15) When you finish your cleaning, unplug Power cord from outlet, empty the Water tank, carefully remove the cloth Pad from the head, wind Power Cord around the Cord Wrap and store it upright in a dry area or hang by the storage hook.



CAUTION: The Cloth Pad may be very hot. Not for space heating purpose.

CLEANING AND MAINTENANCE

CAUTION: Prior to cleaning or maintenance isolate the unit by removing the cord from the power socket. Do not immerse the unit in water.

- 1) Microfiber Cloth Pad can be machine washed in hot water.
- 2) Wipe the steamer with a soft cloth.

The Folding Mop should only be used with its own specially developed floor cloths and Filter (spare Cloth Pads and Filters are available from your retailer).

TROUBLESHOOTING GUIDE

CAUTION: Prior to troubleshooting isolate the unit by removing the cord from the power socket.

Problem

Solution

LED is not on.

Ensure the Folding Mop power cord is correctly plugged into power outlet and power trigger is turned on. Ensure circuit breaker is operational. Try operating the Folding Mop from another power outlet.

The Folding Mop will not produce steam.

Ensure the water tank has correct level of water.

The issue also occurs when a vacuum is created by the mop being started with no water in the tank. Please leave unit for 2 - 3 minutes, refill the tank and try again. To avoid this issue, please always turn unit on with water in the tank ready to go.

Pale residue left on the floor.

Caused by leaving the Folding Mop in the same position for too long. Can be removed with household white vinegar or a decalcifying product. Alternatively reheat the area for one minute and residue should be removed.

CAUTION: Do not overheat area.