

SAVE THESE INSTRUCTIONS

TROUBLESHOOTING


There are several things to look for if your trimmer fails to operate:

1. Be sure the trimmer is turned ON.
2. Make sure that the battery is properly placed in the battery compartment. Test the battery to be sure it is working.
3. Check the blades to see if they are clogged with hair clippings; if so, use a cleaning brush to remove hair.
4. If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

1. Remove the battery cover at the back of the unit by pulling straight down.
2. Being careful not to bend the clips, insert the negative end of the battery first, so it will slip easily into position.
3. Return the battery cover to its original position by pushing it into place.
4. To use your trimmer, push ON/OFF switch upward to ON position.
5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.
6. Always purchase the correct size and grade of battery most suitable for the intended use.
7. Replace the battery once it is no longer functional.
8. Clean the battery contacts and also those of the device prior to battery installation.
9. Ensure the batteries are installed correctly with regard to polarity (+ and -).

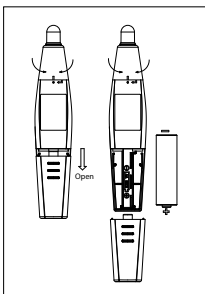

10. Remove batteries from equipment that is not to be used for an extended period of time.
11. Remove used batteries promptly.
12. Store unused batteries in their original packaging, away from metal objects that could short-circuit them. Never short-circuit batteries.
13. Never dispose of batteries in fire, except under conditions of controlled incineration. Failure to observe this precaution may result in an explosion. Never attempt to recharge primary batteries as this may cause leakage, fire, or explosion.
14. This appliance is not a toy. Keep away from children.

***The NE150N requires 1 AA battery (not included).** We recommend using alkaline batteries in your trimmer because they last longer. If you are not going to use your trimmer for a long period of time, or if the battery is dead, remove the battery from the unit. This will increase the life of your trimmer.

TAKING CARE OF YOUR TRIMMER




BLADE CARE

Because the trimmer blades are precision made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take a cleaning brush and brush away any loose hair that has collected in the blades.

TO CLEAN YOUR TRIMMER

Make sure trimmer is off.

1. To remove the trimmer head for cleaning, turn the head counterclockwise until the "I" mark aligns with the "arrow" mark, then lift the head gently (Fig. 1).
2. Only rinse the head under water (Fig. 2). For proper functioning of the unit, the handle cannot touch or be immersed in water.
3. After cleaning, make sure to shake dry the head before replacing it onto the body.
4. To reassemble the head onto the body, align the "I" mark on the head with the "arrow" mark on the body and then turn clockwise until the "I" mark aligns with the "circle" mark on the body (Fig. 3).



TO TRIM YOUR NOSE HAIR

Turn unit on. Gently insert trimmer head into nostril. Gently move trimmer in and out of the nostril as you rotate the trimmer in a circular motion around the nostril opening. Avoid inserting the trimmer more than ¼" to ensure safe trimming.

TO TRIM YOUR EAR HAIR

Turn unit on. Gently insert trimmer head no more than ¼" into outer ear canal. Gently move trimmer in and out of the outer ear and rotate trimmer in a circular motion around the ear canal opening. Guide the trimmer around the outer surface of ear to trim protruding hairs. Never insert trimmer more than ¼" into ear canal.

NE150N NOSE/EAR TRIMMER



LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture. **ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. **IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at www.conair.com/registration

©2018 Conair Corp.
Service Center
 Conair Corporation
 Service Department
 7475 North Glen Harbor Blvd.
 Glendale, AZ 85307

18PG054449

IB-15740

NOSE AND EAR TRIMMER



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

CONAIR MAN

Respect the Ritual™

Model NE150N

GUARDE ESTAS INSTRUCCIONES

RESOLUCIÓN DE PROBLEMAS


Si el aparato no funciona correctamente:

1. Cerciérese de que el aparato está encendido.
2. Cerciérese de que la pila está debidamente instalada.
3. Cerciérese de que la pila no está agotada.
4. Revise las cuchillas; de ser necesario, límpielas, usando el cepillo de limpieza provisto.
5. Si esto no soluciona el problema, regrese el aparato a un centro de servicio autorizado (véase la información de garantía).

PARA USO DOMÉSTICO SOLAMENTE

INSTRUCCIONES DE OPERACIÓN

1. Para instalar la(s) pila(s) abra el compartimiento de la(s) pila(s) ubicado en la parte trasera del aparato.
2. Introduzca el polo negativo de cada pila primero, teniendo cuidado de no doblar las patas de contacto.
3. Cierre el compartimiento de la(s) pila(s).
4. Para encender el aparato, deslice el interruptor hacia arriba ("ON").
5. Para apagar el aparato, deslice el interruptor hacia abajo ("OFF").
6. No utilice pilas que no sean del tamaño ni de la potencia indicados para uso con este aparato.
7. Reemplace las pilas gastadas sin demora.
8. Limpie los contactos del aparato y los de las pilas antes de instalar estas.
9. Siempre respete los signos de polaridad (+/-) al instalar las pilas.

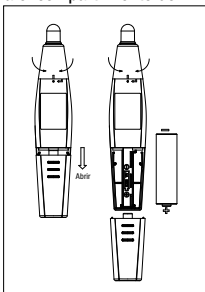

10. Saque las pilas si no va a usar el aparato por un largo período de tiempo.
11. Saque las pilas gastadas lo antes posible.
12. Guarde las pilas nuevas en su paquete original, lejos de objetos metálicos, los cuales pueden provocar un cortocircuito. Nunca cortocircuite las pilas.
13. Nunca tire las pilas al fuego, excepto mediante incineración controlada; esto puede causar una explosión. Nunca intente cargar pilas no recargables; esto presenta un riesgo de pérdida de electrolito, incendio o explosión.
14. Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

* El NE150N requiere 1 pila AA (no incluida). Le aconsejamos que utilice pilas alcalinas, las cuales son más duraderas. Saque la pila al final de su vida útil o si no va a usar el aparato por un largo período de tiempo; esto prolongará la vida útil del aparato.

MANTENIMIENTO DE SU CORTADORA



LIMPIEZA DE LAS CUCHILLAS

Las cuchillas de este aparato han sido diseñadas con precisión para un uso específico, y deben recibir un cuidado muy especial. Limpie las cuchillas después de cada uso, usando el cepillo de limpieza provisto.

INSTRUCCIONES DE LIMPIEZA

Cerciérese de que el aparato está apagado.

1. Para sacar el cabezal, gírelo en sentido antihorario hasta que la marca "1" coincida con la flecha (Fig. 1) y jale suavemente el cabezal.
2. Lave el cabezal en agua corriente (Fig. 2). No permita que el cuerpo del aparato tenga contacto con agua.
3. Después de limpiar el cabezal, sacúdalo para secarlo.
4. Vuelva a instalar el cabezal, haciendo coincidir la marca "1" con la flecha. Para sujetar el cabezal, gírelo en sentido horario hasta que la marca "1" coincida con el círculo (Fig. 3).



CÓMO CORTAR EL PELO EN LA NARIZ

Encienda el aparato. Introduzca delicadamente la punta del cabezal en la nariz. Mueva suavemente el aparato hacia dentro y fuera de la nariz, girándolo alrededor del orificio nasal. Nunca inserte el cabezal más de ¼ de pulgada (5 mm) dentro de la nariz.

CÓMO CORTAR EL PELO EN LAS OREJAS

Encienda el aparato. Introduzca delicadamente la punta del cabezal en la oreja, no más de ¼ de pulgada (5 mm) en el canal del oído. Mueva suavemente el aparato hacia dentro y fuera de la oreja, girándolo alrededor del canal del oído. Guíe el aparato alrededor de la superficie externa de la oreja para cortar pelos que sobresalen. Nunca inserte el cabezal más de ¼ de pulgada (5 mm) dentro de la oreja.

RECORTADOR PARA NARIZ/OREJAS NE150



GARANTÍA LIMITADA DE DOS AÑOS

(VÁLIDA EN LOS EE. UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si resulta ser defectuoso en materiales o mano de obra.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$3.00 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS, A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar su producto, visítenos en: www.conair.com/registration

©2018 Conair Corp.
Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

18PG054449

IB-15740

RECORTADOR PARA NARIZ/OREJAS



Manual de instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

CONAIR MAN

Respect the Ritual™

Modelo NE150N