


Ooma Battery Backup

From TalentCell




Quick Start Guide

Package Contents

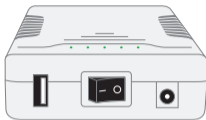

Power bank unit

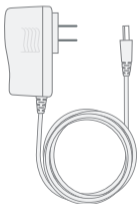

AC power adapter



USB power cable

Getting Started

STEP 1

Unplug Base Station Power Supply

Unplug the AC adapter that came with the Ooma Base Station and set it aside.

STEP 2

Plug Power Bank In

Plug the AC adapter included with the power bank into a power source. Connect the AC adapter to the power bank.

STEP 3

Connect Battery to Base Station


Connect one end of the included USB power cable to the power bank and the other to the Ooma Base Station power adapter. The battery backup's AC adapter should remain plugged into a power source.

STEP 4

Turn Power Bank On

Turn the power bank's power button to the | (ON) position. The power bank now acts as the Base Station's power supply as well as its battery backup.

Quick Reference

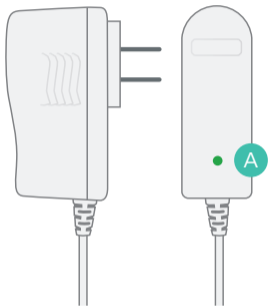


A Charging LED (AC adapter)

Lights up **red** when power bank is charging, lights up **green** when power bank is fully charged.

B LED Power Gauge

Show the battery's approximate power level. More LEDs indicates a higher power charge.

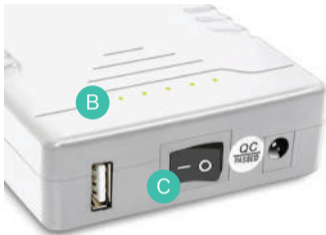

C Power Switch

Turn to the **I (ON)** position to use the power bank as a backup battery and the **O (OFF)** position to circumvent the power bank.

Warnings

- **Take care** to avoid exposure to extreme temperatures, fire, and water.
- **Do not** jostle or the power bank or subject it to undue force. **Do not** throw the power bank.
- **Store** the power bank in a cool, dry, indoor area.
- **Do not modify** or disassemble the power bank.
- **Ensure** that all cables are plugged in correctly and that they are inserted without force.
- **Use only the provided** AC adapter to charge the power bank.
- **If any liquid** from the appliance gets into your eyes, do not rub. Instead, rinse your eyes with water and consult a doctor immediately.

Contact Us

Please send any inquiries or comments concerning the TalentCell Battery Backup to service@talentcell.com

You can view other TalentCell products at www.talentcell.com