
# i-Caddie CLUB SUGGESTION SET-UP


To set up i-Caddie, you will first need to know your 7-iron distance in your preferred unit of measure (yards/meters). Based on that information, the proprietary firmware will then make club suggestions based on the distance you measure.

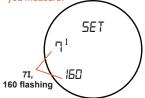


 To set your 7-iron distance, start with the LZ-i laser in the OFF position. HOLD the POWER button for 10 seconds to engage i-Caddie set up mode.

In the initial "**SET**" interface screen, "7I" and "160" icon will be flashing

2. While in the "SET" interface, HOLD the POWER button for an additional 3 seconds to toggle to the club distance setting. Tapping the POWER button will add (+) 1 yard/meter, tapping the MODE button will (-) 1 yard/meter.

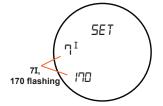

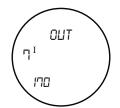

3. Once correct distance is set, *HOLD* the **POWER** button for 3 seconds to confirm. Once you see both icons flashing, tap the **POWER** button again to engage the "**OUT**" screen, then hold the **POWER** button an additional 3 seconds to return to the main screen.

To turn the i-Caddie club suggestion ON/OFF, simply **HOLD** the **Mode Button** for 5 seconds while on the main screen

# **SWAMI LZ-***i* LASER RANGEFINDER MANUAL




#### **RANGEFINDER DIAGRAM**

- A. Eye Piece
- B. Diopter Adjustment
- C. Power Button
- D. Mode Button
- E. Battery Door



# **LCD DISPLAY**

- A. Zero-In Aiming Circle
- B. P.A.T. Mode Indicator
- C. Unit of Measure
- D. Battery indicator
- E. Slope Adjusted Distance
- F. Angle of Incline/Decline
- G. i-Caddie suggested club

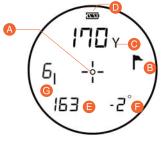

For more support visit: WWW.IZZO.COM


# **HOW TO USE**

- While looking through the Eye Piece, PRESS & RELEASE the Power Button. The rangefinder is now powered on.
- To focus/increase clarity, use the **Diopter Adjustment** by turning the **Eye Piece**.





 Continue looking through the Eye Piece, aim the Zero-In Aiming Circle at your intended target & PRESS the Power Button. The laser will fire and the Laser Indicator will appear to the right of the Zero-In Aiming Circle. The measurement will be displayed at the top of the LCD display.

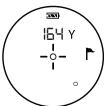

### **MEASUREMENT MODES**

- 1. Standard- Standard mode is recommended when measuring distances to larger objects. (Fig. A)
- 2. P.A.T TECHNOLOGY- P.A.T. mode is best used when measuring the distance to a flagstick or smaller objects. To toggle between Standard and P.A.T mode, PRESS the Mode Button once while the device is powered on. When P.A.T. mode is activated, the flagstick icon will appear on the LCD display (Fig. B).

Caution: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.





NOTE: While scanning in P.A.T. Mode, the measurement will only change when a shorter distance is measured. This is useful when measuring the distance to a flagstick when there are trees or other objects in the background.

- 3. Scanning To measure distances to multiple targets in succession, PRESS and RELEASE Power Button to power on. Then HOLD Power Button, the Laser Indicator Circle will flash and the laser will continuously fire. Measurements will change as you scan the landscape and change targets.
- 4. Unit of Measure- To change the unit of measure from yards to meters, start with the device powered on. Then HOLD the Mode Button for 10 sec. The unit of measure is indicated by a "Y" or "M" shown directly to the right of the distance displayed.

# **SLOPE FUNCTION**

The Slope Light on the side of the LZ-i has two positions:

- GREEN is showing: Slope function is enabled. Slope adjusted yardage will be displayed after every time the laser is fired. The laser is not tournament legal when the slope is enabled.
- RED is showing: Slope function is off. The laser is tornament legal when the slope is turned off.





To turn slope ON/OFF, simply **HOLD** the **Mode Button** for 3 seconds while on the main screen